AVerMedia®
AVerDiGi EH5116 Pro

User Manual

Aug. 2009

FCC NOTICE (Class A)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission Statement

NOTE- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Class A ITE

Class A ITE is a category of all other ITE which satisfies the class A ITE limits but not the class B ITE limits. Such equipment should not be restricted in its sale but the following warning shall be included in the instructions for use:

Warning -This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

European Community Compliance Statement (Class A)

This product is herewith confirmed to comply with the requirements set out in the Council Directives on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility Directive 2004/108/EEC.

Warning - This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures to correct this interference.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVerMedia be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

AVerMedia, being authorized AVerMedia Information, Inc. to use, is registered trademarks of AVerMedia TECHNOLOGIES, Inc. IBM PC is a registered trademark of International Business Machines Corporation. Macintosh is a registered trademark of Apple Computer, Inc. Microsoft is a registered trademark and Windows is a trademark of Microsoft Corporation. All other products or corporate names mentioned in this documentation are for identification and explanation purposes only, and may be trademarks or registered trademarks of their respective owners.

COPYRIGHT

© 2009 by AVerMedia INFORMATION, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of AVerMedia INFORMATION, Inc.



The mark of Crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.

Battery Safety Information

- Store the batteries in a cool dry place.
- Do not dispose of used batteries in domestic waste. Dispose of batteries at special collection points or return to point of sale if applies.
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the remote control. Battery leakage and corrosion can damage this remote control, dispose of batteries safely.
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.

WARNING

TO REDUCE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE

CAUTION

IF THERE IS ANY DAMAGE, SHORTAGE OR INAPPROPRIATE ITEM IN THE PACKAGE, PLEASE CONTACT WITH YOUR LOCAL DEALER. WARRANTY VOID FOR ANY UNAUTHORIZED PRODUCT MODIFICATION

NOTICE

- INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.
- THE INFORMATION CONTAINED HEREIN IS TO BE CONSIDERED FOR REFERENCE ONLY.

Table of Contents

Chapter 1 Introduction 1
1.1 Package Content 1
1.2 Features and Specifications 1
1.3 Front Panel 3
1.4 Back Panel 6
1.5 Setting Up the DVR Unit 7
1.5.1 Installing the Removable Hard Disk 7
1.5.2 Install Internal SATA Hard Disk 10
1.5.3 Connecting Devices 12
1.6 Sensor, Relay and RS485 pinhole allocation 13
1.6.1 Sensor Pin Definition 13
1.6.2 Relay Pin Definition 13
1.6.3 RS485 Pin Definition 14
1.7 Familiarizing the Remote Control Buttons 15
Chapter 2 Using the DVR Software 17
2.1 The Way to Operate DVR 17
2.1.1 First Time Using the DVR Unit 17
2.1.2 Using the Virtual Keyboard 18
2.2 Familiarizing the Buttons in Preview Mode 19
2.2.1 Setting Up and Using the Emap 20
2.2.2 Familiarizing the Buttons in PTZ Camera Controller 21
2.2.2.1 Setup the PTZ Camera 22
2.2.3 Using Event Log Viewer 23
2.3 Familiarizing the Buttons in Playback Mode 24
2.3.1 To Cut and Save the Portion of the Recorded Video 26
2.3.2 To Bookmark a Video Section 26
2.3.3 Using the Event Search 27
Chapter 3 Customizing the DVR System 28
3.1 System Setup 28
3.2 Camera Setup 33
3.2.1 To Setup IP Camera 33
3.2.2 To Setup Analog Camera 36
3.2.3 To Setup Camera from the Remote DVR 37
3.3 Recording Setup 38
3.3.1 Setup IP Camera Record Setting 38
3.3.2 Setup Analog Camera Record Setting 39
3.4 Network Setup 42

3.5 Schedule Setting 45
3.6 Backup Setup 46
3.6.1 Using QPlayer to Playback Backup Video 47
3.6.2 To Cut and Save the Portion of the Recorded Video 50
3.6.3 To Search Using the Visual Search 50
3.6.4 To Search Using the Event Search 50
3.6.5 To Search Using the Intelligent Search 51
3.7 Sensor Setting 52
3.8 Relay Setting 53
3.9 Alarm Setting 54
3.10 User Setting 58
Chapter 4 Using the UPC to Playback Backup File 60
4.1 Recommended system requirements 60
4.2 Installing the USB Playback Console 60
4.3 Familiarizing the Buttons in USB Playback Console 61
4.3.1 To Cut and Save the Portion of the Recorded Video 63
4.3.2 Playback DVR Recorded File from Hard Disk 63
4.3.3 Playback Backup File(*.dvr) 64
4.3.4 To Backup Recorded File 64
Chapter 5 ImageVerification 66
5.1 To Run the ImageVerification 66
Chapter 6 iEnhance 67
6.1 To Use iStable 68
Chapter 7 Using the Remote Programs 69
7.1 Familiarizing the Buttons in WebViewer 70
7.1.1 To Setup Remote System Setting 72
7.1.1.1 System Setting 72
7.1.1.2 Camera Setting 74
7.1.1.3 Record Setting 78
7.1.1.4 Network Setting 82
7.1.1.5 Alarm Setting 84
7.2 Familiarizing the Buttons in WebViewer PTZ 88
7.3 Familiarizing the Buttons in Remote Console 89
7.3.1 To Setup Remote Console Setting 90
7.3.2 Familiarizing the Buttons in PTZ Camera Controller 91
7.4 Using the Remote Playback 92
7.4.1 Familiarizing the Buttons in Local Playback 93
7.4.1.1 To Cut and Save the Wanted Portion of the Recorded Video 94
7.4.2 Familiarizing the Buttons in RealTime Playback 95
7.4.3 Familiarizing the Buttons in Download and Playback 97

Chapter 8 Using HandyViewer to Access DVR server 99
8.1 Using PDAViewer to Access DVR Server 99
8.1.1 To install PDAViewer thru ActiveSync 99
8.1.2 To install PDAViewer from the Internet 100
8.1.3 To Use the PDAViewer 101
8.1.4 To Playback in PDAViewer 102
8.2 Using JavaViewer to Access DVR Server 103
8.2.1 To install JAVAViewer from the DVR Server 103
8.2.2 To Use the JAVAViewer 104
Chapter 9 Web Tools 105
9.1 Dispatch Server 105
9.1.1 To Run Dispatch program: 105
9.2 Remote Setup 106
9.2.1 To Add DVR server 106
9.2.2 To Setup Remote System Setting 107
9.2.2.1 System Setting 107
9.2.2.2 Camera Setting 109
9.2.2.3 Record Setting 113
9.2.2.4 Network Setting 117
9.2.2.5 Alarm Setting 119
9.3 Remote Backup 123
9.3.1 To back up the recoded data from the DVR server: 123
Appendix A Registering Domain Name 126
Appendix B Network Service Port 127
Appendix C Using Functional Keys 128

Chapter 1 Introduction

1.1 Package Content

(1)

(2)

(3)

(4)

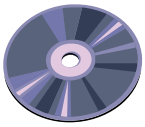

(5)

(6)

(7)

(8)

- ☐ (1) EH5116 Pro unit
- ☐ (2) Remote Control (batteries included)
- ☐ (3) Quick Installation Guide
- ☐ (4) Power Cord

  * The power cord varies depending on the standard power outlet of the country where it is sold.
- ☐ (5) Software CD (User Manual included)
- ☐ (6) SATA cable
- ☐ (7) Removable hard disk drawer accessories(keys and screws included)
- ☐ (8) Audio cable (16CH audio in/1CH audio out/1CH MIC in)

1.2 Features and Specifications

■ **Key Features**

- Embedded Linux
- 16CH IP and Analog camera inputs
- Recording up to 240fps(IP) or 120fps(Analog) at D1 resolution
- Individual adjust channel frame rate and resolution
- Supports all major brands of IP cameras within the industry
- Supports up to 5 Megapixel IP cameras and IP PTZ
- Instinctive and user-friendly Graphic User Interface (GUI)
- Local/server site preview and playback from DVR directly
- Multi-operation interface: mouse, keyboard, remote control, front panel, and remote setup
- Supports 1CH VGA output
- Multi-functional LCM display
- Supports up to 1 removable and 3 internal SATA HDD (storage space up to 4TB)
- Support Gigabyte LAN to ensure network connection speed

- Supports 16 sensors in / 4 relays out
- On-line live update for function upgrade
- Supports AVerDiGi RA4000e (optional)

- **Video Feature**
  - 16 composite video inputs (BNC Connectors) and/or 16 IP camera (selected IP cameras). Max. of 16 video feed per system
  - 16 audio input channels and 1 Audio Out
  - Video Format: NTSC/ PAL
  - Support static as well as dynamic de-interlacing for smoother graphics
- **Display**
  - IP display rate: 120/100fps at D1 resolution
  - Analog display rate: Real-time display
  - Auto scan with full screen display under 1, 4, 8, 9, 13, 16-camera display modes
  - Digital zoom in for specific area
  - Pan/Tilt/Zoom (PTZ) cameras supported
- **Recording**
  - Video streaming format: MJPEG and MPEG4
  - IP recording rate: 240/200fps at D1 resolution
  - Analog recording rate: 120/100fps at D1 resolution
  - Recording modes: Motion Detection/Continuous/Smart recording/Schedule recording (weekly based)
- **Search & Playback & Backup**
  - Local playback by channels, date and time
  - Powerful search: by date, time, camera, event, and log file
  - Time search by the scrolling bar to search according to specific data and efficiently find what you want
  - Bookmark: easily save links to particular locations of recorded data and play them directly from the saved links
  - Advanced Event Log Viewer according to your selection on event, operation, system and network events
  - Direct backup to DVR RW, USB devise and external HDD
- **Remote Monitoring**
  - Central Management System (CM3000)
  - Remote Console
  - WebViewer/ JavaViewe/ PDAViewer
  - iEnhance is the exclusive video enhancement software can adjust recorded data to the highest quality image
  - iStable is the video stabilizer software which can fix shaking and jolts impact on video with just one click
- **E-map**
  - Shows the positions of cameras, sensors, and relays
  - Store up to 8 different maps
- **Alarm notifications**
  - Single event of multiple events as alarm trigger conditions
  - HDD error
  - Launch E-map
  - Warning sound
  - Send Emails
  - Send files to FTP
  - Send SMS (requires SMS modem)
  - Send video to Central Management System

- PTZ preset point tracking
- Start recording
- Enlarge camera view

■ **Others**
- Support direct burn to DVD discs
- Optional for Rack ears

1.3 Front Panel

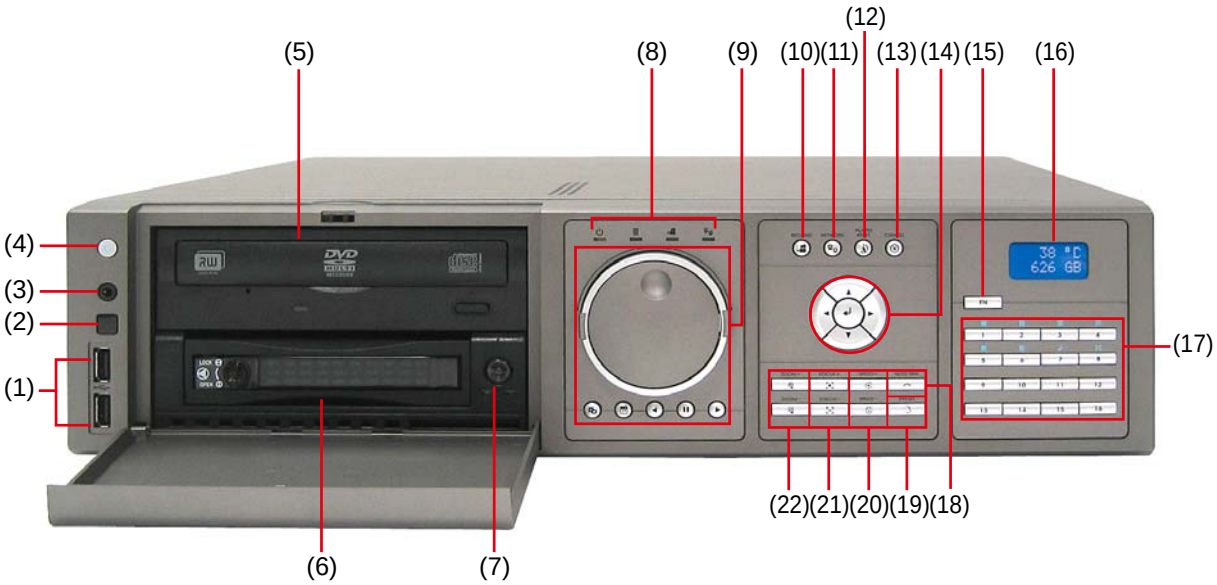

Name	Function
(1) USB 2.0 port	2 x USB 2.0 ports for connecting USB device, ex: USB pen drive, external hard disk, keyboard, mouse…and so on.
(2) IR Sensor	Receive signal from the remote control to operate the DVR unit
(3) IR Sensor port	For extended IR sensor cable connection(optional)
(4) Power	ON/OFF DVR unit
(5) DVR-ROM	To backup the recorded file to DVD±R/DVD±RW disk CD-R/RW is not supported.
(6) Removable Hard Disk Draw	To install hard disk for storage recorded video file
(7) Removable Hard Disk Power	Removable hard disk power switch
(8) Status LEDs	system status indicators: : System power indicator. Indicate running state of system. Lights when the system is running. : Removable hard disk indicator. Indicate running state of the hard disk. Lights when the HDD is running : Recording status indicator. Lights when the system is recording. : Lights when the DVR has been remote accessing.
(9) Playback button	Playback control button in playback mode

Name	Function
	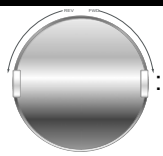 : Speed shuttle for adjusting reversed and forward (2x, 4x, 8x, 16x, 32x, or 64x) speed during playback. Turn left is reversed and turn right is forwarded. 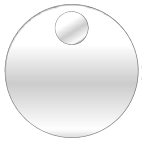 : To move to next or previous frame during playback. Turning left is to go back to one previous frame and turning right is to go forward one frame. : Switch to playback mode or preview mode : To select the playback date and time : To temporary stop playback : To reverse playback : To play the recorded video
(10)	To start recording video
(11)	To enable network connection
(12)	To reset alarm status
(13)	Cancel a selection
(14)	**In PTZ mode:** To move PTZ camera lens to left, right, up and down Confirm or make a selection
(15) FN	A functional key for multiple system control - Press FN to enable multiple function modes and the FN button will light up blue. - To exit multiple function modes, press FN again. FN + 1 : Switch to single screen display mode FN + 2 : Switch to QUAD display mode FN + 3 : Switch to 9 spilt screen display mode FN + 4 : Switch to 16 split screen display mode FN + 5 : Switch to one single and 7 spilt screen display mode FN + 6 : Switch to one single and 12 spilt screen display mode FN + 7 : To enable auto scan function FN + 8 : Switch to full screen display mode
(16) LCD Display	Display DVR system status such as temperature and operate status

Name	Function	
(17) Number button	1 ~ 16	- As a number key for entering password in playback and preview mode - Channel camera selection number in playback and preview mode - With FN button can switch to different screen display modes, only 1 ~ 8. - As a preset position with in PTZ control mode
(18) Auto Pan		To enable auto pan function
(19) Preset		To save the preset position of PTZ camera. Adjust the PTZ camera lens to the position that user wants, and then press + number button (1~16) to save the preset position. (see also Chapter 2.1.3.2) When the PTZ camera in PTZ mode, press preset position number button to move the PTZ camera to preset position.
		Without setup preset position, the preset button ( ) will not be functional when user presses.
(20) Speed + / Speed -		To speed up movement of PTZ camera lens To speed down movement of PTZ camera lens
(21) Focus + / Focus -		To focus in PTZ camera lens To focus out PTZ camera lens
(22) Zoom + / Zoom -		To zoom in view of PTZ camera lens To zoom out view of PTZ camera lens

1.4 Back Panel

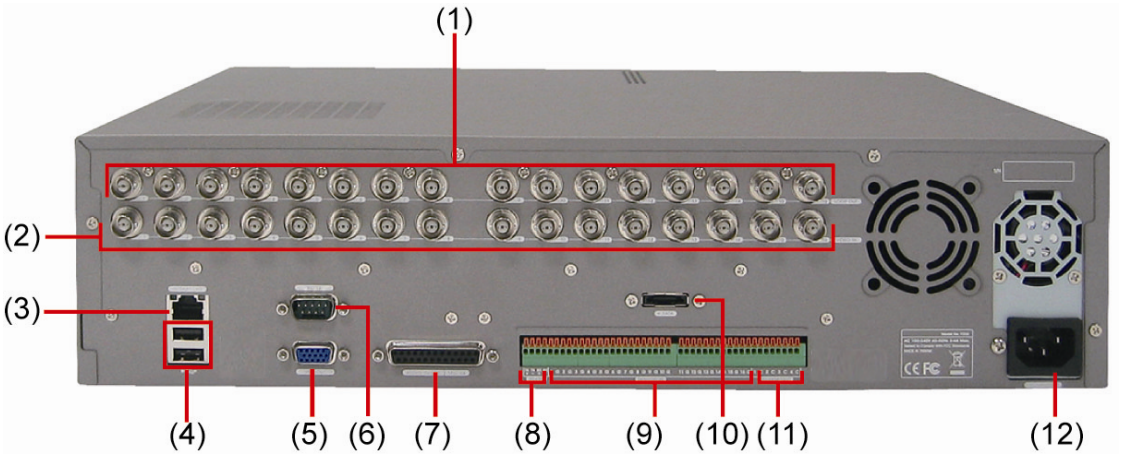

Name		Function
(1)	Video Loop Out	Output the video signal to a CCTV monitor. Only output one channel signal at a time.
(2)	CH1~ 16	Input the video camera signal and display it on channel 1~ 16
(3)	LAN Port	For Gigabit Ethernet connection
(4)	USB Port	For connecting USB interface devices.
(5)	VGA Out	Output the video signal to a CRT or LCD monitor
(6)	RS232 port	For future functions using
(7)	Audio In/Out/MIC In	- **Audio In:** Input the audio signal to audio input device such as microphone. - **Audio Out**: Output the audio signal to audio output device such as speaker. - **MIC In:** For 2-way microphone connection.
	The audio input and output device has its own power supply is necessary.	
(8)	RS485	For PTZ camera connection (also see 1.5.3)
(9)	Sensor In	Support up to 16 sensor devices
(10)	eSATA port	For connecting with eSATA RAID
(11)	Relay Out	Support 4 relay devices (Relay: 1A @ 125V AC/30V DC)
(12)	Power Plug	Connect the power cord into this port

1.5 Setting Up the DVR Unit

1.5.1 Installing the Removable Hard Disk

The DVR unit allows user to install one hard disk in the removable hard disk drawer.

For hard disk spec, please referring to http://www.avermedia.com/AVerDiGi/Product/ → Embedded Hybrid DVR/NVR → AVerDiGi EH5116 Pro → Hardware Recommendations

The “compatible hard disks” indicated in the above recommendation list only means that these commercially available hard disks were tested with AVerMedia® products and functioned well under normal operation conditions. AVerMedia® does not guarantee or provide warranties, explicitly, implied or statutory with respect to the reliability of the hard disk function or its compatibility. In no event AVerMedia® shall be liable for damages, with respect to any business interruption of clients, lost profits, loss of programs or other data on your information handling system or otherwise. This includes direct, indirect, incidental, special, or consequential damages, resulting from the incompatibility caused by the usage of these hard disks, even if AVerMedia® has expressly advised about the risk of such damages. The entire risk arising out of the use of any information attached here with is borne by the recipient.

Follow the illustrated instructions below to install the hard disk:

1. Unlock the removable hard disk drawer. The key tenon aims the fillister and turns the triangle into vertical.

2. Open the removable hard disk drawer

3. And then, pull out the removable hard disk drawer

4. Remove the removable hard disk drawer cover

5. Carefully insert the hard disk in the removable rack

6. Turn the removable hard disk drawer over and screw hard disk with screws

7. And then, close the removable hard disk drawer cover

8. Slide the drawer back

9. Lock the removable hard disk drawer keylock. The key tenon aims the fillister and turns the triangle to horizontal.

10. You may now connect all the cables and power on the DVR unit.

In default, the power of the removable hard disk drawer is always on. **Do Not** push the power button.

1.5.2 Install Internal SATA Hard Disk

User can install up to 3 SATA hard disks inside the DVR unit if it is necessary. Please follow the below steps to install the hard disk.

1. Loosen all screws and push the cover backward and lift

2. Loosen the screws of holder in order to take out the hard disk rack.

3. Take out the hard disk rack from DVR unit and slide the hard disk into it.

4. Secure the hard disk both side

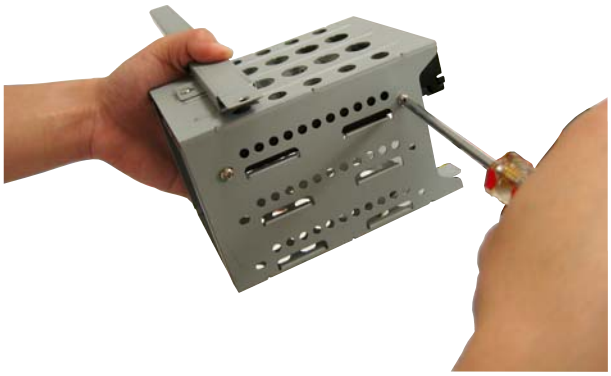

5. Plug the SATA cable into SATA connector on the main board

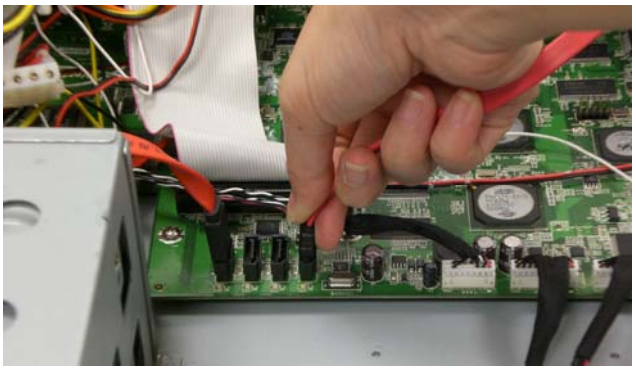

6. Plug another side of SATA cable into hard disk

7. Plug the power cable into hard disk

8. Screw tight the hard disk rack inside the DVR unit

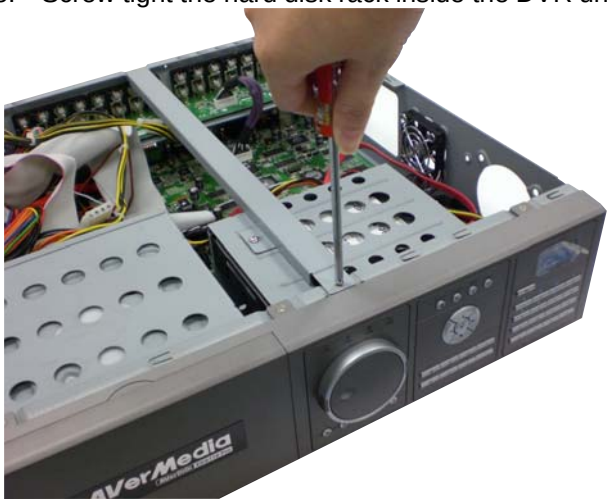

9. Push the cover forward and secure the cover

1.5.3 Connecting Devices

The back panel of the DVR unit, user can connect up to 16 cameras in combination of analog and IP camera. The DVR unit also can connect 16 sensor devices, 4 alarm devices, and output video to a CRT/LCD monitor. For backup recorded video, plugging the pen drive or external hard disk through USB port, and then, use the bundled software enables user to transfer, playback and segment the video. Follow the illustration below to make the connection:

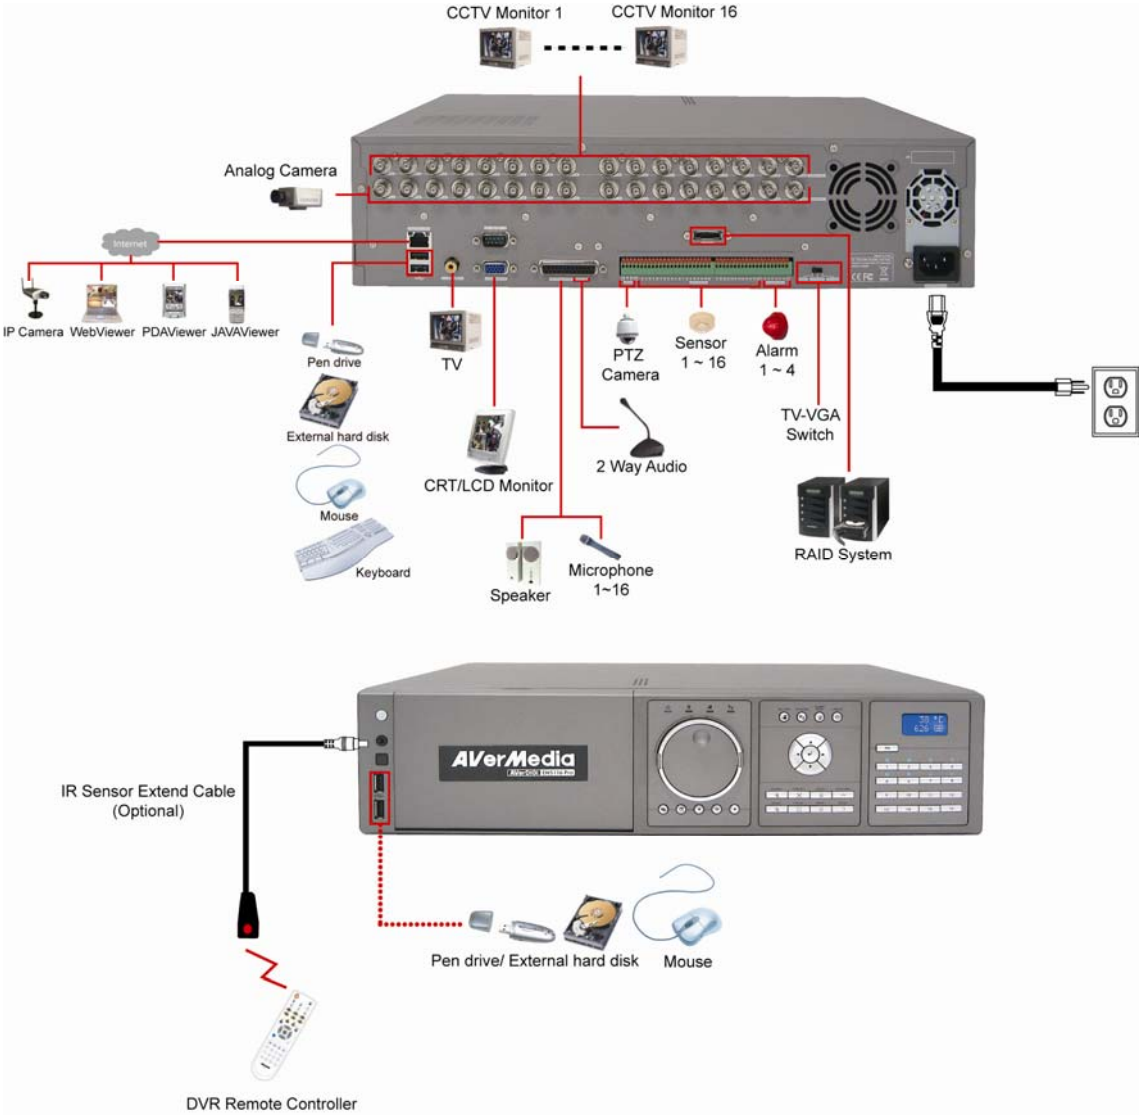

⚠	– Each time you change the video display output, the power must be turned **off** and switch the video display output, and then turn **on** the DVR unit. – Pen drive and external hard disk must be FAT32 format.
ⓘ	– All connected devices need to be powered by external power. – DVR unit can connect 16 cameras in analog and IP cameras combo.

1.6 Sensor, Relay and RS485 pinhole allocation

The Sensor and Alarm enable you to connect 16 sensor inputs, 4 relay outputs and 1 PTZ camera.. Just connect the external sensor, relay, and PTZ camera pin directly to the pinhole. Check the table below and locate which pinhole is assigned to sensor input and relay output.

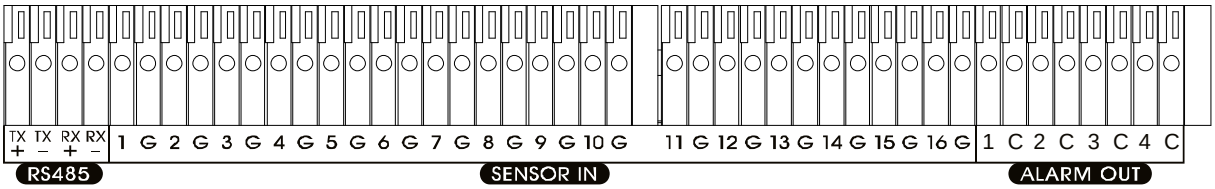

1.6.1 Sensor Pin Definition

Sensor Pin #	Definition	Sensor Pin #	Definition
1	Sensor 1 signal	**9**	Sensor 9 signal
G	Sensor 1 ground	**G**	Sensor 9 ground
2	Sensor 2 signal	**10**	Sensor 10 signal
G	Sensor 2 ground	**G**	Sensor 10 ground
3	Sensor 3 signal	**11**	Sensor 11 signal
G	Sensor 3 ground	**G**	Sensor 11 ground
4	Sensor 4 signal	**12**	Sensor 12 signal
G	Sensor 4 ground	**G**	Sensor 12 ground
5	Sensor 5 signal	**13**	Sensor 13 signal
G	Sensor 5 ground	**G**	Sensor 13 ground
6	Sensor 6 signal	**14**	Sensor 14 signal
G	Sensor 6 ground	**G**	Sensor 14 ground
7	Sensor 7 signal	**15**	Sensor 15 signal
G	Sensor 7 ground	**G**	Sensor 15 ground
8	Sensor 8 signal	**16**	Sensor 16 signal
G	Sensor 8 ground	**G**	Sensor 16 ground

1.6.2 Relay Pin Definition

Relay Pin #	Definition
1	Relay signal
C	Relay Common
2	Relay signal
C	Relay Common
3	Relay signal
C	Relay Common
4	Relay signal
C	Relay Common

1.6.3 RS485 Pin Definition

When connect PTZ camera through RS485 interface, please refer to the following pin definition to connect the DVR and PTZ.

Pin #	DVR site	PTZ site
TX+	RS485 TX+ signal	RS485 RX+ signal
TX-	RS485 TX- signal	RS485 RX- signal
RX+	RS485 RX+ signal	RS485 TX+ signal
RX-	RS485 RX- signal	RS485 TX- signal

If user uses the 2 wires for the PTZ camera connection, please connect to the RS-485 TX+ and TX- of the DVR site.

1.7 Familiarizing the Remote Control Buttons

Use the Remote control to operate the DVR unit.

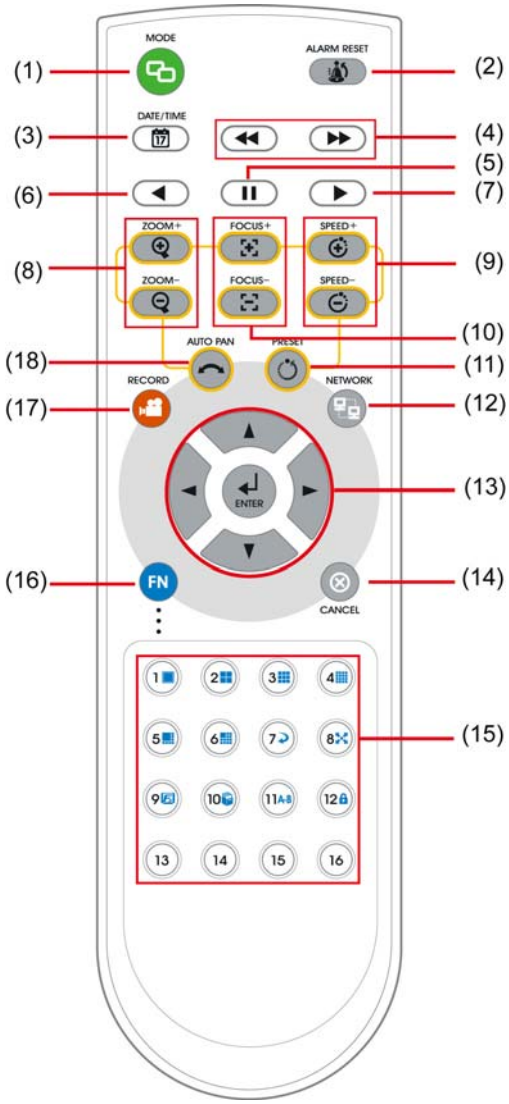

Name	Function
(1)	Switch to playback mode
(2)	To reset alarm status
(3)	To select the time and date of playback file
(4)	Fast play the video playback at the speed of 2x, 4x, 8x, 16x, 32x, or 64x
	Decrease the video playback at the speed of 1/2x or 1/4x
(5)	To pause playing
(6)	To fast forward the play video.
(7)	To reverse the play video.
(8)	To zoom in view of PTZ camera
	To zoom out view of PTZ camera
(9)	To speed up movement of PTZ camera lens
	To speed down movement of PTZ camera lens
(10)	To focus in PTZ camera lens
	To focus out PTZ camera lens
(11)	To move the PTZ camera to the preset position. Press + number button (1 ~ 16)
(12)	To enable network connection

Name	Function
(13)	To move PTZ camera to left
	To move PTZ camera to right
	To move PTZ camera to up
	To move PTZ camera to down
	Confirm or make a selection
(14)	Cancel a selection

(15) 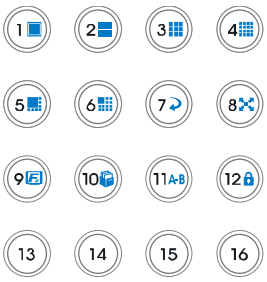	1 ~ 16 - As a number key for entering password in playback and preview mode - Channel camera selection number in playback and preview mode 1 ~ 16 - As a preset position with at PTZ control mode 1 ~ 8 - With FN button can switch to different screen display modes and enable auto scan and full screen. (see also Chapter 1.7 #(16))
(16) FN	A functional key for different function control - Press FN and function button to enable functions and press again to exit. FN + 1 :Switch to single screen display mode FN + 2 : Switch to QUAD display mode FN + 3 : Switch to 9 spilt screen display mode FN + 4 : Switch to 16 spilt screen display mode FN + 5 : Switch to one single and 7 spilt screen display mode FN + 6 : Switch to one single and 12 spilt screen display mode FN + 7 : To enable auto scan function FN + 8 : To switch full screen display mode FN + 9 ~ 12 do not have any functions.
(17)	Start recording video
(18)	To enable auto pan function

Chapter 2 Using the DVR Software

2.1 The Way to Operate DVR

There are three ways can be managed the DVR unit:

1. **Using mouse and keyboard**
   Connecting the mouse and keyboard through USB interface, user can manage the DVR unit easily. For the first time using DVR unit, mouse and keyboard is the best way to set up all DVR relevant configurations.
2. **Using Remote Control**
   After DVR unit has been setup, user can use remote control to preview, playback, backup, reset alarm, output video and so on functions.
3. **Using Front Panel button**
   It's an optional way to operate DVR unit. Front panel button function acts as same as remote control.

For the first time using DVR unit, using mouse and keyboard to setup all configurations.

2.1.1 First Time Using the DVR Unit

1. Connect the mouse and keyboard to DVR unit(through USB interface)
2. Power on the DVR unit.
3. For security purpose, the DVR system would require you to enter User ID and Password before it can be accessed. (If this is the first time, enter the default ID [**superuser**] and password [**111111**]).

4. The hard disk must be formatted before user can use it with DVR unit. Following the below steps to format the hard disk.
   a. Click **Setup** and enter the password
   b. Click **System** → **Add**

c. Select the hard disk from device list and select **Format type**
d. Click **Format** button to start formatting
e. When formatting is done, click **OK**.

5. Setup the date and time in order to have correct recording time and date. Following the below steps to setup date and time:
   a. Click **Setup** and enter the password
   b. In **Time** section, click **Setting** button of **System Time**.
   c. Select the date and adjust the time, and then, click **OK**.
6. Following the below steps to connect the IP and analog camera.

- **To connect analog camera:**
  a. Plug the analog camera video cable into DVR video port.
  b. Click **Setup** → **Camera**
  c. Select camera channel and type of camera – Analog Camera
  d. And then, enable the camera
  e. Give a name of camera and enter short description.
  f. Adjust the bright, contrast, hue, and saturation of camera
  g. Click **OK**
- **To connect IP camera:**
  a. Click **Setup** → **Camera**
  b. Select camera channel and type of camera – IP Camera
  c. And then, enable the camera
  d. Click **IP Setting**
  e. Enable **Protocol**, and then, select **protocol**, **mode**, **video format**, and **channel** of IP camera.
  f. Enter **IP address** or **URL** of IP camera.
  g. Enter **ID** and **password** if IP camera's access authority is required.
  h. Click **OK**.
  i. To connect another IP camera, follow the above steps.

- DVR unit can connect 16 cameras in analog and IP cameras combo.
- DVR unit doesn't supply the power to connected external device.

2.1.2 Using the Virtual Keyboard

User can use the Virtual Keyboard when the keyboard is not available. Just click or right-click screen to call out the virtual keyboard. For uppercase, click **Caps** button. To exit, click **Esc**.

2.2 Familiarizing the Buttons in Preview Mode

Name		Function
(1)	Exit	**Reboot:** To restart the DVR system. It is required to enter the password **Power Off:** To shut down the DVR system. It is required to enter the password **Login:** Using different ID to login to DVR system. **Cancel:** To return to DVR application.
(2)	Split Screen Mode	Select from 6 different split screen types to view all the camera, or one camera over the other or alongside on a single screen. It also allows you to switch and view different camera number.

- When you are in single screen mode, **Right click** and **Drag** a square on the area you want to enlarge.
- When you are in full screen mode, partial enlarges does not support.

(3)	Record	Start/stop video recording.
(4)	EMap	Display the map in each area, and the location of camera/ sensor/ relay and the warning (see also Chapter 2.2.1).
(5)	Network	Enable/disable remote system access. This feature allows you to access DVR server from a remote location via internet connection. The default is disableed.
(6)	Setup	Configure the system settings. (see also Chapter 3)
(7)	PTZ	Access PTZ control panel. (see also Chapter 2.2.2)
(8)	Preview	Switch to Preview mode. This allows you to view live camera display.
(9)	Playback	Switch to Playback mode. This allows you to view the recorded video file. (see also Chapter 2.3)
(10)	Status bar	Display the recorded date, time, hard disk space and temperature of unit.
(11)	Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(12)	Snapshot	Capture and save the screen shot in *.jpg format.
(13)	Event log	Show the record of activities that take place in the system. (see also Chapter 2.2.3)
(14)	AutoScan	Start/Stop video screen cycle switch.

Name	Function
(15) Full screen	View in full screen. To return, press the right button of the mouse or **ESC** on the keyboard or click the arrow icon. When you switch to full screen in multiple-screen mode, **Left** click to toggle to only display one of the video in the multiple-screen mode or all.
(16) Alarm	Alert and display warning info.
(17) Virtual Keyboard	Click to enable virtual keyboard.

2.2.1 Setting Up and Using the Emap

E-Map can hold up to 8 maps in *.jpg format. You may locate the camera, sensor and relay on the map.

To Set Up the Emap

1. Click **Emap**.
2. When the Emap screen appears, click the area number (1 to 8 buttons) on where you want to insert the map.
3. Click **Load Map** to insert the map. When the open dialog box appears, locate and select the map and click **Open**.
4. When the inserted map appears on the Emap screen, click **Edit**. You may now drag the camera, sensor, and relay icons to its place on the map. Icons on the map can be relocated anywhere. If you are going to locate the icon on the map to other area, you need to drag the icon to the black pane at the bottom of the Emap screen and then switch to the area on where you want to locate the icon. To bring all the icons back to the black pane at the bottom of the Emap screen, click **Reset** Icon.

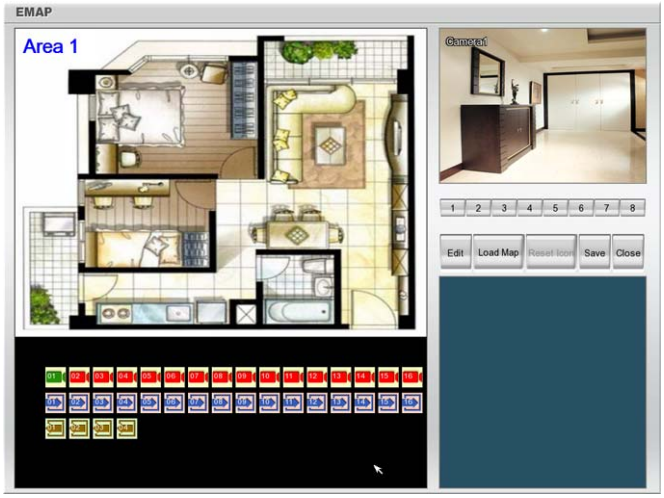

5. When you are done, click **Save** button to save the new setting. To exit Emap screen, click **Close**.

To Use the Emap

1. Click **E-map**.
2. In the Emap screen, click the camera icon to switch on the area where the camera is located on the map and to display the video at the upper right corner of the Emap screen. At the lower right corner of the Emap screen, it lists all the warning message.

3. Click **Close** to exit Emap screen.

2.2.2 Familiarizing the Buttons in PTZ Camera Controller

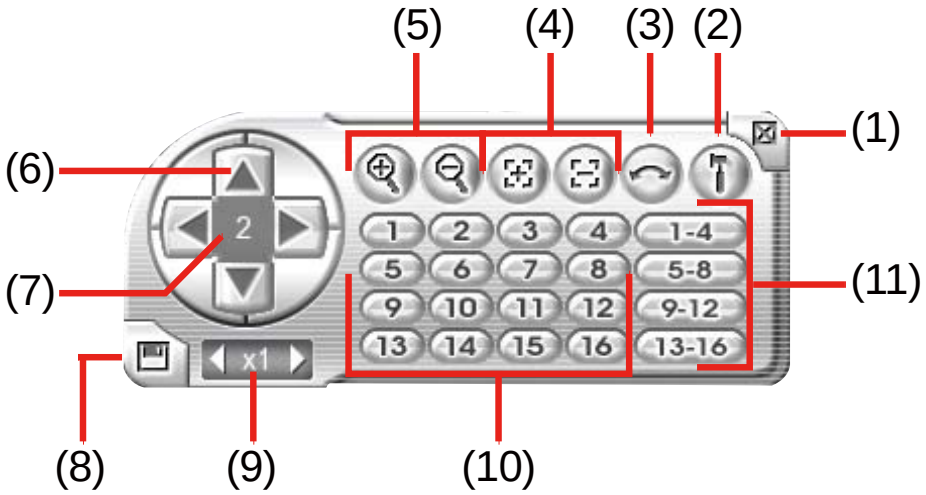

Name	Function
(1) Close	Exit PTZ camera controller.
(2) Setup	Configure PTZ cameras(see also Chapter 2.2.2.1)
(3) AutoPan	Operate the PTZ cameras automatically based on the selected camera group preset position number.
(4) Focus +/-	Adjust the focus manually to produce clear image.
(5) Zoom +/-	Zoom in and out the image.
(6) Direction buttons	Adjust and position the focal point of the PTZ camera.
(7) Camera ID pane	Display the PTZ camera number that is being operated.
(8) Save Camera preset position	Save the PTZ camera preset position number. Select the camera and click the preset position number and save it.
(9) Camera lens speed controller	Adjust the moving speed of the PTZ camera lens.
(10) Camera preset position number	Move the PTZ camera to the preset point.
(11) Group AutoPan	Select to automatically operate PTZ camera in group.

2.2.2.1 Setup the PTZ Camera

1. In the PTZ control panel, click **Setup**.
2. When the PTZ Setup dialog box appears, select the camera number and check the **Use PTZ** box.

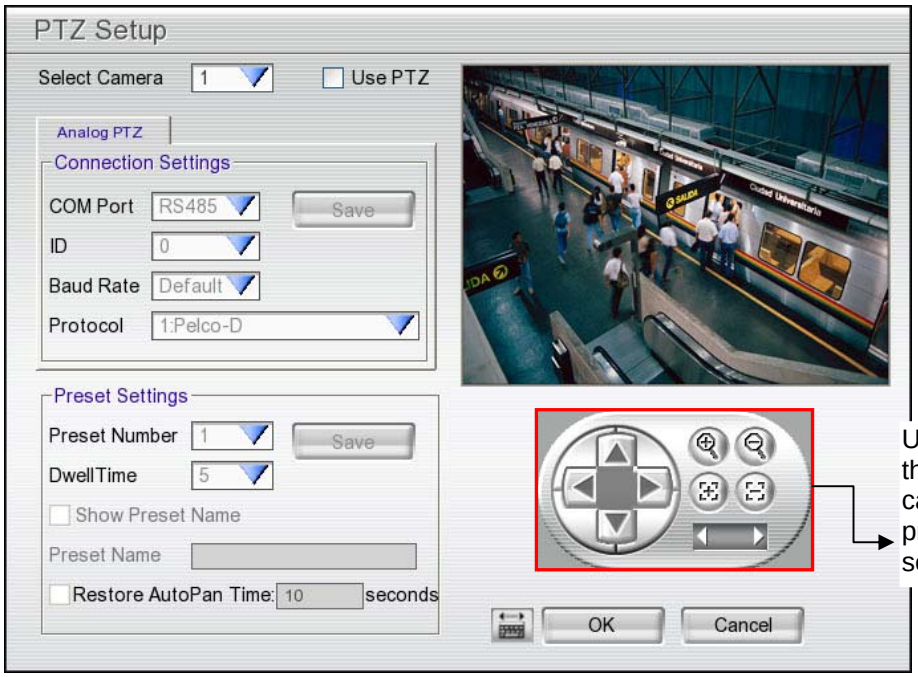

Use to adjust the lens of PTZ camera for preset position setting.

3. In the Connection Settings section, fill in the following selections. Then, click **Save** to keep the settings.
   - **COMPort:** The port that the PTZ camera is connected
   - **ID:** PTZ camera ID number
   - **Baud Rate:** Please refer to the user's manual of the PTZ camera to make sure the baud rate.
   - **Protocol:** Please refer to the user's manual of the PTZ camera to make sure what protocol is using.
4. In the **Preset Setting** section, use the control panel to adjust the position of the PTZ camera and select the preset number to assign a number for the PTZ camera current position. Set the **DwellTime** (1-60 sec) for how long the PTZ camera stays in that position before it moves to the next one. If you want to add description, check the **Show Preset Name** box and in the **Preset Name** text box, type the word. After is done, click **Save** to keep the **Preset Setting** settings.
5. Repeat step 4 and 5, if you want to save another PTZ camera position.
6. **Restore AutoPan Time:** set a time period for restoring auto path function after the PTZ camera has been moved manually. Mark the check box and set the time period in second.
7. After finished all configurations, click **OK** to exit. Click **Cancel** will exit and without saving the settings.

2.2.3 Using Event Log Viewer

Show the record of activities that take place in the system.

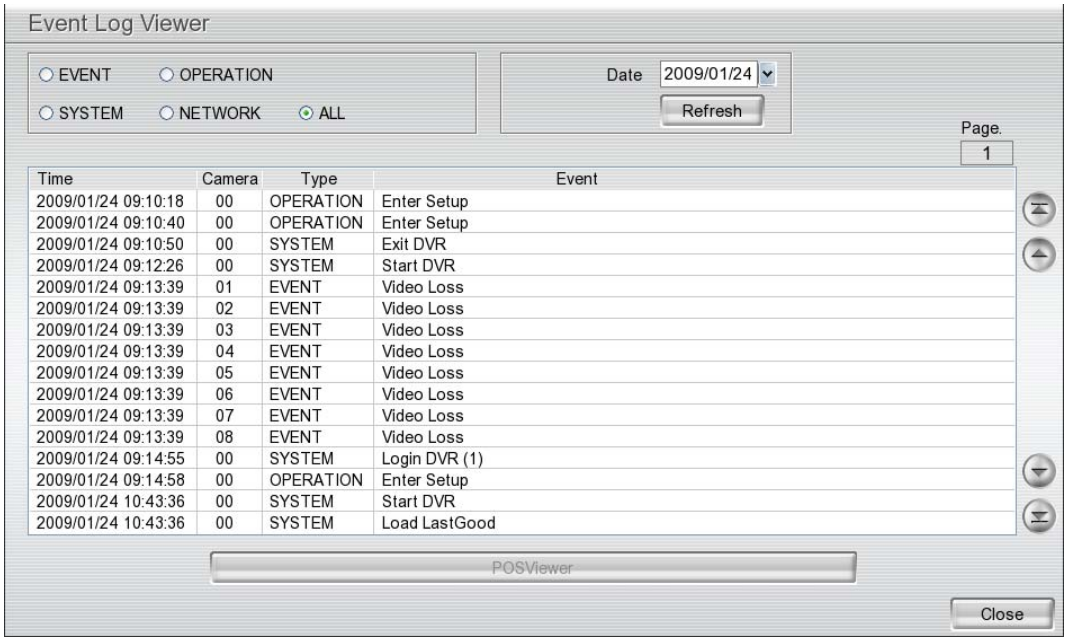

1. Click the **Event Log** button on DVR system main interface. The Event log viewer window will show up.
2. Select the **Date** to view.
3. To filter the records, select and click the select button to display **Event**, **System**, **Operation**, **Network** or **All**.
4. Use the scroll button to go next, previous, first, or last page of event list. Also, user can enter the page number in **Page** column to go to the page.

2.3 Familiarizing the Buttons in Playback Mode

To switch in Playback mode, click **Playback** button at the lower right corner of Preview mode user interface.

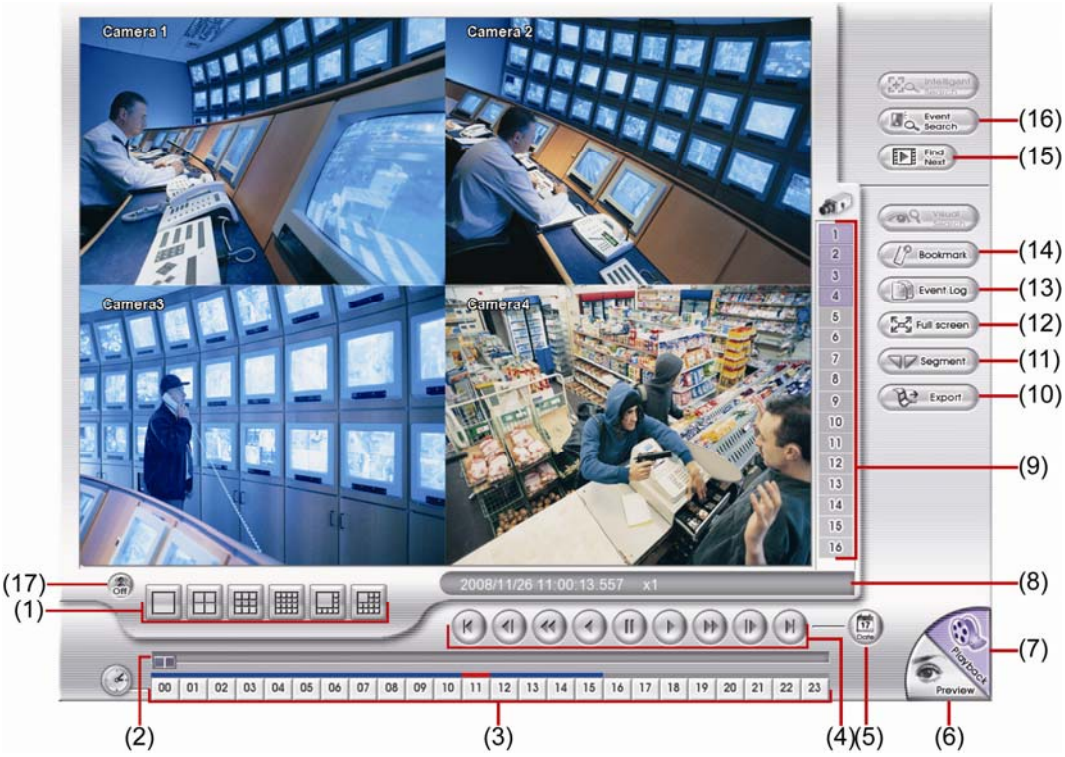

Name	Function
(1) Split Screen Mode	Select from 6 different split screen type to playback the recorded video file of all the camera, or one camera over the other or alongside on a single screen.

– When you are in single screen mode, **Right click** and **Drag** a square on the area you want to enlarge.

– When you are in full screen mode, partial enlarges does not support.

(2) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(3) Hour Buttons	Select and click to playback the recorded video file on the specific time frame.

The Hour buttons represent the time in 24-hour clock. The blue bar on top of the hour button indicates that there is a recorded video file on that period of time. While the red bar indicates that you are currently viewing the recorded video file.

(4) Playback Control Buttons	**Begin:** Move at the beginning of the recorded video file. **Previous:** Go back to the previous frame. **Slower:** Play the recorded video file at the speed of 1/2X, or 1/4X. **Rewind:** Wind back the recorded video file. **Pause:** Briefly stop playing the recorded video file. **Play:** Play the recorded video file. **Faster:** Play the recorded video file at the speed of 2x, 4x, 8x, 16x ,32x, or 64x. **Next:** Go to the next frame. **End:** Go to the end of the recorded video file.
(5) Date	Select the date on the calendar and the time from 00 to 23 to where to start playing the recorded video file.

The numbers from 00 to 23 represent the time in 24-hour clock. The numbers from 01 to 16 represent the camera ID. The blue colored column indicates that there is a recorded video file on that period of time. While the red colored column indicates on where to start playing the recorded video file.

Name	Function
(6) Preview	Switch to Preview mode.
(7) Playback	Switch to Playback mode. This allows you to view the recorded video file.
(8) Status bar	Display the recorded date, time and play speed.
(9) Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(10) Export	Export includes Snapshot, Output Video Clip, and Backup function. ■ **Snapshot:** Capture and save the screen shot either in *.jpg format. ■ **Output Video Clip:** Save the segmented file in *.dvr format to external USB storage device (see also Chapter 2.3.1). ■ **Backup:** Save the playback file to USB device or DVD-ROM disk(see also Chapter 3.6)
(11) Segment	Keep a portion of the recorded video(see also Chapter 2.3.1).
(12) Full screen	View in full screen. To return, press the right button of the mouse or **ESC** on the keyboard or click the arrow icon. 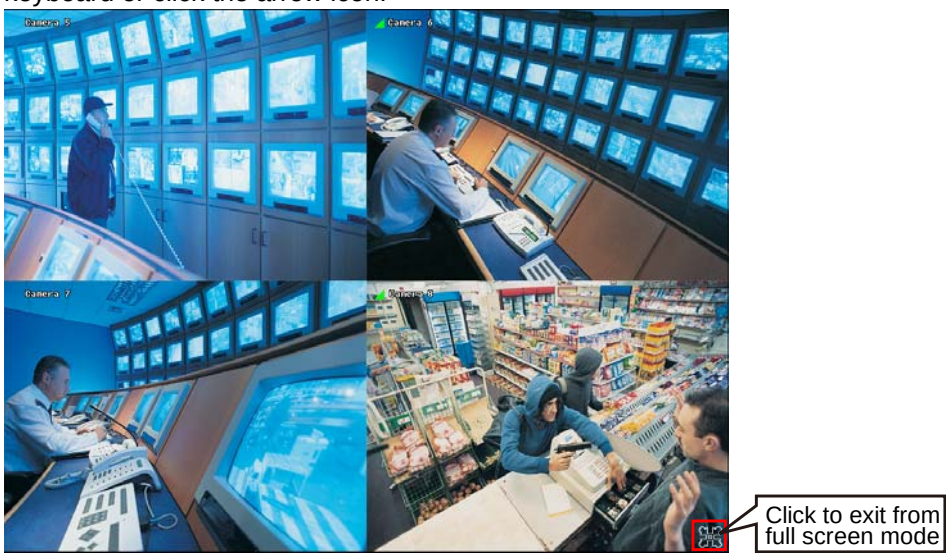 When you switch to full screen in multiple-screen mode, **Left** click to toggle to only display one of the video in the multiple-screen mode or all.
(13) Event log	Show the record of activities that take place in the system. To filter the records, select and click the option button to only display Event, System, Operation, Network or All.
(14) Bookmark	Mark a reference point when reviewing the recorded video file to which you may return for later reference (see also Chapter 2.3.2).
(15) Find Next	Search for the next event. You can use this when you are using Event Search function.
(16) Event Search	Search from the recorded activities that were recorded in event log (i.e., Sensor, Motion, Video Loss). (see also Chapter 2.3.3)
(17) De-interlace	To enhance the video quality. Set the de-interlace mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.

2.3.1 To Cut and Save the Portion of the Recorded Video

1. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to start the cut. Then, click **Segment** to set the begin mark.

2. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to end the cut. Then, click **Segment** to set the end mark. To cancel segmentation, click **Segment** button again.

3. Click **Export** > **Output Video Clip** button to save the wanted portion.
4. In the **Save As** dialog box, locate on where user wants to save the file, type the filename, and select the video format.

2.3.2 To Bookmark a Video Section

1. Click **Bookmark** button
2. In the Bookmark dialog box, you may do the following:
   - **Add** to create the new reference mark in the bookmark list.
   - **Edit** to change the mark description.
   - **Delete** to remove the selected reference mark in the list.
   - **Delete All** to remove all the reference marks in the list.
   - **Exit** to close Bookmark dialog box.
3. Select and click one in the bookmark list to review the file.

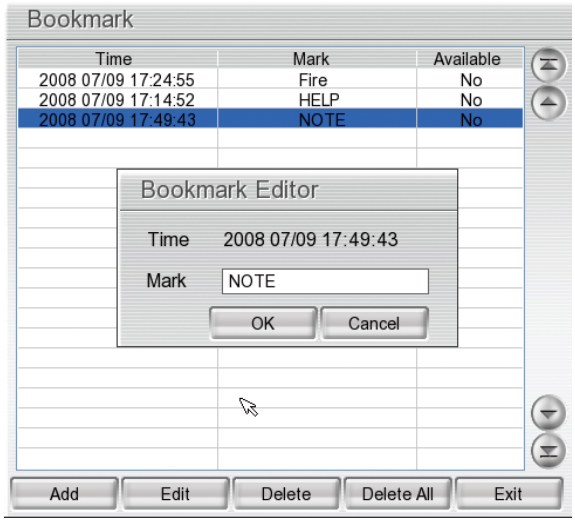

2.3.3 Using the Event Search

1. Click on the video screen on where you want to search.
2. Click **Event Search**. The Event Search Setting dialog box would appear on the screen.
3. In the Event Search Setting dialog box, check the type of condition you want to search. Then, click **OK** to start searching. The video search would stop at the frame that matches the condition. To keep on searching click

.
4. You may also set to search and list all the result. Set the **Begin Time**, time of **End Time**, and **Searching Interval**. Then, click **OK** to start searching.

> The DVR system will set the date of **End Time** at 3 days later of Begin Time automatically. If event data are less than 3 days, the DVR system will set End Time at current date. Time of End Time is adjustable.

5. When the Event list appear, click and select the item you want to view.

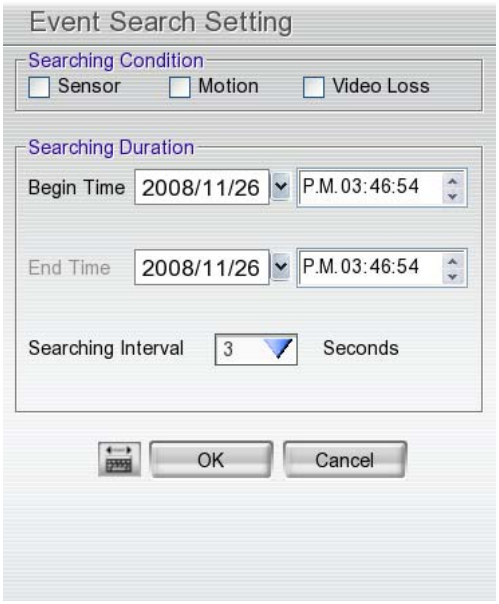

Chapter 3 Customizing the DVR System

In the Preview screen mode, click Setup button to customize your DVR. When the DVR configuration setup selection appears, select and click the buttons you want to change the setting.

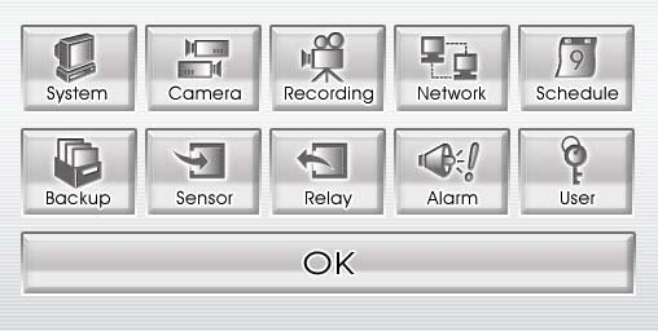

3.1 System Setup

In the System Setting dialog box, click **OK** to accept the new settings, click **Cancel** to exit without saving.

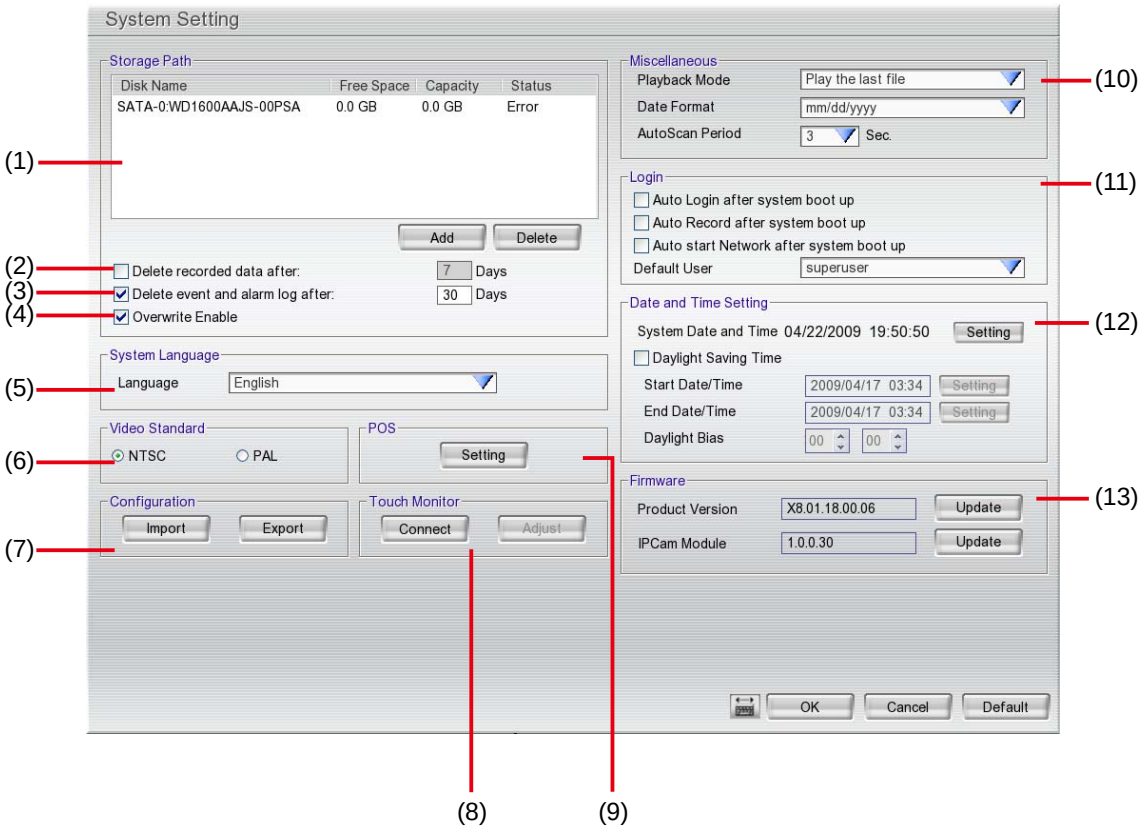

(1) Storage Path

Set the HDD on where to save the data. In case you have more than one storage device, the system automatically saves the data to the next storage device. To insert another storage device, click **Add** and select the storage path. To remove the selected path, click **Delete**.If the hard disk is the first time for DVR system, please format the hard disk before starting to use it. To format the hard disk, select the hard disk and **Format Type**, and then, click **Format** button.

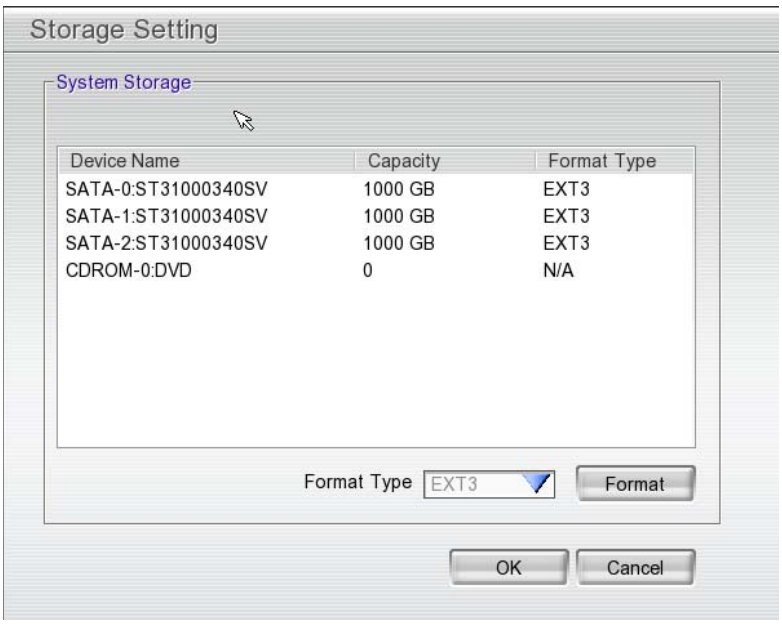

(2) Delete recorded data after

If you want the system to automatically erase the data after a certain days, enable the **Delete recorded data after** check box and enter the number of days in **Days** text box.

(3) Delete event and alarm log after

If you want the system to automatically erase the event and alarm log after a certain days, enable the **Delete event and alarm log after** check box and enter the number of days in **Days** text box.

(4) Overwrite Enable

When there is not enough free space to record one hour data, the system automatically replaces the oldest data.

(5) Language

Customize the system to display the tool tips and dialogs based on the selected language. Default language is in English.

(6) Video Standard

Change and select the proper video system according to your camera video system. If the video system setting is wrong, the video would appear abnormal.

(7) Configuration

Backup a copy of all the settings and allows you to regain the same settings back. To save the current settings, click **Export**. To replace the settings with the one you have saved, click **Import**.

(8) Touch Monitor

When DVR server is connected with touch monitor, user needs to adjust touch monitor in order to work normally.

1. Connect the touch monitor with DVR server.
2. Turn on the DVR server and touch monitor power.
3. Select **Setup** → **System** → **Touch Monitor** → **Adjust**.
4. The adjusting window will show up.

Please touch the cross points one by one.

Warning: This window will be closed automatically in 3 minutes.

5. Click **+** one by one to complete the adjustment.
6. To disconnect touch monitor, click **Disconnect** button first, and then, turn off the power of touch monitor and remove the connection between DVR server and touch monitor.

(9) POS

Set from which camera screen to display the data from the POS equipment. Click **Setting**, to set the POS Console Setting.

1. In the POS Console Setting dialog box, click **Add** to set a new POS setting, **Modify** to change the POS setting, and **Delete** to remove the selected POS setting. Click **OK** to save and close POS Console Setting.

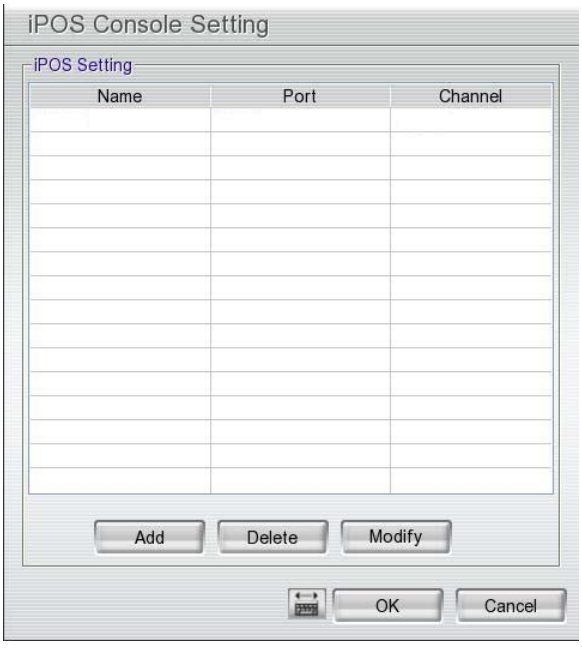

2. In the POS Mapping dialog box, click **OK** to accept the settings and **Cancel** to exit without saving the new setting.

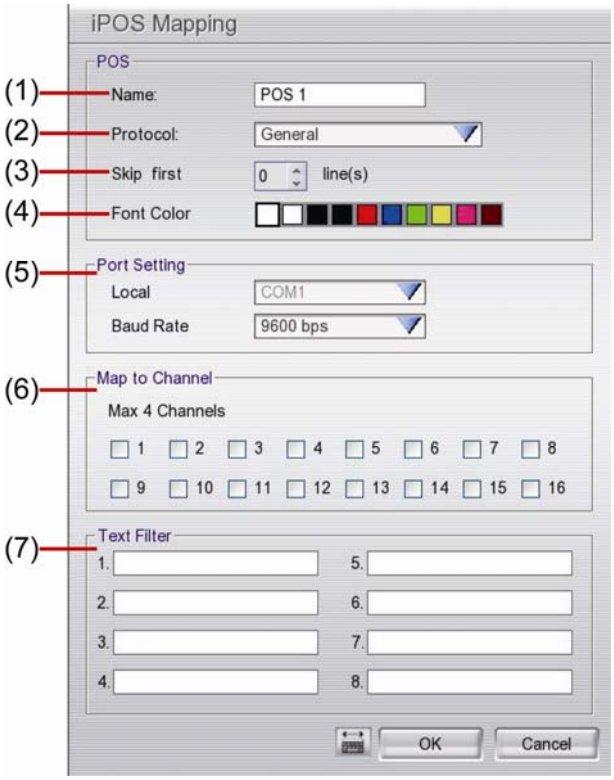

(1) Name: Enter a name to identify the POS.
(2) Protocol: Select the protocol.
(3) Skip first: Set the number of lines you want to be removed.
(4) Font Color: Select the text color of the POS data.
(5) Port Setting : Select the **Local**(Com port) where it is connected and **Baud Rate**.
(6) Map to Channel: Select to which camera number to display the transaction text.
(7) Text Filter: Enter the word you want to be removed.

(10) Miscellaneous

- **Playback mode:** Select the mode of playback the video.
  - **Select date and time:** Select the date and time which user wants to playback.
  - **Play the last file:** Automatically playback the video from the last hour
  - **Instant Playback:** Automatically playback the video which has just recorded
- **Date Format**
  Select the date format which wants to display in select date and time playback mode
- **Auto Scan Period**
  Set the time gap of the Auto Scan function from 3 to 10 seconds. This automatically switches to the next video in cycle depending on the set time gap.

(11) Login

Enable the conditions in Login section you want the system to automatically carry out.

- **Auto Login after system boot up**
  Execute the DVR when the operating system is started.
- **Auto Record after system boot up**
  Automatically start video recording when the DVR is executed.
- **Auto start Network after system boot up**
  Automatically start network connection when the DVR is executed.
- **Default user**

Automatically log in to the selected default user when the DVR is executed.

(12) Date and Time Setting

Adjust the DVR system time and date. Click **Setting** to select the month, date, hour, and minute. Mark **Daylight saving** check box to enable daylight saving function. And then, select the **Start** and **End Date/Time** by click **Setting**.

Daylight Bias: Assign a time that it is for daylight saving time offset in your time zone. For example: if the time zone is in U.S. Eastern, the time offset is 1 hour.

(13) Firmware

- **Product Version Update:** Upgrading the firmware of DVR system.
  1. Click **Update** button, a **Firmware Upgrade** windows will show up.

  2. Save the firmware on root directory of USB disk. And then, plug USB disk into DVR unit.
  3. Select the USB disk if there is more than one USB disk from drop down list. The DVR unit will auto detects the firmware.
  4. Click **OK** to start upgrading.

- **IPCam Module Firmware Update:** Update firmware of IP camera.
  1. Click **Update** button, a **Firmware Upgrade** windows will show up.

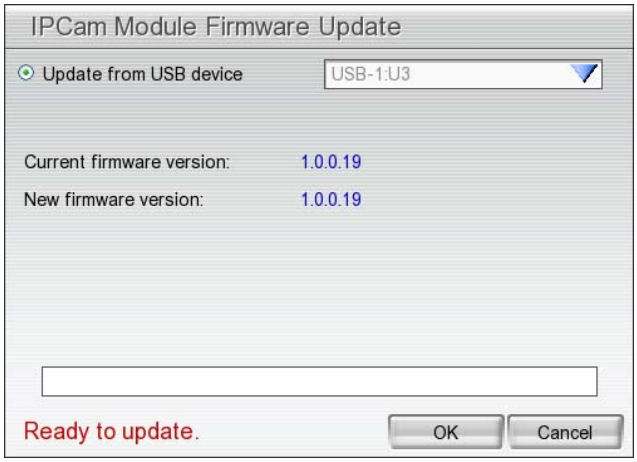

  2. Save the firmware on root directory of USB disk. And then, plug USB disk into DVR unit.
  3. Select the USB disk if there is more than one USB disk from drop down list. The DVR unit will auto detects the firmware.
  4. Click **OK** to start upgrading.

3.2 Camera Setup

The DVR system supports 16 cameras in combination of analog and IP cameras, only analog cameras, or only IP cameras.

3.2.1 To Setup IP Camera

Click **Default** will back to the factory default value.

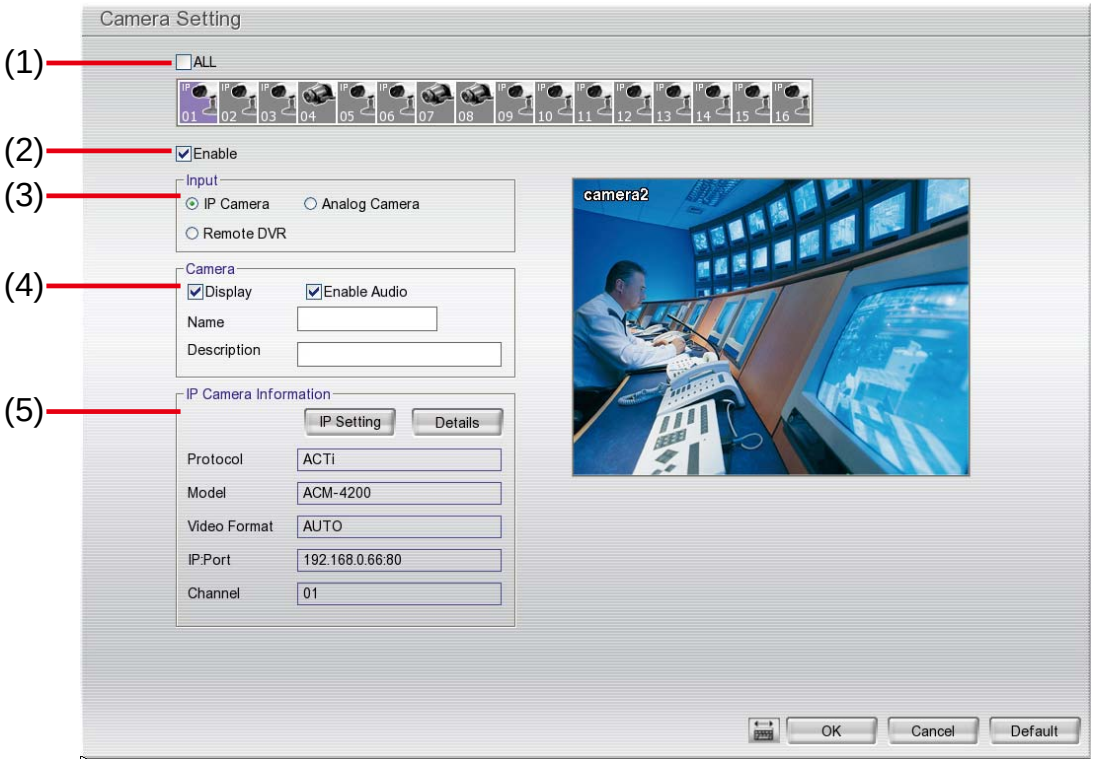

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **IP Camera**.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment

(5) IP Camera Information

To setup IP camera and display current IP camera information.

■ **IP Setting:** Click **IP setting** to add the IP camera.

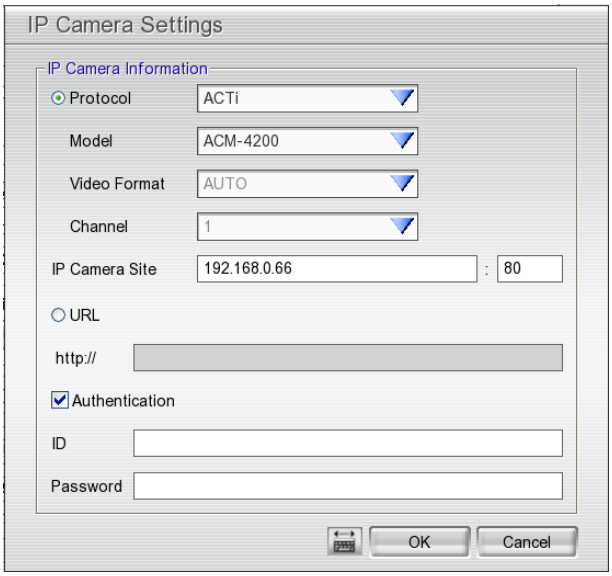

1. Click the radio button of **Protocol** to start setup IP camera.
2. Select the **Protocol**, **Model**, **Video Format**, and **Channel** of the IP camera.
3. Enter IP address and connecting port in **IP Camera Site** column.
4. Also, user can enter URL of IP camera instead of IP address.
5. If the IP camera has authority request, please enable **Authentication** and enter **ID** and **Password**.
6. Click **OK** to connect with the IP camera.

■ **Detail:** To adjust IP camera parameters, click **Detail**. Click **Default** will back to the factory default value.

User can select **Video size**, **Frame rate**, **Bitrate mode** and **Quality** of camera. Also, user can adjust **Bright**, **Contrast**, **Hue**, **Saturation**, and **I/O Control** of the camera.

The selection and adjustment items may vary by the camera supported.

I/O Control: Setup the sensor and relay that is embedded on the IP camera.

■ **Sensor Setting**

1. Click **Sensor** button.

2. Click the drop-down list and select the sensor ID number.
3. Enter sensor name in **Name** column
4. The system automatically detects the camera and input relates information. In the Content section, enter sensor **Description**.
5. In the test section, click **Test** to check the sensor status. **Red** is high and **Green** is low.
6. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

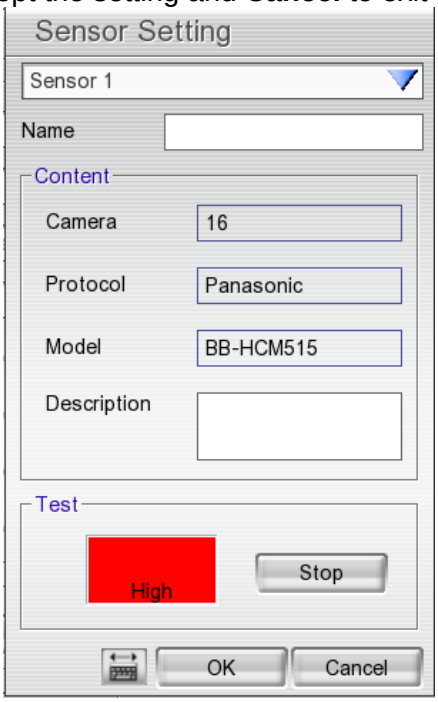

■ **Relay Setting**

1. Click **Relay** button.
2. Click the drop-down list and select the relay ID number.
3. Enter relay name in **Name** column
4. The system automatically detects the camera and input relates information. In the Content section, enter relay **Description**.
5. In the test section, click **Test** to check the relay status. **Red** is high and **Green** is low.
6. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

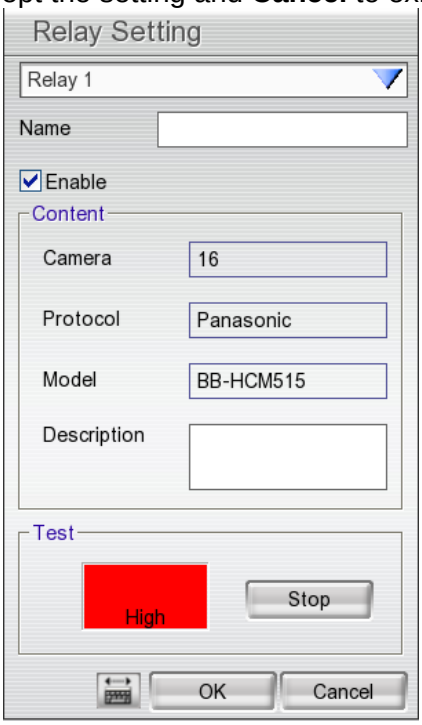

3.2.2 To Setup Analog Camera

Click **Default** will back to the factory default value.

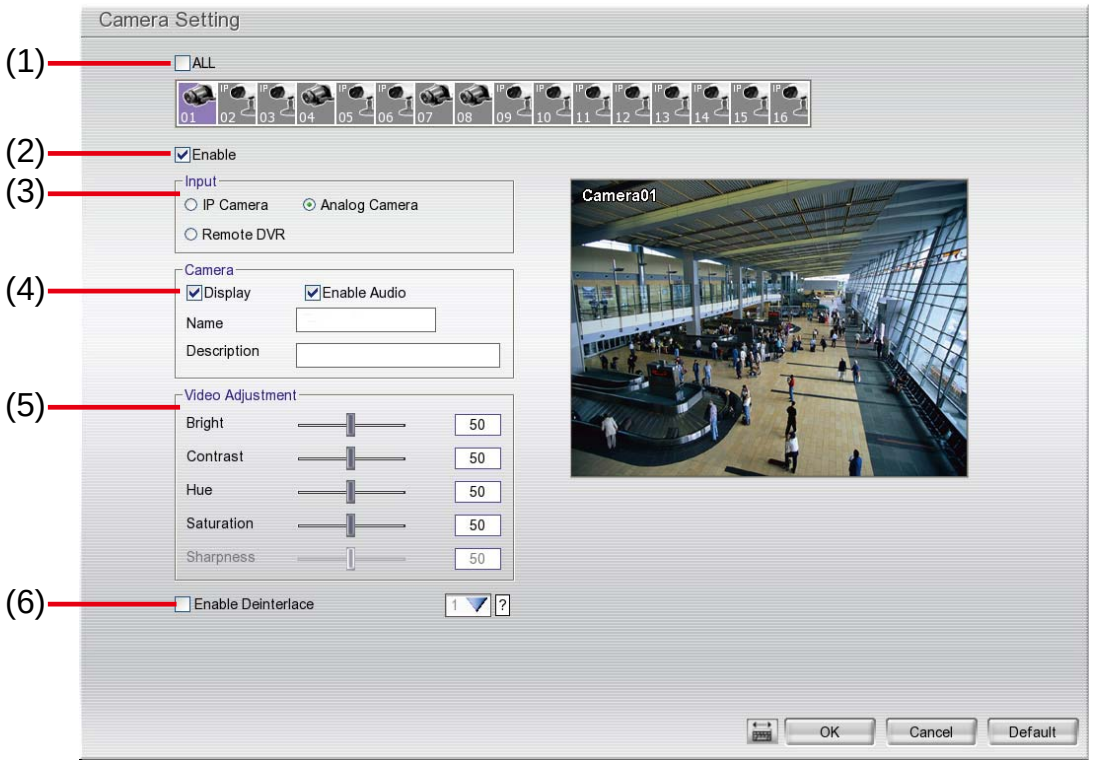

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **Analog Camera**.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment

(5) Video Adjustment

Adjust the Brightness, Contrast, Hue, Sharpness, and Saturation of the camera.

(6) Enable Deinterlace

Enhance the video quality. Set the **Enable Deinterlace** mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.

3.2.3 To Setup Camera from the Remote DVR

User can add the camera from another DVR through the network.

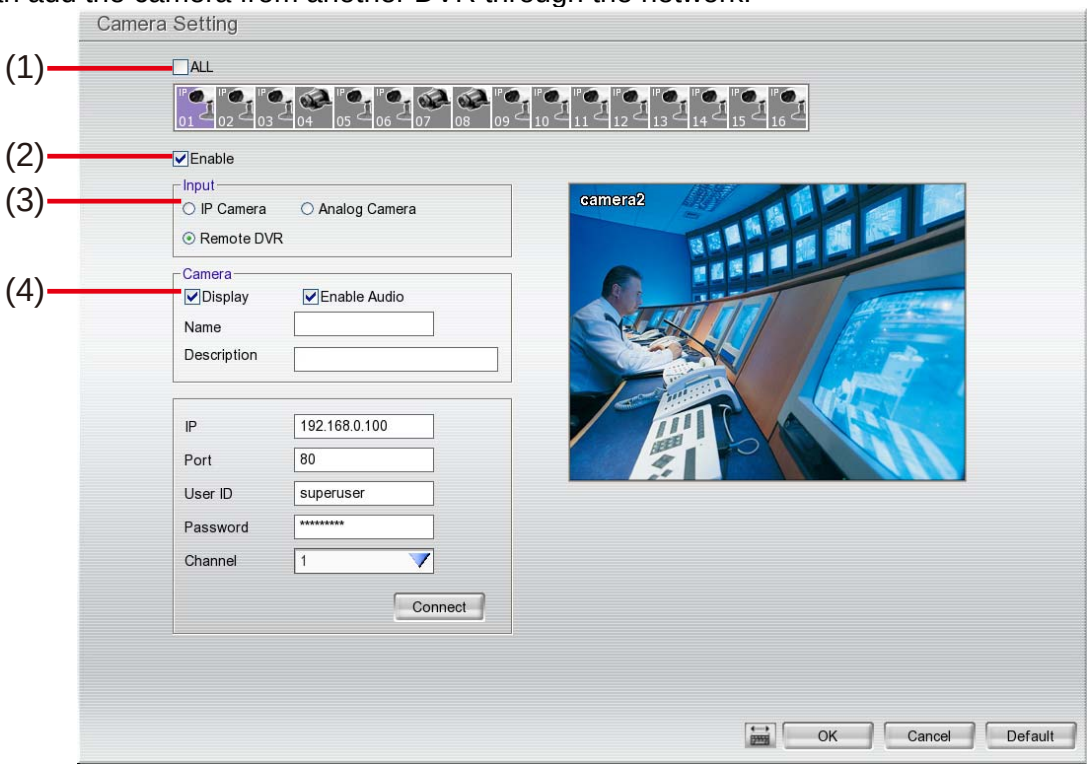

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **Remote DVR**.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment
- **IP**
  Enter the IP address of the camera
- **Port**
  The port for connection
- **User ID**
  Enter the user id that for connecting authority
- **Password**

Enter the password that is for connecting authority

- **Channel**

  Select the channel of connected camera

- **Connect**

  Click to connect the camera when all configurations are set.

3.3 Recording Setup

3.3.1 Setup IP Camera Record Setting

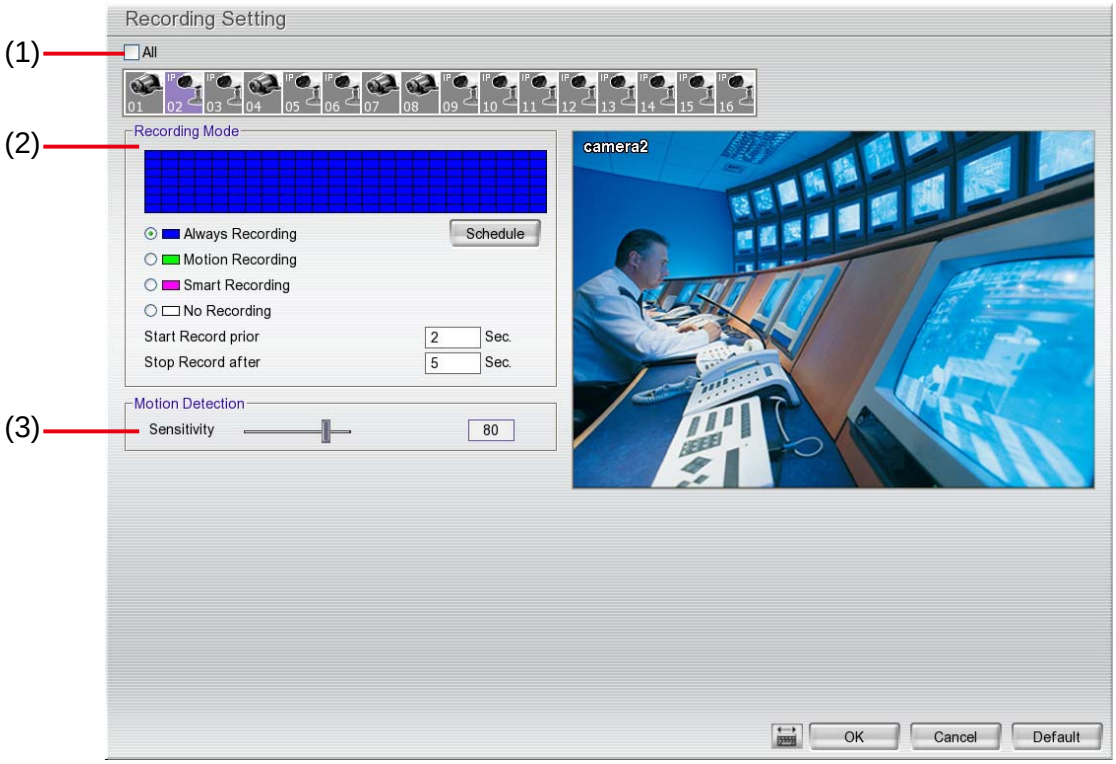

(1) Camera Icons

Select the camera number you want to set the recording setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, **Right click** on the camera icon. To select one camera only, **Left click** on the camera icon. The camera icon turns purple when it is selected.

(2) Recording Mode

The horizontal blocks from 00 to 23 represent the time in 24-hour clock and the vertical block 1 to 7 represent the day in the week block (Sunday to Saturday). To record in full 24 hours and 7 days a week, select the recording mode and click the ⊙ button. If you want to only record at a particular time or day, click **Schedule** button and select the **Recording Mode** , and then click on the time or day blocks. When the system starts recording a red triangle mark would appear at the upper left corner of the screen. The recording modes are listed below:

- **Always Recording**

  Record the video from the selected camera and save it to the designated storage device

- **Motion Recording**

  Start recording the video from the selected camera only when the system detects movement. Once a motion is detected, the system automatically saves the previous frames and stop based on the **Start Record Prior** and **Stop Record After** settings.

- **Smart Recording**

Automatically switch to recorded at the maximum frame rate setting once a motion is detected and if there is no motion, it records at the minimum frame rate setting.

- **No Recording**
  The system won't do any recording.

(3) Motion Detection

Adjust the sensitivity of the motion detection. The higher the value, the finer the sensitivity is detected. When it detects a motion, a green triangle mark would appear at the upper left corner of the screen.

3.3.2 Setup Analog Camera Record Setting

Click **Default** will back to the factory default value.

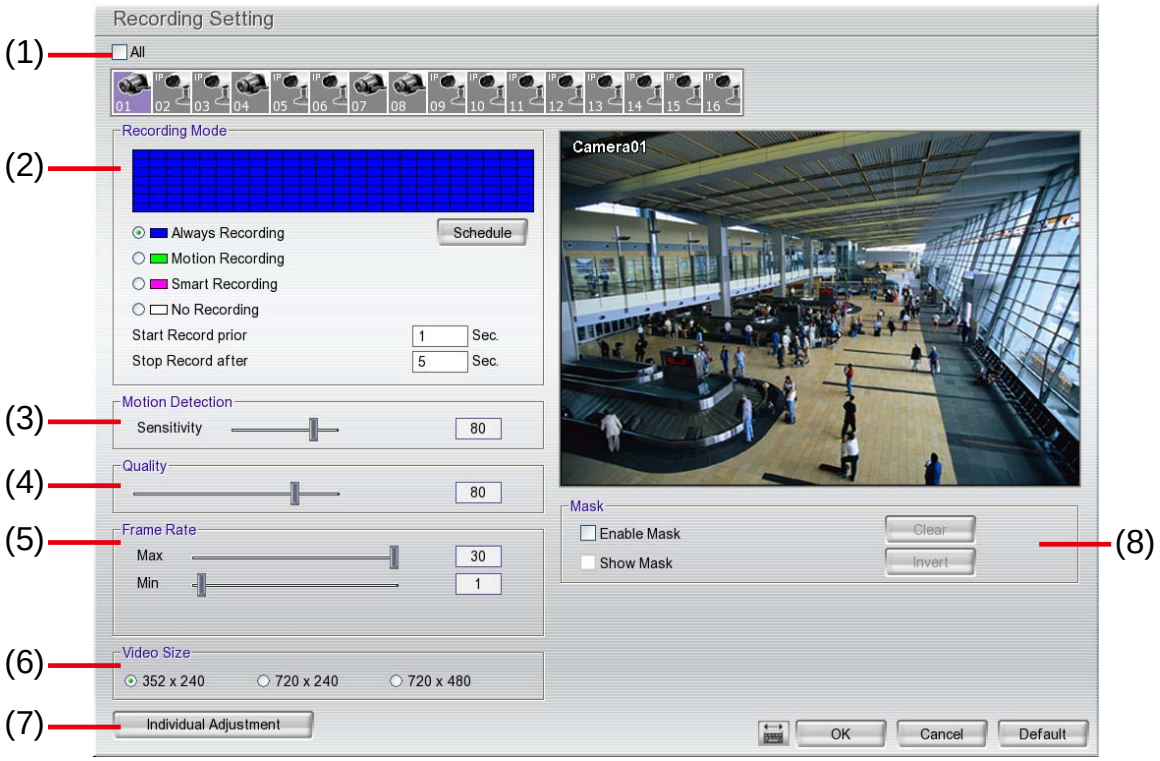

(1) Camera Icons

Select the camera number you want to set the recording setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, **Right click** on the camera icon. To select one camera only, **Left click** on the camera icon. The camera icon turns purple when it is selected.

(2) Recording Mode

The horizontal blocks from 00 to 23 represent the time in 24-hour clock and the vertical block 1 to 7 represent the day in the week block (Sunday to Saturday). To record in full 24 hours and 7 days a week, select the recording mode and click the ⊙ button. If you want to only record at a particular time or day, click **Schedule** button and select the **Recording Mode** , and then click on the time or day blocks. When the system starts recording a red triangle mark would appear at the upper left corner of the screen. The recording modes are listed below:

- **Always Recording**
  Record the video from the selected camera and save it to the designated storage device
- **Motion Recording**
  Start recording the video from the selected camera only when the system detects movement.

Once a motion is detected, the system automatically saves the previous frames and stop based on the **Start Record Prior** and **Stop Record After** settings.

- **Smart Recording**
  Automatically switch to record at the maximum frame rate setting once a motion is detected and recording time will be based on **Stop Record After** setting; if there is no motion, it records at the minimum frame rate setting. Set the frame rate in **(5) Frame Rate**.
- **No Recording**
  The system won't do any recording.

(3) Motion Detection

Adjust the sensitivity of the motion detection. The higher the value, the finer the sensitivity is detected. When it detects a motion, a green triangle mark would appear at the upper left corner of the screen.

(4) Quality

Adjust the video quality. The higher the value, the lower the compression level and uses more hard disk space.

(5) Frame Rate

Set the maximum and minimum number of frames to be recorded during motion and motionless state. The frame rate ranges from 01 to 30 for NTSC and 01 to 25 for PAL. The higher the frame rate, it uses more hard disk space.

Always recoding frame rate is depending on max frame rate value.

(6) Video Size

Select the size of the video and click the ⊙ button. The higher the size, the larger the file it create.

(7) Individual Adjustment

Each camera can adjust video size and frame rate individually. Click **Default** will back to the factory default value. The frame rate usage is shown in **Used** and **Unused** columns by CIF mode.

Only analog camera can adjust video size and frame rate by channel.

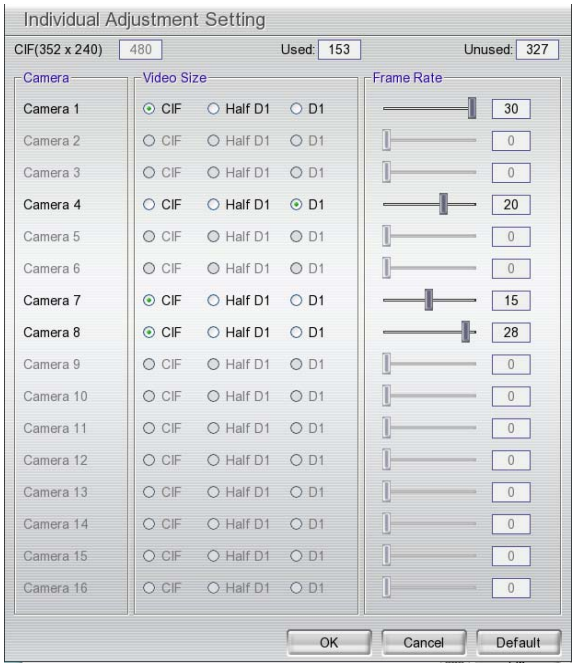
Individual Adjustment Setting
CIF(352 x 240)
480
Used: 153
Unused: 327
Camera
Video Size
Frame Rate
Camera 1 CIF Half D1 D1 30
Camera 2 CIF Half D1 D1 0
Camera 3 CIF Half D1 D1 0
Camera 4 CIF Half D1 D1 20
Camera 5 CIF Half D1 D1 0
Camera 6 CIF Half D1 D1 0
Camera 7 CIF Half D1 D1 15
Camera 8 CIF Half D1 D1 28
Camera 9 CIF Half D1 D1 0
Camera 10 CIF Half D1 D1 0
Camera 11 CIF Half D1 D1 0
Camera 12 CIF Half D1 D1 0
Camera 13 CIF Half D1 D1 0
Camera 14 CIF Half D1 D1 0
Camera 15 CIF Half D1 D1 0
Camera 16 CIF Half D1 D1 0
OK
Cancel
Default

(8) Mask

Mark an area on the screen to disregards the motion in the marked area and to only monitor outside the marked area. Enable the **Enable Mask** and click-and-drag an area on screen that user wants to mask. To clear all mask area, click **Clear** button. To inverse the mask area, click **Invert** button. The original selected area will exchanged with un-selected area. To show the mask area on preview screen, enable **Show Mask**. The mask is able to see on the screen only when preview screen is in single screen mode

3.4 Network Setup

Click **Default** will back to the factory default value.

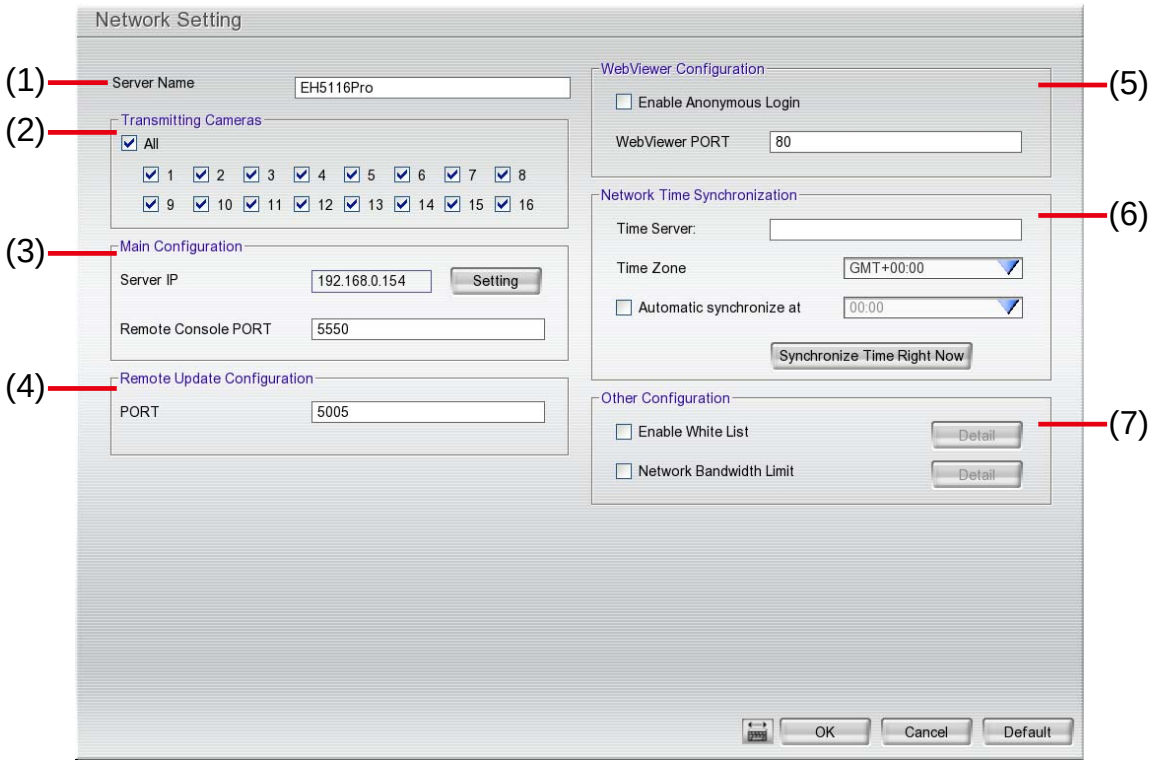

(1) Server Name

Assign a name for the DVR unit. Alphabet letters and numbers only.

(2) Transmitting Cameras

Select and click on the camera number in the Transmitting Camera section you want to make it accessible via internet using WebViewer, Remote Console, PDA Viewer and JAVAViewer (still image). To select all the cameras, enable the **ALL** check box.

(3) Main Configuration

Set the DVR IP address and **Remote Console Port**. You need this when accessing DVR server from the remote location via internet. Click **Setting** to setup DVR IP.

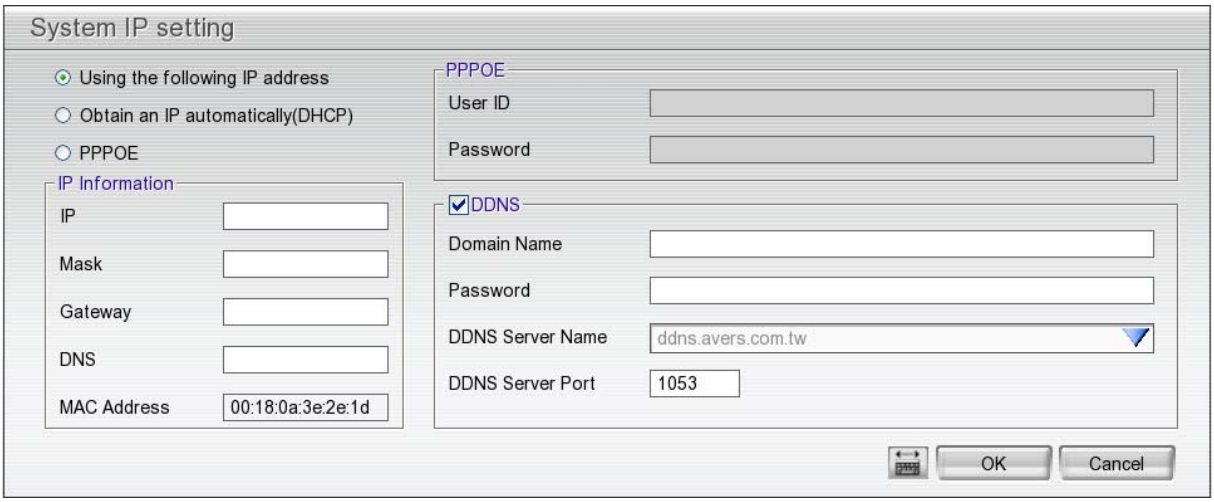

- **Using the following IP address:** Assigns an IP address for the DVR system. Fill in the IP related parameters in **IP information** section.
  - **IP:** Assign a constant IP address which a real IP address gives from ISP to DVR system.
  - **Mask:** It is a bitmask used to identify the sub network and how many bits provide room for

host addresses. Enter the subnet mask of the IP address which user has assigned to DVR system.

- **Gateway:** A network device acts as a passageway to internet. Enter the network gateway IP address
- **DNS:** Domain Name Server translates domain names (such as www.abb.com.tw) to IP addresses. Enter the IP address of DNS if it is available.
- **MAC Address:** An identifier hardware address of DVR unit that is assigned by the manufacturer for identification. User don't need to fill in, it will generated by system automatically.

- **Obtain an IP automatically (DHCP):** Assign the IP address by local DHCP server to DVR system.
- **PPPOE:** Point-to-Point Protocol over Ethernet is a network protocol for encapsulating PPP frames in Ethernet frames. It is used mainly with ADSL services. If your network is using ADSL service connecting to internet, and then, select PPPOE mode. Enter **User ID** and **Password** that is given by your ISP for PPPOE connecting authority.
- **DDNS:** DDNS(Dynamic Domain Name Service) is a data query service mainly used on the Internet for translating domain names into Internet addresses. Users can register their own domain name on **http://ddns.avers.com.tw**. (See Appendix A)
  - **Domain Name**

    Enter the domain name that user has registered.
  - **Password**

    A password use to access DDNS that user has setup when register the domain name
  - **DDNS Server Name**

    Select your DDNS server. The default only has one DDNS server now. It may provide more DDNS in future.
  - **DDNS Server Port**

    Fill in the port that connects to DDNS server. Default is 1053.

(4) Remote Upgrade Configuration

A port is using for the remote firmware upgrade through network.

(5) WebViewer Configuration

Activate **Enable Anonymous Login** to remotely access the DVR server without the need of password. Fill in the **WebViewer PORT** for remote accessing connection.

(6) Network Time Synchronization

Adjust the DVR system time same as network time server. Fill in the **Time Server** IP address or domain name and select the **Time Zone**. User can enable **Automatic Synchronize at** to set automatic synchronize time on a daily basis. Or, user can click **Synchronize Time Right Now** to adjust time right away.

(7) Other Configuration

- **Enable White List**

  An access permit list for the remote accessing of DVR server. Enter the IP address and click **Add**. Or, enter a range of IP address and click **Add**. To delete the IP from the list, select the IP and click **Delete** button. To reset the input, click **Clear** button.

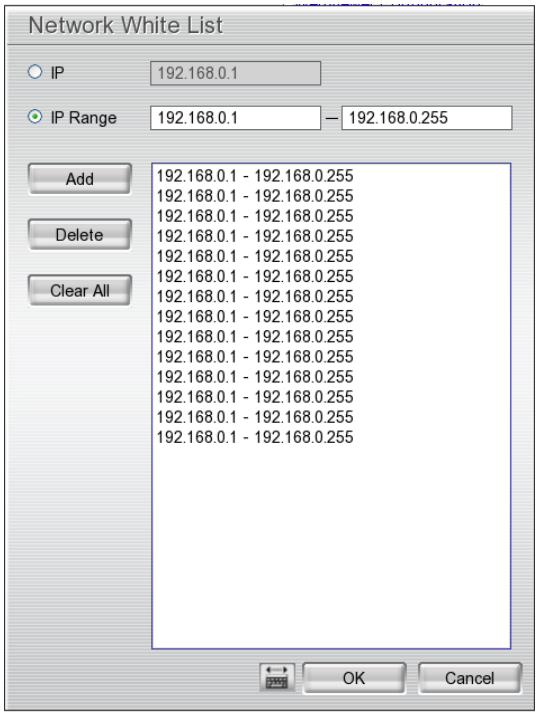

- **Network Bandwidth Limit**
  By Channel: Set the network bandwidth by each channel.
  All: Set the total network bandwidth consumption limit.

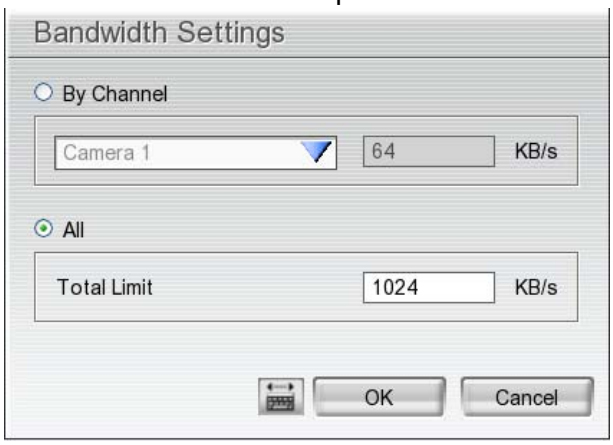

3.5 Schedule Setting

Schedule to record, enable network, reboot and disable alarm of all the cameras either weekly or one time. The number from 00 to 23 represent the time in 24-hour clock. The left most column display the days in a week.

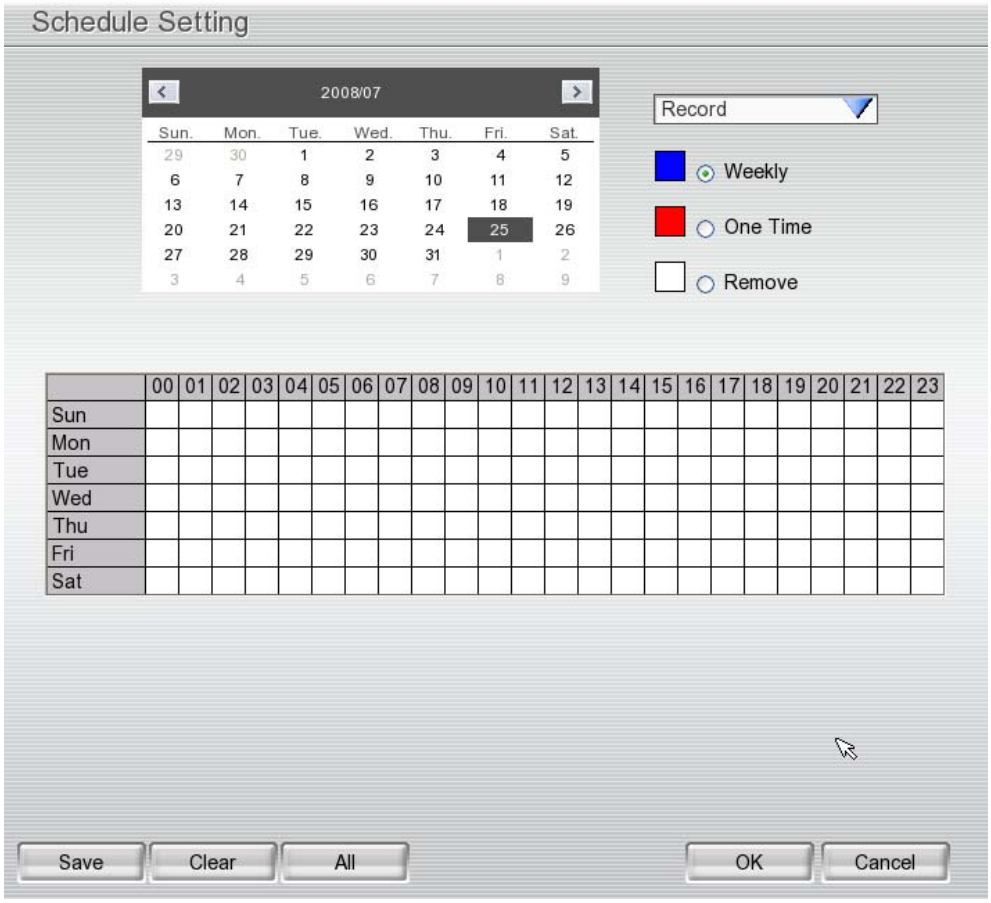

To Set the Schedule Setting:

1. Select the date in the calendar. Use ◂ and ▸ buttons to shift the calendar to the left or right.
2. Select the condition you want to schedule in the drop down list.
   - **Record**
     Activate all the cameras to start video recording at the set time based on the Recording setting
   - **Enable Network**
     Activate DVR remote system to access at the set time. After the appointed time, the Network function will be disabled. If the Network function is already enabled, the Network function will not be disabled when the appointed time has ended.
   - **Reboot**
     Restart the PC at the appointed time.
   - **Disable Alarm**
     Deactivate the alarm at the set time temporarily.
3. Set the schedule as weekly or one time. Click ⊙ to make a selection.
4. Click on the blocks to set the schedule or click **All** to select all. To un-select the specific schedule blocks, click the **Remove** and click blocks to un-select. To store the setting, click **Save**. To remove the settings, click **Clear**.
5. To end Schedule Setting, click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

3.6 Backup Setup

In the Backup Setting dialog box, the number from 00 to 23 represent the time in 24-hour clock. The numbers from 01 to 16 represent the camera number. When you back up the file, you may find Qplayer application included in the backup folder. User need to execute the Qplayer installation on PC for playback.(see also Chapter 3.6.1)

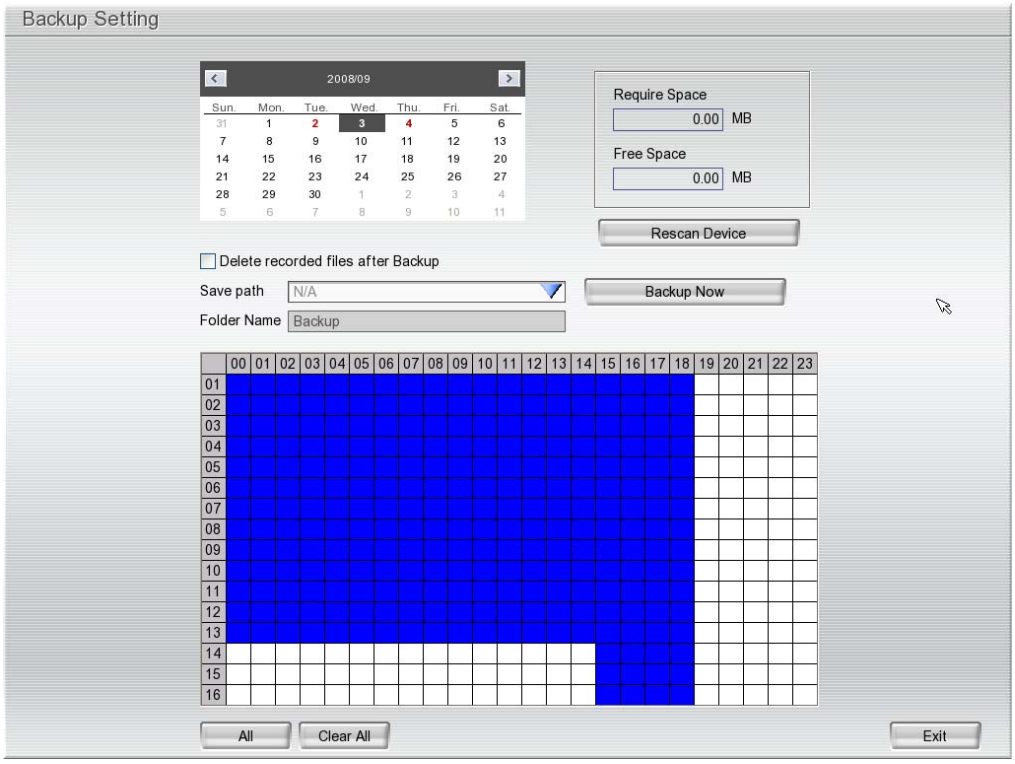

1. Select the date of the recorded file in the calendar you want to backup. Use ◂ and ▸ buttons to shift the calendar to the left or right.
2. In the table below, click on the blue block to select the recorded file or click camera (01~16) or time (00~23) to select the whole row or column. The blue block turns red when it is selected. The block that appears in white doesn't have data. If you want to set the specific time, right-click on the selected block. Then, set the time to start and end.
3. Check the space need for backup beside the calendar. Click **Rescan Device** to calculate the space for backup.
   - **Require Space**: Show the total size of the backup file.
   - **Free Space**: Show the available storage space
4. If you do **NOT** want to keep the recorded file in the storage folder, enable **Delete files after Backup** check box.
5. Select the backup device – USB disk or DVD-ROM device.
6. DVR system will give **Folder Name** automatically.
7. Click Backup Now to start archiving the selected file.

3.6.1 Using QPlayer to Playback Backup Video

You can playback the backup files using QPlayer applications on the PC. When you back up the recorded file, QPlayer applications are automatically included in the backup folder. With QPlayer, it is the same as in Playback mode and supports different split screen types to view all the video at the same time. The only difference is that there are no Preview and Playback buttons.

To run the application, go to backup folder and double-click **install_player** to intall QPlayer. After installation, double-click **QPlayer** icon on the PC desktop.

Name	Function
(1) Exit	To close the application.
(2) Split Screen Mode	Select from six (6) different split screen type to playback the recorded video file of all the camera, or one camera over the other or alongside on a single screen.
	- If there are only 8 cameras, you won't be able to switch to 16, and 13 split screen mode. - To zoom in an area on the screen, **Right** click and **Drag** a square on the area you want to enlarge.
(3) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(4) Hour Buttons	Select and click to playback the recorded video file on the specific time frame.
	The Hour buttons represent the time in 24-hour clock. The blue bar on top of the hour button indicates that there is a recorded video file on that period of time. While the red bar indicates that you are currently viewing the recorded video file.
(5) Playback Control Buttons	**Begin:** Move at the beginning of the recorded video file. **Previous:** Go back to the previous frame. **Slower:** Play the recorded video file at the speed of 1/2X or 1/4X. **Rewind:** Wind back the recorded video file. **Pause:** Briefly stop playing the recorded video file. **Play:** Play the recorded video file. **Faster:** Play the recorded video file at the speed of 2x, 4x, 8x, 16x, or 32x. **Next:** Go to the next frame. **End:** Go to the end of the recorded video file.

Name	Function
(6) Archive	Select the date on the calendar and the time from 00 to 23 to where to start playing the recorded video file. – **OPEN FILE:** user can open the recorded file from HDD – **Channel 01~ 16**&**Channel 17 ~ 32:** Switch to different channel group of playback calendar. – **Day Light Saving:** the playback calendar will show the available video records during day light saving time period. 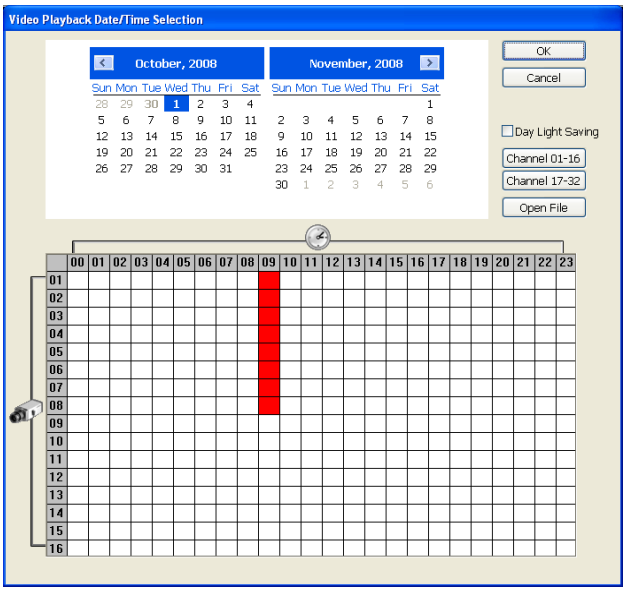

The numbers from 00 to 23 represent the time in 24-hour clock. The numbers from 01 to 16 represent the camera ID. The blue colored column indicates that there is a recorded video file on that period of time. While the red colored column indicates on where to start playing the recorded video file.

(7) Status bar	Display the recorded date, time and play speed.
(8) Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(9) Language	Switch to different UI language
(10) Export	Export includes Snapshot, Print, and Output Video Clip function. ■ **Snapshot:** Capture and save the screen shot either in *.jpg format. ■ **Print:** Print the screen shot. ■ **Output Video Clip:** Save the segmented file in *.dvr format(see also Chapter 3.6.2).
(11) Segment	Keep a portion of the recorded video(see also Chapter 3.6.2).

Name	Function
(12) Full screen	View in full screen mode. To return, press the right button of the mouse or **ESC** on the keyboard or click the arrow icon. When you switch to full screen in multiple-screen mode, **Left** click to toggle to only display one of the video in the multiple-screen mode or all.
(13) Find Next	Search for the next event or changes in the motion detector frame. You can use this when you are using Intelligent Search or Event Search function.
(14) Event Search	Search from the recorded activities that were recorded in event log (i.e., Sensor, Motion, Video Loss). (See also Chapter 3.6.4)
(15) Intelligent Search	Search the changes in the motion detector frame (See also Chapter 3.6.5).
(16) Audio	Enable/disable volume
(17) De-interlace	To enhance the video quality. Set the de-interlace mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.
(18) Watermark	To verify the playback video has not been modified To verify the playback video doesn't been modified. Click to check the video. Watermark verification windows will show up as following:

3.6.2 To Cut and Save the Portion of the Recorded Video

1. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to start the cut. Then, click **Segment** to set the begin mark.

2. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to end the cut. Then, click **Segment** to set the end mark. To cancel segmentation, click **Segment** button again.

3. Click **Export** > **Output Video Clip** button to save the wanted portion.
4. In the **Save As** dialog box, locate on where user wants to save the file, type the filename, and select the video format.

3.6.3 To Search Using the Visual Search

1. Click **Visual Search**.
2. In the Visual Search Setting dialog box, select the Camera number and the date. Then click **OK**.

3. When a series of frames appear by date, click on the frame to display another series of frames and search by every Hour of that date, every 3Minutes of that hour, every 10 Seconds of that minute, every Second of that 10 seconds. To go back, click. To view from the selected frame and close event search, click.

3.6.4 To Search Using the Event Search

1. Click on the video screen on where you want to search.
2. Click **Event Search**. The Event Search text (red) would appear at the lower left corner of the screen.
3. In the Event Search Setting dialog box, check the type of condition you want to search. The video search would stop at the frame that matches the condition. To keep on searching click.
4. You may also set to search and list all the result. Set the **Begin Time**, **End Time** and **Searching Interval**. Then, click **OK** to start searching.
5. When the Event list appear, click and select the item you want to view.

3.6.5 To Search Using the Intelligent Search

1. Click on the video screen on where you want to search.
2. Click **Intelligent Search**. The Intelligent Search text (red) would appear at the lower left corner of the screen.
3. When the Intelligent Search Setting dialog box and motion detector frame appear, you may adjust the sensitivity bar and the motion detector frame size and location. To set motion detector frame size and location, left click and drag on the screen. Then, click **OK** to start searching. The video search would stop at the frame that matches the condition. To keep on searching click . You may also set to search and list all the result. Just check the **List** box. In the Search Duration section, set the **Begin Time**, **End Time** and **Searching Interval**. Then, click **OK** to start searching.

3.7 Sensor Setting

The I/O device must be installed to use this function.

1. Click the drop-down list and select the sensor ID number.
2. Enter sensor name in **Name** column.
3. The system automatically detects the card and input number. In the **Content** section, enter **Description** of sensor.
4. In the test section, click **Test** to check the sensor status. **Red** is high and **Green** is low.
5. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

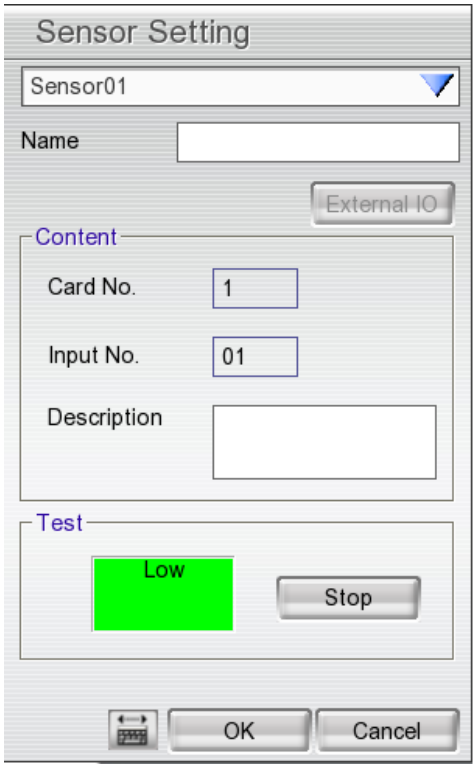

3.8 Relay Setting

The I/O device must be installed to use this function.

1. Click the drop-down list and select the relay ID number.
2. Enter relay name in **Name** column.
3. The system automatically detects the card and input number. In the Content section, enter **Description** of relay.
4. In the test section, click **Test** to trigger relay. **Red** is high and **Green** is low.
5. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

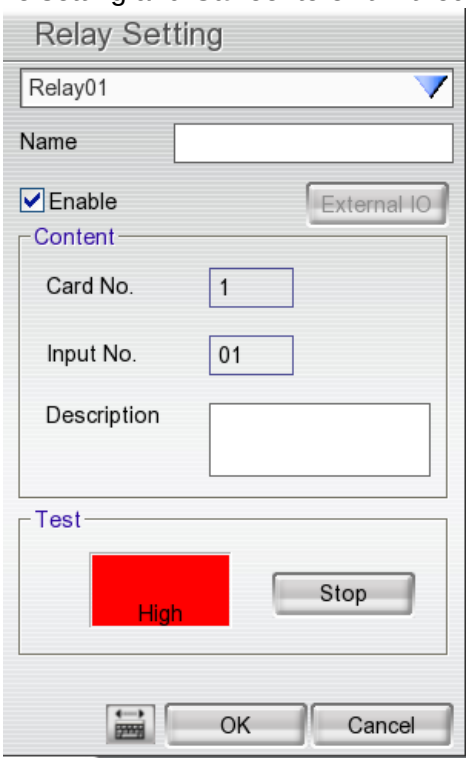

3.9 Alarm Setting

In the Alarm Setting dialog box, click **Add** to insert and set new alarm setting, click **Delete** to remove the selected alarm setting, click **OK** to exit and save the setting, **Cancel** to exit without saving. Click **Default** will back to factory default value.

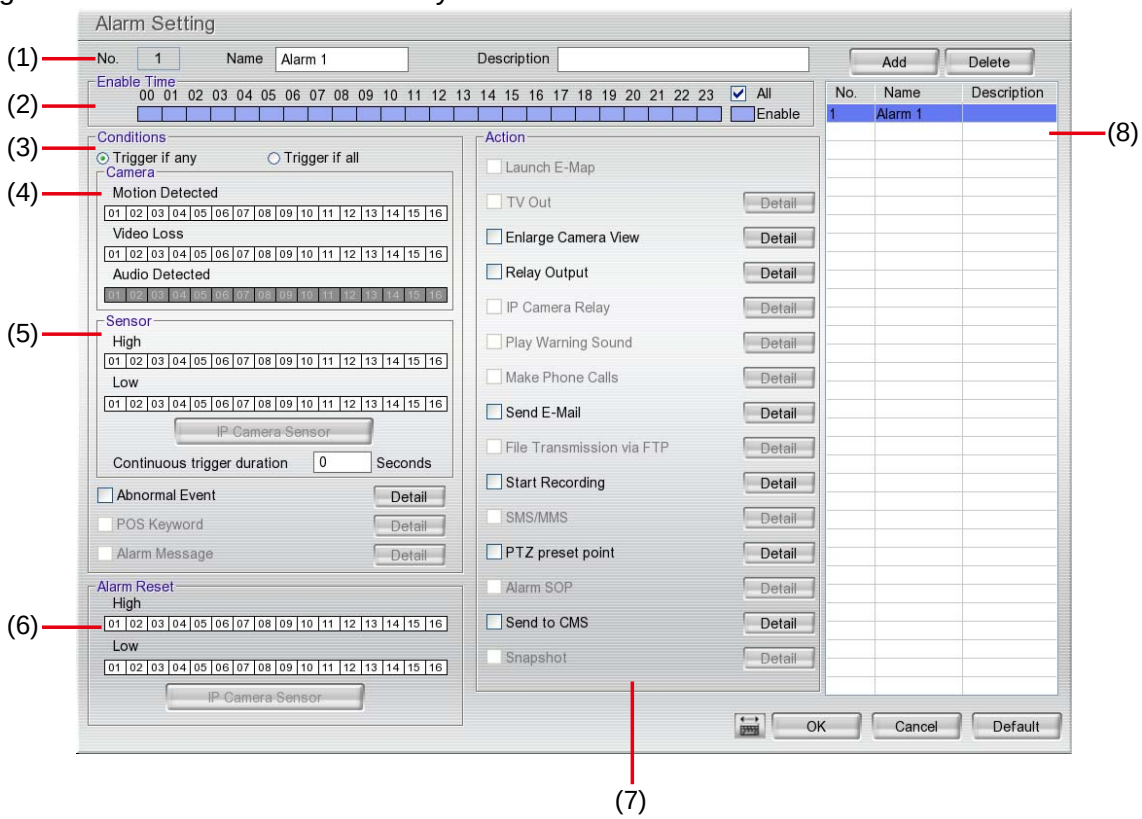

1. Click **Add** to insert and set a new alarm setting. Click the items in the **(8) Alarm Setting List** if you want to modify the alarm setting.
2. In **(1) No./Name/Description** enter alarm name and description. Alarm **No.** will be created by DVR system.
3. In **(2) Enable Time**, the number from 00 to 23 represent the time in 24-hour clock. Select the time and click the block you want to activate or deactivate the alarm function. When it is deactivated the color of the block turns white.
4. In **(3) Conditions**, you can set "**Trigger if any**" to activate if it falls to one of the conditions or "**Trigger if all**" to activate if it falls to all conditions.
5. In **(4) Camera** section, select and click on the camera number (01 to 16) in **Motion Detected** and **Video Loss** to set the condition for the system to alarm.
6. In **(5) Sensor**, select and click on the sensor number to set the condition for the system to alarm. If the sensor normal status is high, set the sensor condition to low.
   - **IP Camera Sensor:** To adjust sensor high/low that is connected on the IP camera.
   - **Abnormal Event:** Enable/disable to set the condition of the event for system to alarm.

- **Reboot:** when the DVR system reboot without abnormal condition, the system will send out the alarm message.
- **Abnormal Reboot:** when the DVR system reboot in irregular condition, the system will send out the alarm message.
- **Recording is switched off:** when the recording has been stopped, the system will send out the alarm message.
- **Network is switched off:** when the network connection of DVR system is lost, the system will send out the alarm message.
- **Hard Disk failed:** when the hard disk doesn't work normally, the system will send out the alarm message.

- **Continue trigger duration:** Set a time period that when sensor has been trigger and stay in the same status for that period, then the alarm will be sent out.

7. In **(6) Alarm Reset**, click the camera number to set the reset condition of alarm. Once alarm is reset, all alarm action will stop at the moment. If the sensor normal status is high, set the alarm reset condition to low.
8. In **(7) Action**, you may now set the alarm action for the system to perform when the alarm condition is activated.
   - **Launch E-Map**
     Display mini E-map screen.
   - **Enlarge Camera View**
     Switch to only display video in Preview mode from where the alarm is activated.
     a. Select the camera from drop down list to specify which camera video to be enlarged on screen when the alarm is triggered.
     b. **Retrieve time:** set the waiting duration before system switching back to original Preview mode. If the retrieve time is un-mark, the alarm video will keep enlarging until user switch back to Preview mode manually. The retrieve time range is 0~ 600 seconds.

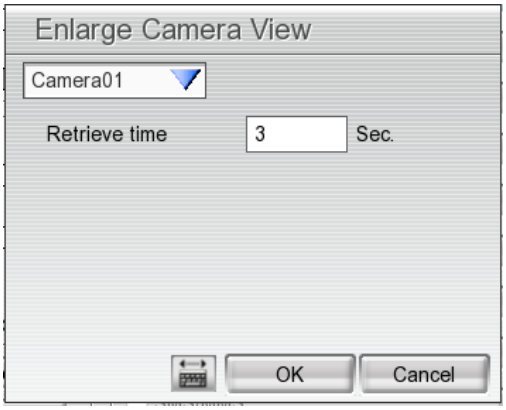

- **Relay Output**

  Set to enable/disable the relay operation when the alarm is activated and to extend additional time in second before it stops the relay operation.

  1. Beside the Relay Output check box, click **Detail**.
  2. In the Alarm Relay dialog box, select from the available relay list and in the ON column, set to enable/disable the relay operation when the alarm is activated.
  3. In the Retrieve time check box, you may enable/disable to extend the relay operation time and set the duration in second.
  4. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

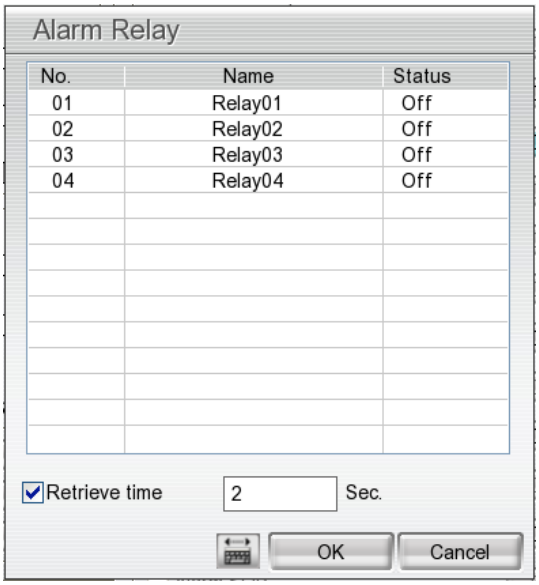

- **IP Camera Relay**

  Set to enable/disable the relay operation when the alarm is activated.

- **Play Warning Sound**

  Play alarm sound.

- **Send E-mail**

  Send an electronic text message. Beside the Send Email check box, click **Detail**.

  In the E-mail Setting dialog box, click **OK** to exit and save the setting and **Cancel** to exit without saving the setting.

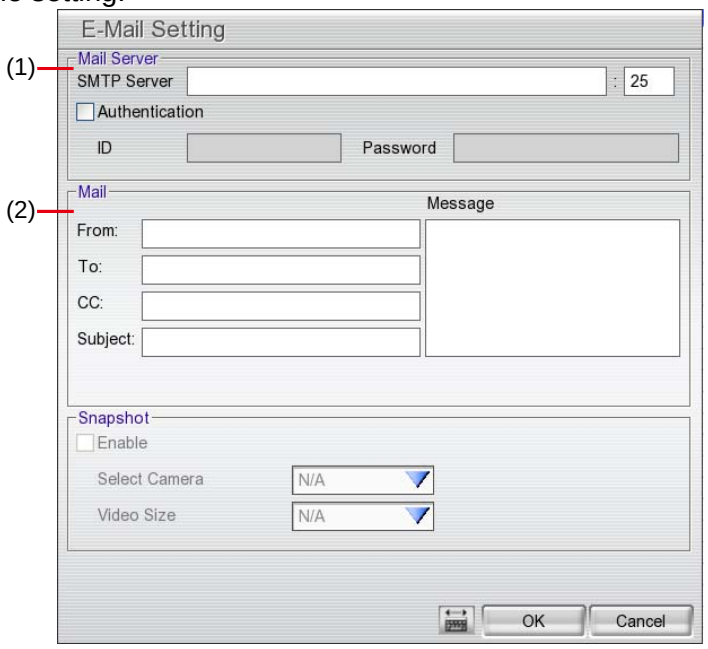

(1) Mail Server

Enter the **SMTP Server** and **port**. If your e-mail system requires user identification, enable **Authentication** check box and enter **ID** and **Password**.

(2) Mail

Fill the mailing information.

From: Enter the sender e-mail address.

To and CC: Enter the recipient email address and separate it with comma or a semicolon (;).

Subject: Enter the message title.

Message: Type the message.

- **Start Recording**

Record the video from the selected camera.

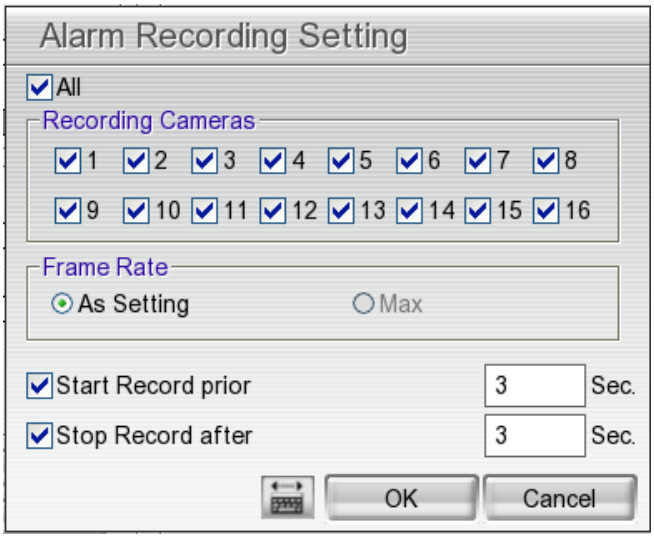

1. Beside the Start Recording check box, click **Detail**.
2. In the Alarm Recording Setting dialog box, select the camera to enable/disable video recording. Enable **All** to select all cameras.
3. In the Frame Rate selection, select **As Setting** to record the number of frames based on the Recording Setting.
4. In the **Start Record prior** text box, mark and set the number in second for the program to begin recording after the alarm has been trigger. The time range is 1~10 seconds.
5. In the **Stop Record after** text box, mark and set the number in second for the program to continue recording after the alarm has ended. The time range is 1~999 seconds. If user doesn't mark and set the time, the alarm recording will continue recording until alarm is reset.
6. Click **OK** to accept the new settings and **Cancel** to exit without saving.

- **PTZ preset point**

Position the PTZ camera based on the preset point setting. Beside the PTZ preset point check box, click **Detail**. In the Trigger PTZ Preset Setting dialog box, select the PTZ camera number then select the **Enable** check box. Select the position of the PTZ camera when the alarm is activated and ended. For the PTZ camera end point, user can also select on preset position or **Auto Pan** between preset position groups.

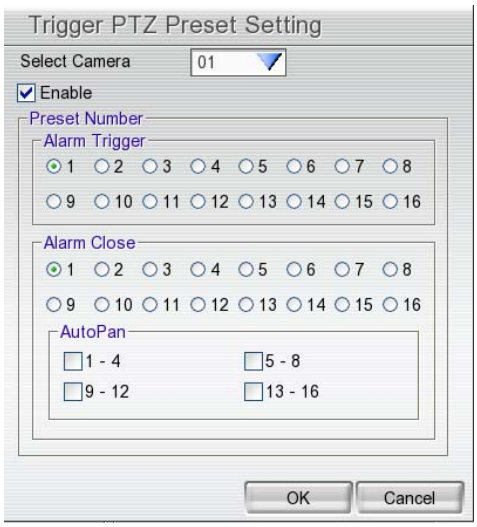

- **Send to CMS (Central Management System)**

Enable/disable the selected camera to send video to CMS when the alarm is activated. Beside the Send to CMS check box, click **Detail**. In the CMS Setting, select the camera to enable/disable sending the video to CMS. Enable **All** to select all cameras. Then, click **OK** to accept the new settings and **Cancel** to exit without saving.

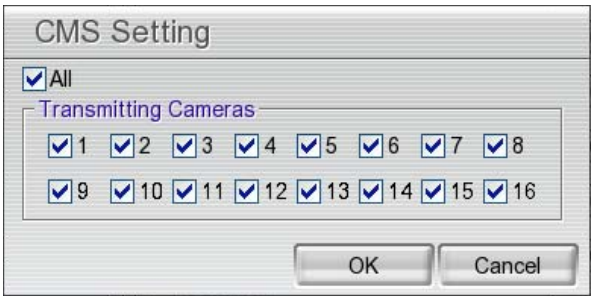

3.10 User Setting

Only administrator level authority can access User Setting. The maximum user accounts are 32.

In the User Setting dialog box, click **Add** to insert a new user, **Delete** to remove the selected user, **Edit** to modify the user control right, **OK** to exit and accept the setting, and **Cancel** to exit without saving the setting.

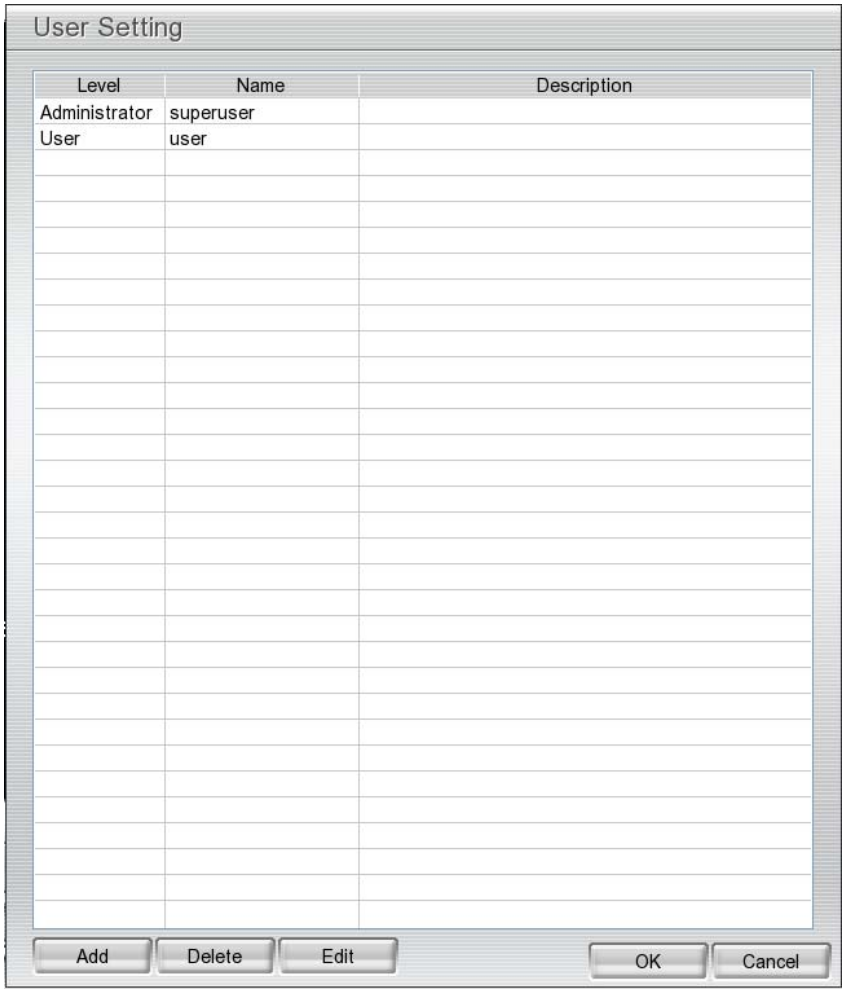

To Add a User Account:

1. In the User Setting dialog box, click **Add**.
2. Select and fill in the following information.

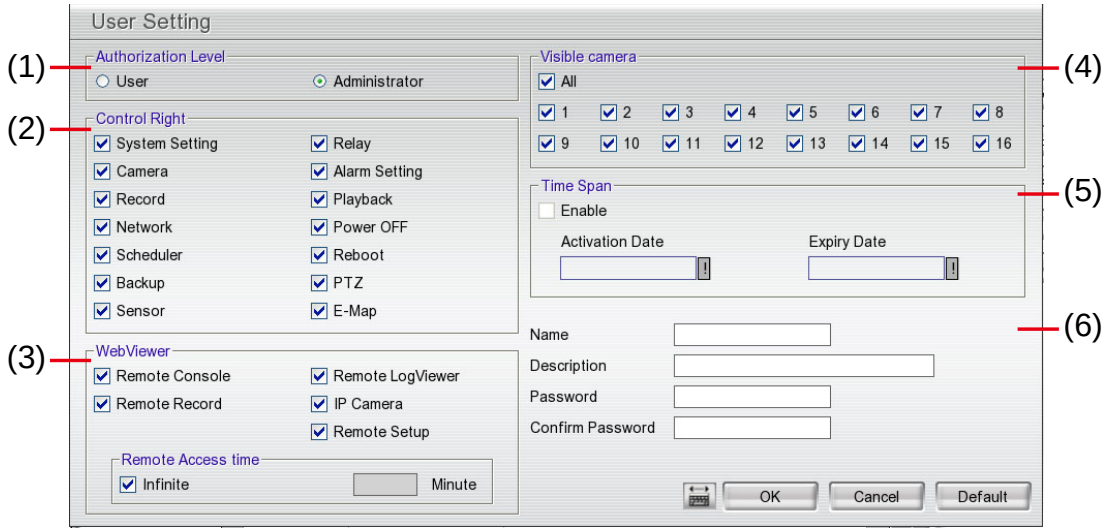

(1) Authorization level

Select the status of the user.

(2) Control Right

Enable the items that would allow the user to access.

(3) Web Viewer

Enable/disable Web Viewer control right that allow the user to operate from a remote location using internet explorer.

- **Remote Console**
  Allow the user to remote modify DVR system setting.
- **Remote LogViewer**
  Allow the user to view the event log from remote site.
- **IP Camera**
  Enable/disable user to add new IP camera when using the Web Viewer.
- **Remote Access Time**
  Enable **Infinite** check box to access DVR without time limit. If you want to set time limit, enter the number of minutes in **Minute** text box.

(4) Visible Camera

Select the camera number that would allow the user to access or view. To select all the cameras, enable the **ALL** check box.

(5) Time Span

Set the user account a specific time period that user only can use given account to login DVR program in that specific period. Mark **Enable** check box and select the **Activation Date** and **Expiry Date**.

(6) Name

Enter the user name.

Description

Enter the user description.

Password

Enter the user password.

Confirm Password

Enter the same user password for confirmation.

Chapter 4 Using the UPC to Playback Backup File

4.1 Recommended system requirements

- ☐ Pentium®4 2.4GHZ or above
- ☐ Windows®2000/ XP/Vista
- ☐ DDR 256 MB
- ☐ Graphic function must support DirectDraw
- ☐ Audio card or built-in
- ☐ Speaker
- ☐ 1 available USB2.0 port

4.2 Installing the USB Playback Console

To install the USB Playback Console:

1. Place Installation CD into the CD-ROM drive. When the installation main screen appears, click **Install USB Playback Console** and then follow the on screen instructions

2. Select the language you prefer

3. Click **OK** to install the application
4. Click **Exit** to close the installation main screen.
5. You may now connect the external USB storage device that has saved recorded files to PC.

4.3 Familiarizing the Buttons in USB Playback Console

To run the application, click the icon on the PC desktop

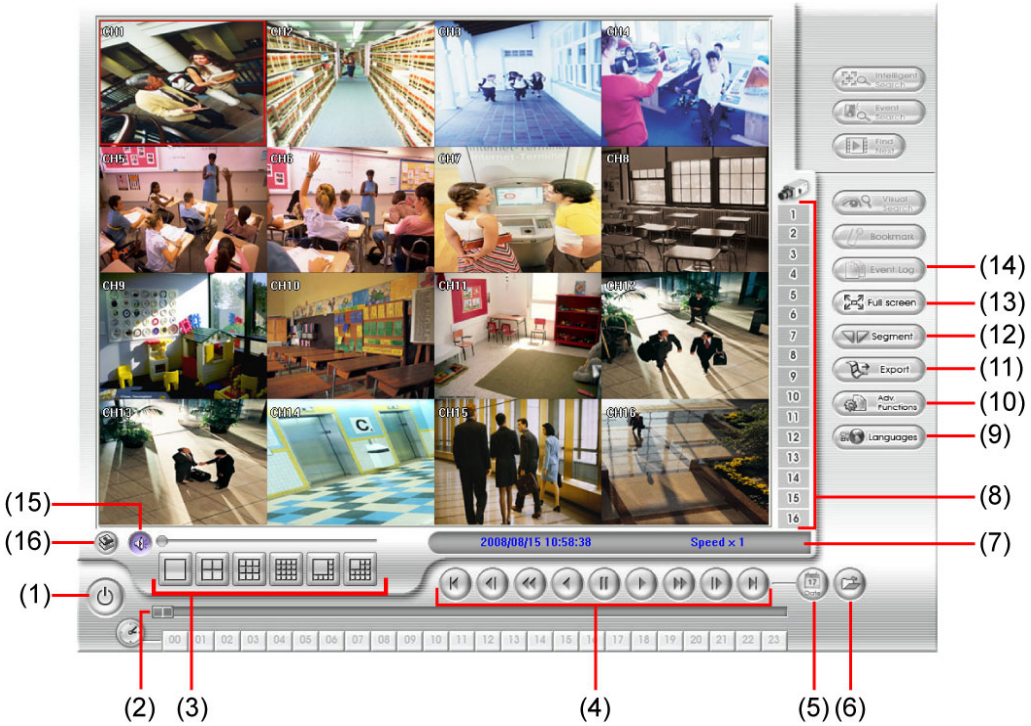

Name		Function
(1)	Exit	Exit/Minimize the application or chose Cancel to go back to the application. **About:** shows DVR application version information. 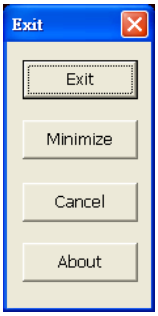
(2)	Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(3)	Split Screen Mode	Select from different screen view to playback the recorded video file of the entire camera or one camera on screen.
(4)	Playback Control Buttons	**Begin:** Move at the beginning of the recorded video file. **Previous:** Go back to the previous frame by frame. **Slower:** Play the recorded video file at the speed of 2x, 4x, or 8x. **Rewind:** Wind back the recorded video file. **Pause:** Briefly stop playing the recorded video file. **Play:** Play the recorded video file. **Faster:** Play the recorded video file at the speed of 2x, 4x, 8x, or 16x

Name	Function
(4) Playback Control Buttons	**Next:** Go to the next frame by frame. **End:** Go to the end of the recorded video file.
(5) Date	Select the date on the calendar and the time from 00 to 23 to where to start playing the recorded video file.
(6) Open File	To select the video file source for playing. - **DVR Recorded File (HD):** To playback the recorded video from the hard disk which was recording video on the DVR system. (see also Chapter 4.3.2) - **Backup File(.dvr):** The file is backup and save in *.dvr file format. (see also Chapter 4.3.3)
(7) Status bar	Display the recorded date, time and play speed.
(8) Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(9) Language	To switch DVR application UI language.
(10) Adv. Function	Advanced function is including : ■ **HDD Backup:** to call out HDD Backup application. (see also Chapter 4.3.4) ■ **iEnhance:** to call out iEnhance application. (see also Chapter 6)
(11) Export	Export includes Snapshot, Print, and Output Video Clip function. ■ **Snapshot:** Capture and save the screen shot either in *.jpg or *.bmp format. ■ **Print:** Print the screen shot. ■ **Output to AVI:** Save the segmented file in *.avi format
(12) Segment	Keep a portion of the recorded video (see also Chapter 4.3.1)
(13) Full screen	Use the entire area of the screen to only display the video. To return, press the right button of the mouse or **ESC** on the keyboard. When you switch to full screen in multiple-screen mode, Left click to toggle to only display one of the video in the multiple-screen mode or all.
(14) Event Log	When playback.*dvr file from hard disk, the event log button will be enabled. The system event logs will be included when backup. Using event log viewer to view all logs. To filter the records, select and click the option button to only display Event, System, Operation, Network or POS.
(15) Sound /Sound bar	Turn on and off the sound Increase and decrease the volume
(16) Watermark	To call out ImageVerification application. (see also Chapter 5)

4.3.1 To Cut and Save the Portion of the Recorded Video

5. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to start the cut. Then, click **Segment** to set the begin mark.

6. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to end the cut. Then, click **Segment** to set the end mark. To cancel segmentation, click **Segment** button again.

7. Click **Export** > **Output Video Clip** button to save the wanted portion.
8. In the **Save As** dialog box, locate on where user wants to save the file, type the filename, and select the video format.

4.3.2 Playback DVR Recorded File from Hard Disk

1. Please have the hard disk which containing of recorded video data install on your PC or using external USB enclosure to connect to your PC.
2. Click **Open File** button
3. Select **DVR Recorded File(HD)** and click **OK**.
4. Select the hard disk drive from **Select Disk** window and click **OK**.

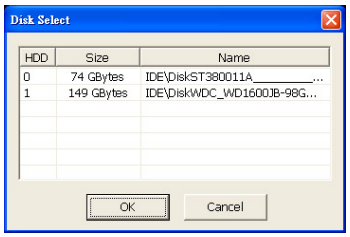

5. And then, Playback Date/Time Selection window appears. Select the date and time and click **OK**.

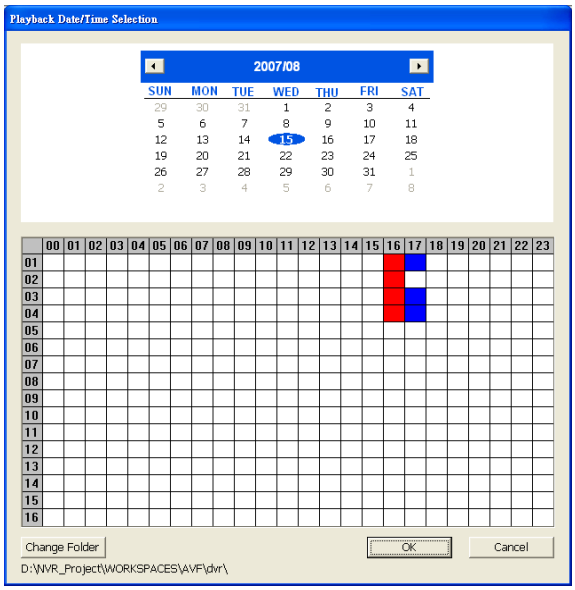
Playback Date/Time Selection
2007/08
SUN MON TUE WED THU FRI SAT
00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Change Folder
OK
Cancel
D:\NVR_Project\WORKSPACES\AVF\dvr\

4.3.3 Playback Backup File(*.dvr)

1. Click Open File button.
2. Select **Backup File(*.dvr)** and click **OK**.
3. Locate the backup file folder and click **OK**.

> When open the backup video file, just locate the where backup file folder is.

4. And then, Playback Date/Time Selection window appears. Select the date and time and click **OK**.

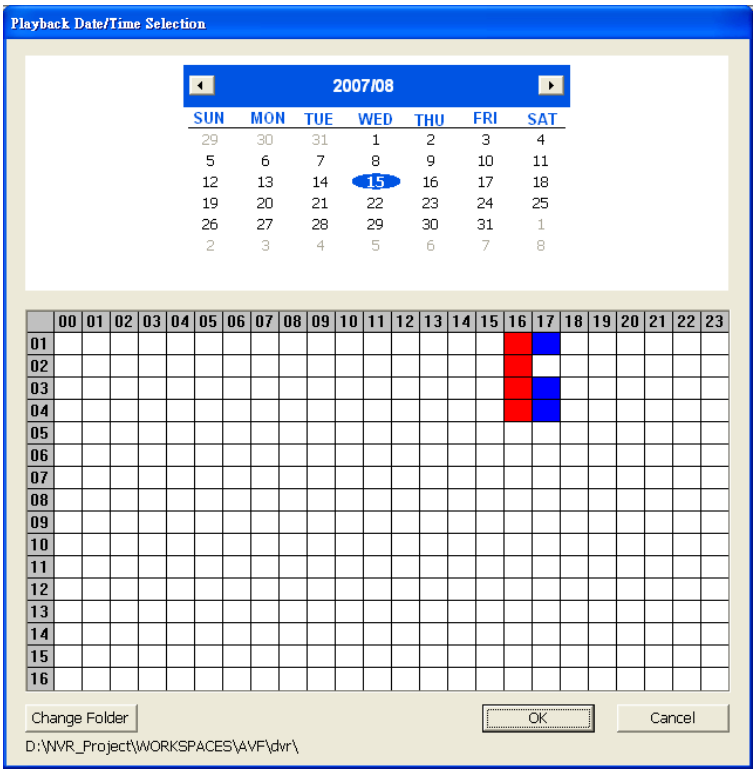
Playback Date/Time Selection
2007/08
SUN MON TUE WED THU FRI SAT
00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Change Folder
OK
Cancel
D:\NVR_Project\WORKSPACES\AVF\dvr\

4.3.4 To Backup Recorded File

HDD backup function allows user to backup recorded file from hard disk.

1. Click **Adv. Function** → **HDD Backup** on USB Playback Console UI.
2. Select the source hard disk.

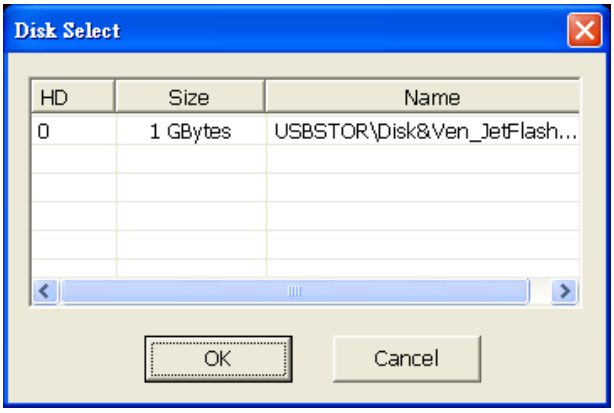

3. In Backup date/time selection windows, select the date and time. 00-24 represents hours and 01-16 represents channels. Blue block means there has recorded file. Red block means the block has been selected. Click-and-drag can select multiple block at once.

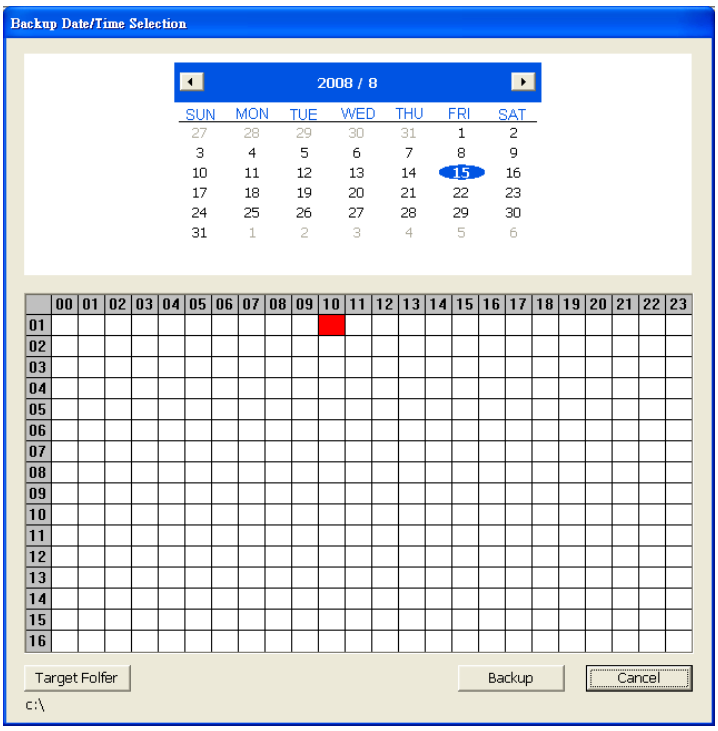

4. Click **Backup** to start backup file.
5. When backup complete, the complete information windows will display.

Chapter 5 ImageVerification

Image Verification is a watermark-checking program to identify the authenticity of a saved image (e.g. by snapshot). This program can only verify uncompressed bmp image files.

5.1 To Run the ImageVerification

1. To run the ImageVerification application, click the **Watermark** button on USB Playback Application main interface.
2. In the ImageVerification screen, click **Load Source Image** and locate the image source.
3. Click **Verify Image** to begin the process.
4. Check the result in the **Processed Image** screen. If the picture is unmodified, the image in the **Source Image** and **Processed Image** screen would be exactly the same. If the picture is being modified, a warning dialog box would prompt and the modified area is highlighted.

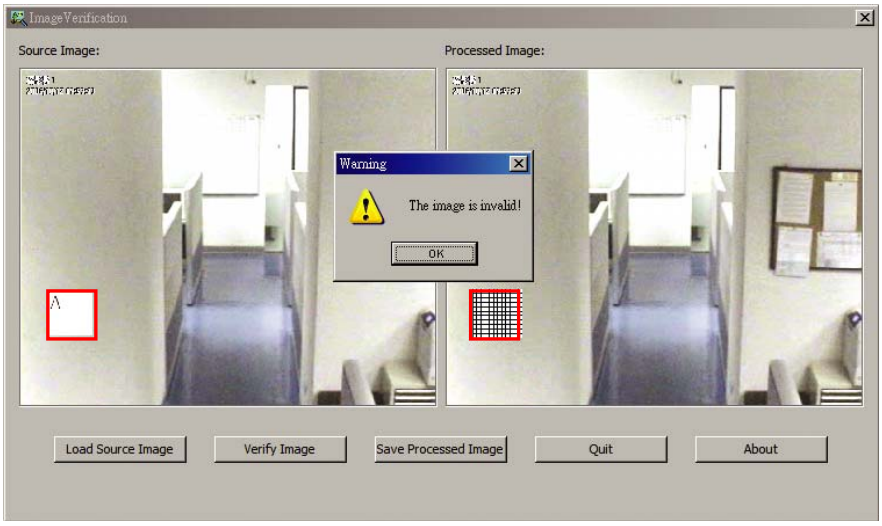

Chapter 6 iEnhance

The bundled iEnhance is a video editing tool and can only be used with *.dvr video file. It allows you to adjust the video picture quality, segment and save the selected portion of the video, zoom in and out the image, and print or save the screen shot. You can also save the setting and apply it on other files.

To run iEnhance application, click **iEnhance** button on USB Playback Console interface.

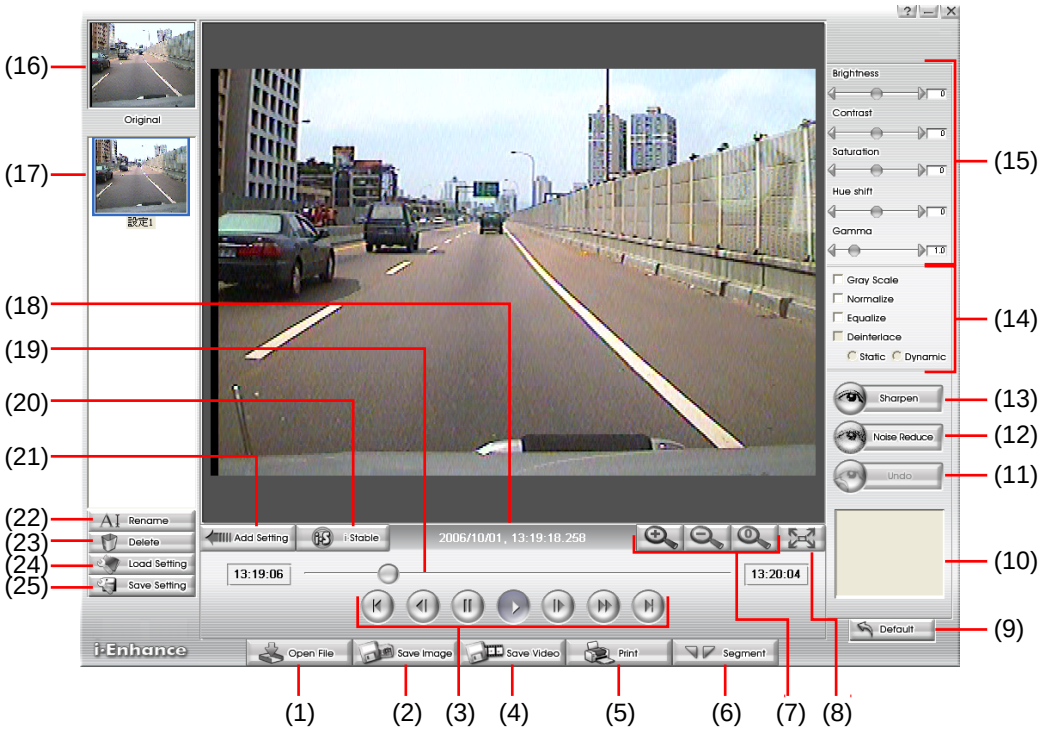

Name	Function
(1) Open File	Access *.dvr and .*avf video file.
(2) Save Image	Capture and save the screen shot in *.bmp format.
(3) Playback Control Buttons	**Begin:** Move at the beginning of the video file. **Previous:** Go back to previous frame. **Pause:** Briefly **stop** playing the video file. **Play:** Play the video file. **Next:** Go to the next frame. **Faster:** Play the video **file** at the faster speed. **End:** Go to the end of the video file.
(4) Save Video	Save the edited or segmented video in *.avi format.
(5) Print	Print the screen shot.
(6) Segment	Mark the beginning and the end of the selected portion of the video. Two triangle marks will appear on the slider. To cancel video segmentation, click this button again.
(7) Zoom Buttons	Enlarge, reduce, and set the image back to normal size.
(8) Full Screen	Use the entire screen to only display the video.

Name	Function
(9) Default	Set the video back to original state and delete all the changes in the history box.
(10) History Box	List all the actions.
(11) Undo	Delete the last action.
(12) Noise Reduce	Adjust the softness and repair the damaged colors.
(13) Sharpness	Improve the overall image by enhancing edges. This gives the image more depth.
(14) Effects	Gray Scale: convert the image into black and white (monochrome). Normalize: adjust the brightness intensity. Equalize: automatically adjust the images that are too dark. De-interlace: smooth out the overlying frames. Static: de-interlace for motionless scene. Dynamic: de-interlace for moving scene.
(15) Picture Adjustment	Adjust the Brightness, Contrast, Saturation, Hue and Gamma.
(16) Original Screen	Display the original state of the image.
(17) Temporary Setting Block	Display the sample settings. Click the sample to apply the setting on the current video.
(18) Status Bar	Display the date, and time of the video.
(19) Progress Bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(20) iStable	To reduce the jolt in the recorded video (also see Chapter 6.1).
(21) Add Setting	Include the new setting to the temporary setting block.
(22) Rename	Change the name of the selected setting in the temporary setting block.
(23) Delete	Permanently remove the selected setting in the temporary setting block.
(24) Load Setting	Call the saved settings.
(25) Save Setting	Store the settings in the temporary setting block.

6.1 To Use iStable

The iStable function can reduce the jolt in the recorded video.

1. Click **Open File** button and select the recorded video.
2. And then, click **iStable** button.
3. iStable windows will show up.
4. Select the **smoothness** level – 1(Low), 2, 3, 4, and 5(High). The default value is 3.
5. Click Play button, and then iStable function will start to initial the recorded video.
6. When the initialize is done, user will see the original and stabilized recorded video play in two windows. The original video on the right side of window and the stabilized video on the left side of window.

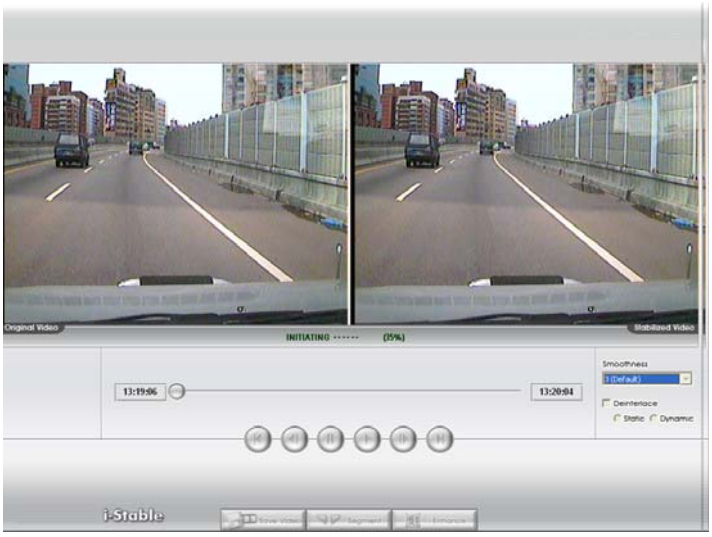

Chapter 7 Using the Remote Programs

User can use Microsoft Internet Explorer to access DVR system by entering the IP address. To use this feature, make sure that your PC and DVR server both are connected to the internet and the Network feature is enabled.

Accessing this feature for the first time you will be prompted by your browser to install WebCamX.cab, allow the installation and you should be able to connect and login afterwards.
For Windows 2000, click **Yes** when the Security Warning dialog box appears.

Security Warning
Do you want to install and run "http://live.dss.com.tw/WebCamX.cab" signed on an unknown date/time and distributed by:
AVerMedia TECHNOLOGIES, Inc
Publisher authenticity verified by VeriSign Class 3 Code Signing 2004 CA
Caution: AVerMedia TECHNOLOGIES, Inc asserts that this content is safe. You should only install/view this content if you trust AVerMedia TECHNOLOGIES, Inc to make that assertion.
Always trust content from AVerMedia TECHNOLOGIES, Inc
Yes
No
More Info

For Windows XP, click Install when the Internet Explorer - Security Warning dialog box appears.

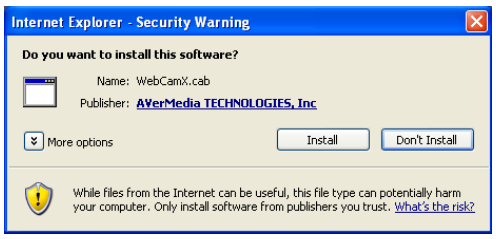
Internet Explorer - Security Warning
Do you want to install this software?
Name: WebCamX.cab
Publisher: AVerMedia TECHNOLOGIES, Inc
More options
Install
Don't Install
While files from the Internet can be useful, this file type can potentially harm your computer. Only install software from publishers you trust. What's the risk?

After installing the WebCamX.cab and when connecting to the DVR system, you are required to enter accont ID (superuser / user) and password (111111/111111) and select the type of network. **Superuser** has the authority to remote setup the DVR system configuration on WebViewer. **User** only can preview the video on WebViewer and Remote Console.

Changing account password is strongly recommended.

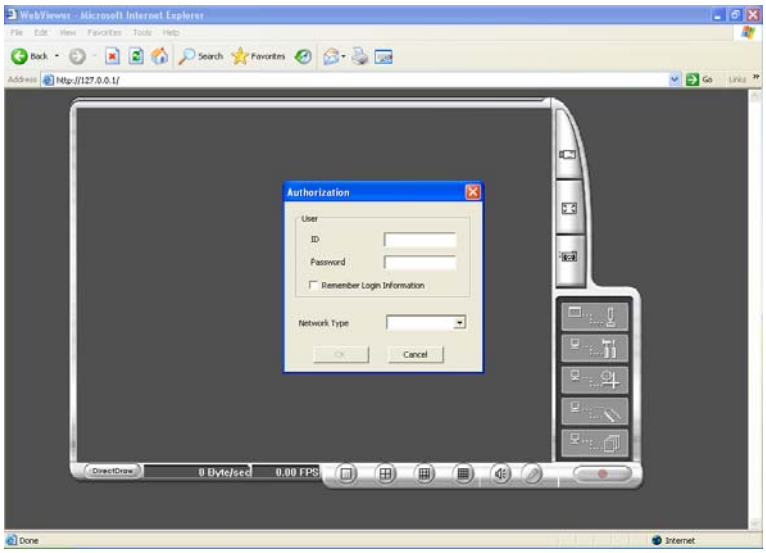

7.1 Familiarizing the Buttons in WebViewer

Right-clicking on the WebViewer video screen, enables you to start video recording, change video quality, switch camera and enable/disable DirectDraw.

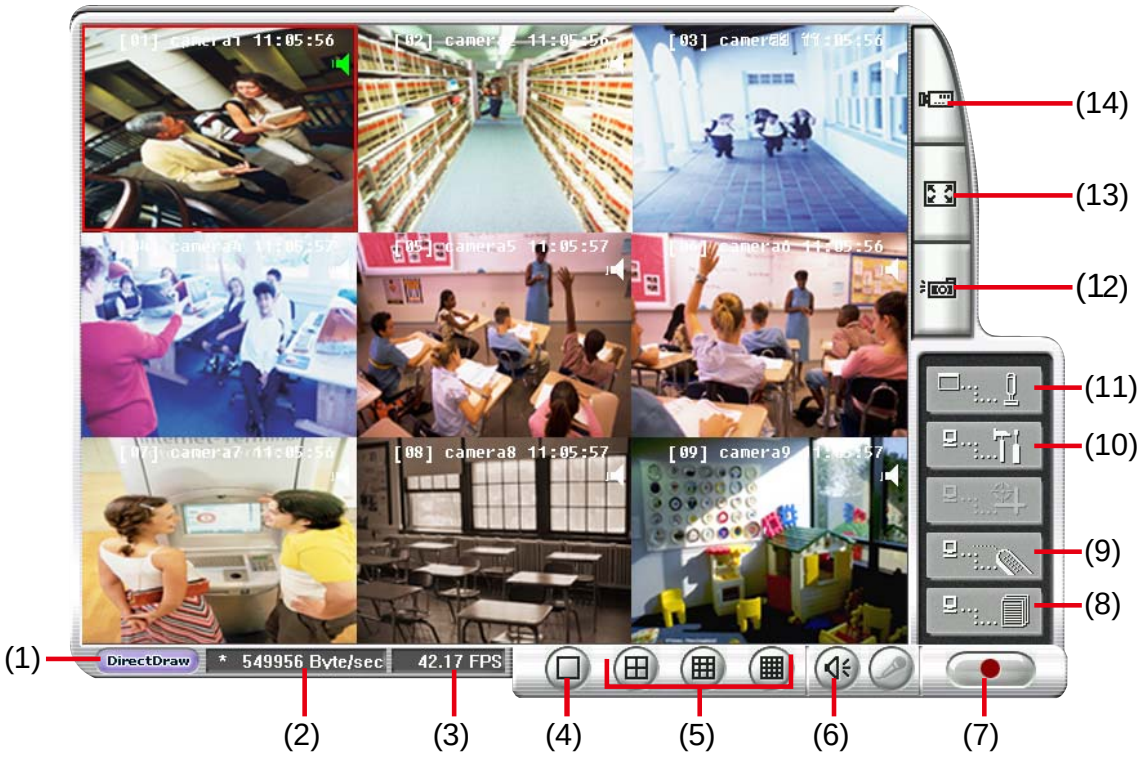

Name	Function
(1) DirectDraw	Enhance the video quality.
	Not all graphic cards can support this function. If you cannot see the screen display correctly or screen is messed, please check with VGA card vendor.
(2) Received file size	Indicate the size of the data being sent per second.
(3) Camera frames	Indicate the number of frames per second.
(4) One screen view	To view single camera view on screen. User can right click on the screen to switch to different camera view.
(5) Split screen view	To view all cameras on screen simultaneously.
(6) Audio	Enable/disable remote sound.
(7) Record	Start to record the video of the selected camera in AVI format. Directly click screen to select the channel that user wants to record and press **Record** button.
(8) Remote Console	Initiate Remote Console. It allows you to control DVR server (see also Chapter 7.3).
(9) Event Log Viewer	Display the Event logs, Operation logs, System logs, and Network logs.
(10) Remote setup	Change the DVR server settings (see also Chapter 7.1.1)
(11) PTZ Control	Initiate PTZ camera controller(see also Chapter 7.2)
(12) Snapshot	Capture and save the screen shot in *.bmp format.
(13) Full screen	Use the entire area of the screen to only display the video. To return, Right click the mouse or press ESC on the keyboard.

Name	Function
(14) Select cameras to view	Select to the view camera from different server. In Select Camera dialog box, Display column, click to enable/disable viewing the camera. Click **Add Server** and select the server type between DVR and IP Cam to add. Click **Delete Server** to delete the selected item. Click **Import** to load the previous saved list. Click **Export** to save the list. Click **Apply All** to change all the camera video quality based on the selected setting. Click **OK** to exit. 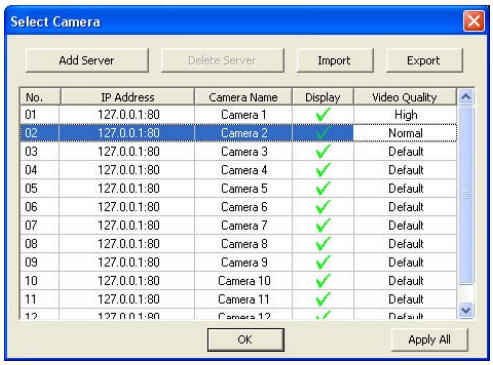

7.1.1 To Setup Remote System Setting

The setting here applies to Remote DVR only.

7.1.1.1 System Setting

In the System Setting windows, click **Update** to accept the new settings, click **Exit** to exit without saving, and click **Default** to revert back to original factory setting.

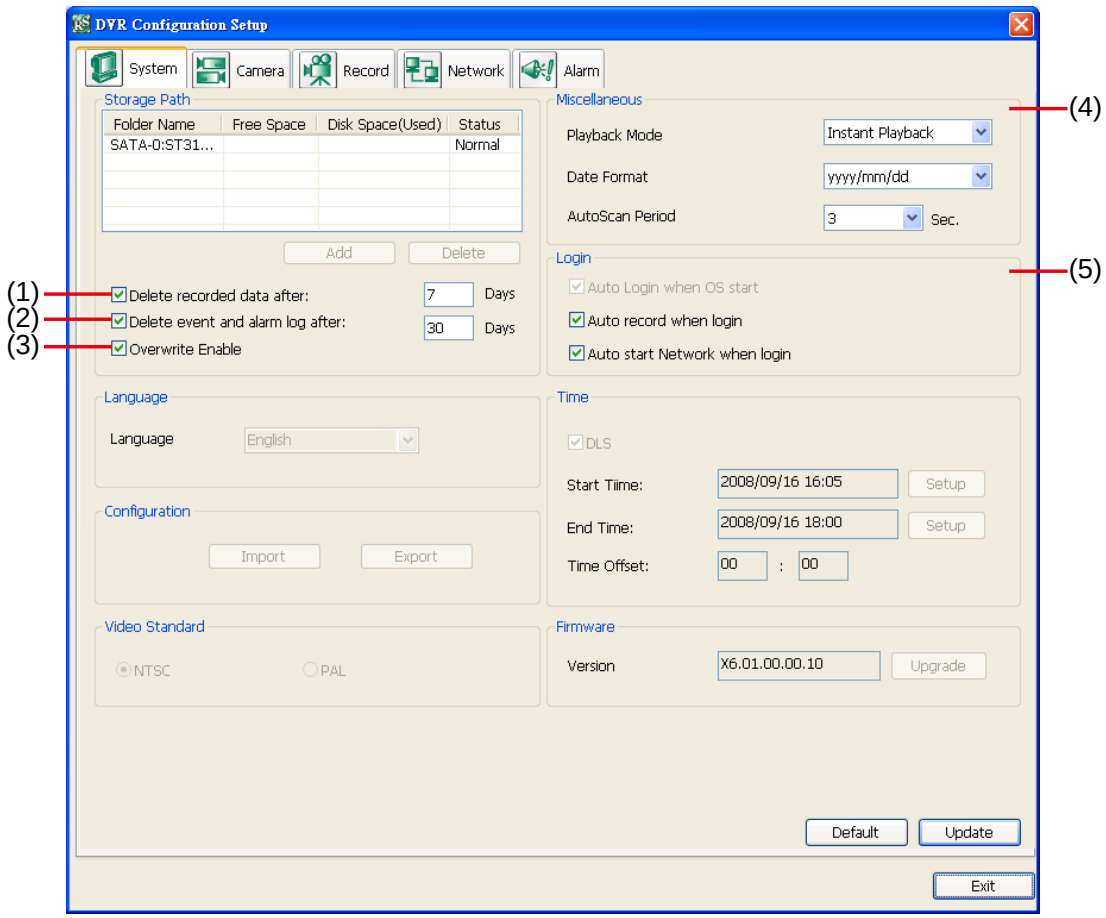

(1) Delete recorded data after

If you want the system to automatically erase the data after a certain days, enable the **Delete recorded data after** check box and enter the numbers of days in **Days** text box.

(2) Delete event and alarm log after

If you want the system to automatically erase the event and alarm log files after a certain days, enable the **Delete event and alarm log after** check box and enter the numbers of days in **Days** text box.

(3) Overwrite Enable

When there is not enough free space to record one hour data, the system automatically replaces the oldest data.

(4) Miscellaneous

Enable the conditions in **Miscellaneous** section you want the system to perform.

- **Playback Mode**

  Select the mode of playback the video.

  Select date and time: Select the date and time which user wants to playback.

  Play the last file: Automatically playback the video from the last hour

  Instant Playback: Automatically playback the video which has just recorded

- **Date Format**

  Select the date format which wants to display in **Select date and time** playback mode

- **Auto Scan Period**

  Set the time gap of the Auto Scan function from 3 to 10 seconds. This automatically switches to the next video in cycle depending on the set time gap.

(5) Login

Enable the conditions in Login section you want the system to automatically carry out.

- **Auto record when login**

  Automatically start video recording when the DVR is executed.

- **Auto start Network when login**

  Automatically connect to network when the DVR is executed.

7.1.1.2 Camera Setting

Select the camera from remote DVR servers to modify settings. In the Camera Setting windows, click **Update** to save and apply the new settings, click **Exit** to exit without saving.

IP Camera Setting

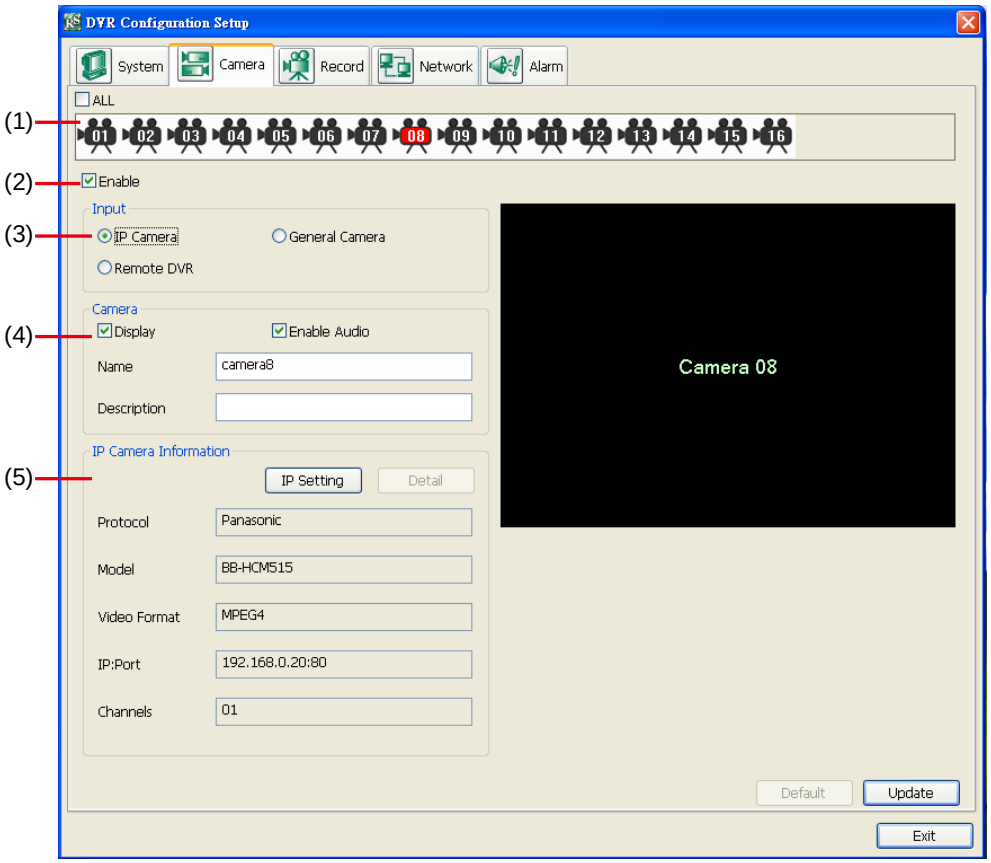

(1) Camera Icons

Select the camera number you want to adjust the video setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, Right click on the camera icon. To select one camera only, Left click on the camera icon. The camera icon turns red when it is selected.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the type of camera as IP camera. For General camera setting, see Analog Camera Setting. To modify camera of remote DVR, see Remote DVR Camera Setting.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment

(5) IP Camera Information

To setup IP camera and display current IP camera information.

- **IP Setting:** Click **IP setting** to add the IP camera.

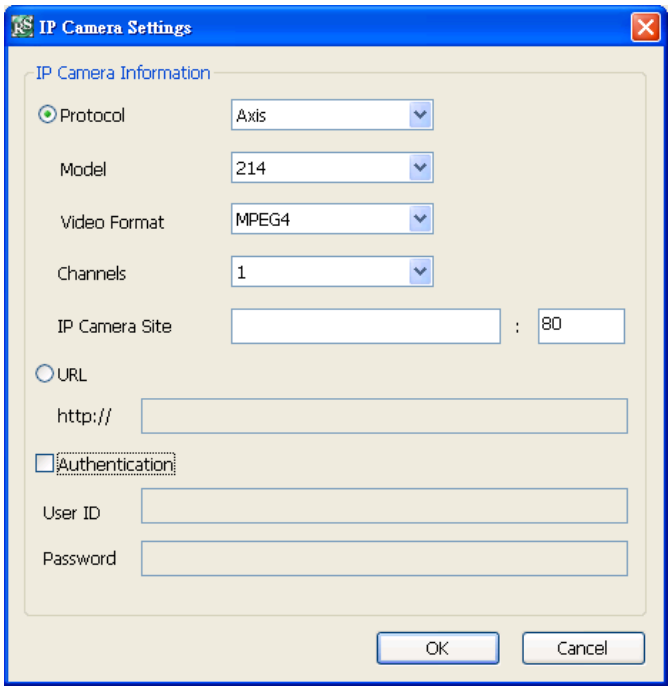

1. Click the radio button of **Protocol** to start setup IP camera.
2. Select the **Protocol**, **Model**, **Video Format**, and **Channel** of the IP camera.
3. Enter IP address and connecting port in **IP Camera Site** column.
4. Also, user can enter URL of IP camera instead of IP address.
5. If the IP camera has authority request, please enable **Authentication** and enter **ID** and **Password**.
6. Click **OK** to connect with the IP camera.

Analog Camera Setting

Select the camera from remote DVR servers to modify settings. In the Camera Setting windows, click **Update** to save and apply the new settings, click **Exit** to exit without saving.

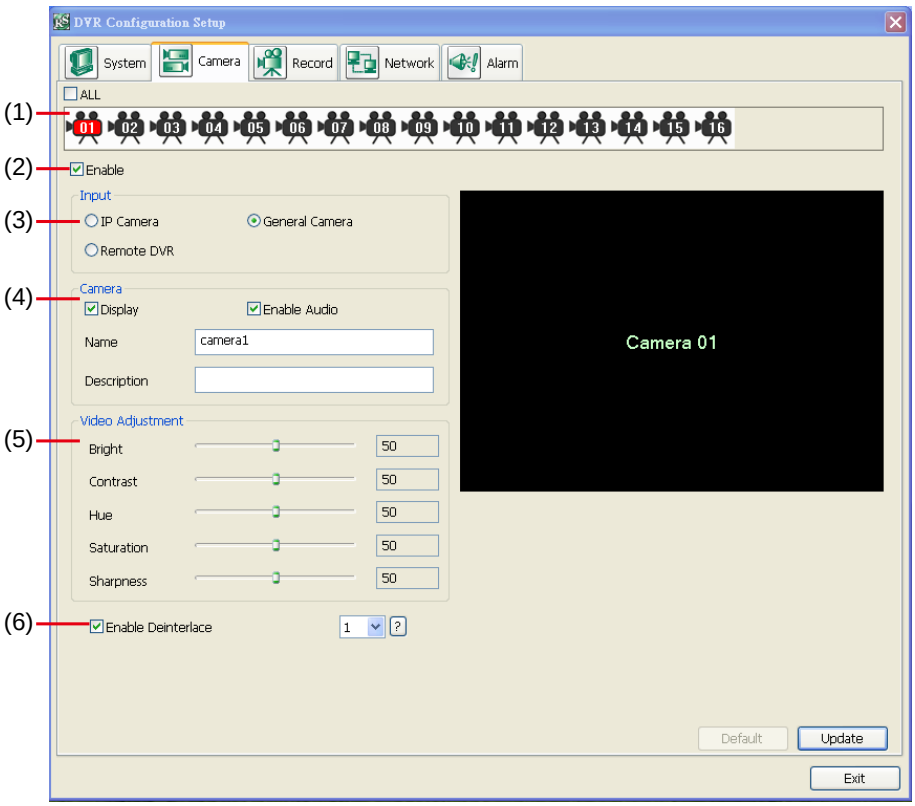

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **General Camera**. For IP camera setting, see IP Camera Setting. To modify camera of remote DVR, see Remote DVR Camera Setting.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment

(5) Video Adjustment

Adjust the Brightness, Contrast, Hue and Saturation of the camera.

(6) Enable Deinterlace

Enhance the video quality. Set the **Enable Deinterlace** mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.

Remote DVR Camera Setting

Select the camera to modify settings. In the Camera Setting windows, click **Update** to save and apply the new settings, click **Exit** to exit without saving.

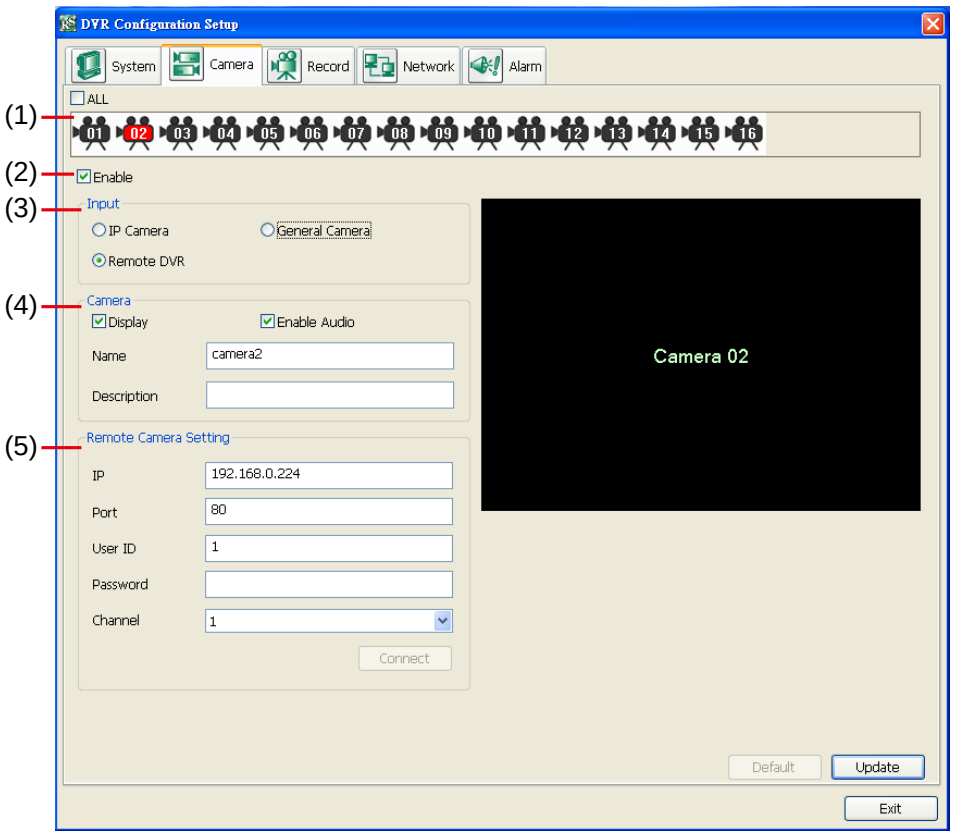

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **Remote DVR**. For IP camera setting, see IP Camera Setting. To modify analog camera setting, see Analog Camera Setting.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment
- **IP**
  Enter the IP address of the camera
- **Port**
  The port for connection

- **User ID**
  Enter the user id that for connecting authority
- **Password**
  Enter the password that is for connecting authority
- **Channel**
  Select the channel of connected camera

7.1.1.3 Record Setting

In the Recording setup windows, click **OK** to accept the new settings, click **Exit** to exit without saving, and click **Default** to revert back to original factory setting.

Record Setting of IP Camera

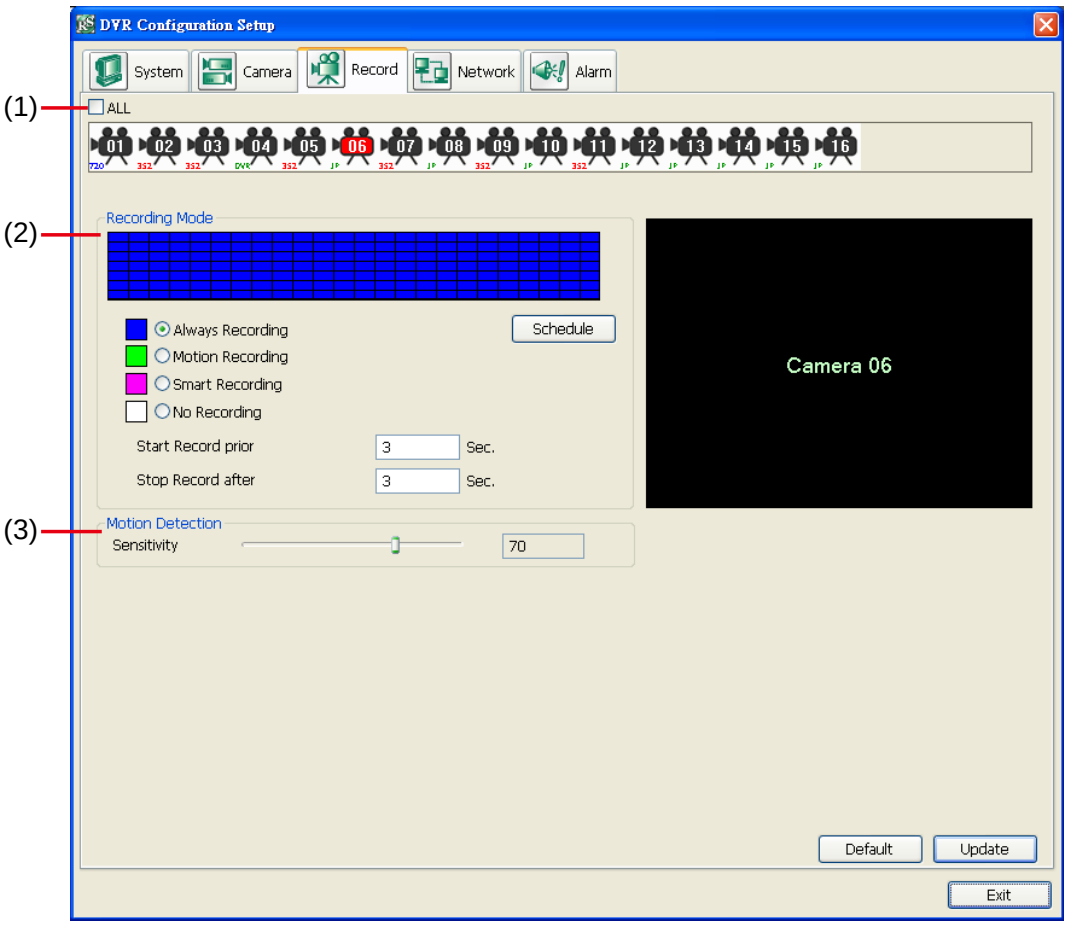

(1) Camera Icons

Select the camera number you want to set the recording setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, **Right click** on the camera icon. To select one camera only, **Left click** on the camera icon. The camera icon turns purple when it is selected.

(2) Recording Mode

The horizontal blocks from 00 to 23 represent the time in 24-hour clock and the vertical block 1 to 7 represent the day in the week block (Sunday to Saturday). To record in full 24 hours and 7 days a week, select the recording mode and click the ⊙ button. If you want to only record at a particular time or day, click **Schedule** button and select the **Recording Mode** , and then click on the time or day blocks. When the system starts recording a red triangle mark would appear at the upper left corner of the screen.

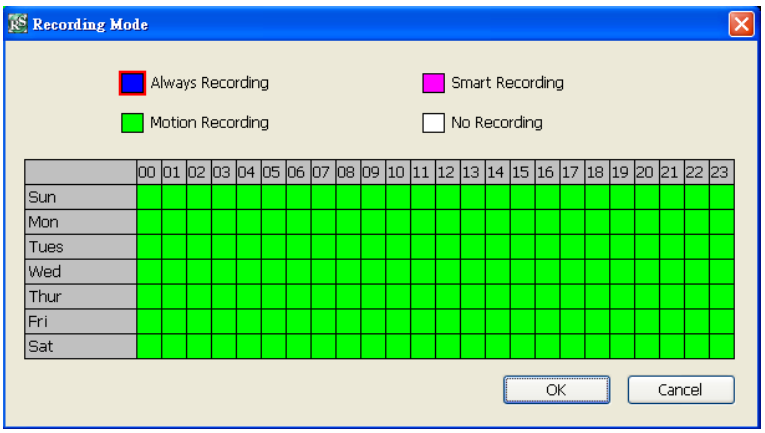

The recording modes are listed below:

- **Always Recording**
  Record the video from the selected camera and save it to the designated storage path
- **Motion Recording**
  Start recording the video from the selected camera only when the system detects movement. Once a motion is detected, the system automatically saves the previous frames and stop based on the **Start Record Prior** and **Stop Record After** settings.
- **Smart Recording**
  Automatically switch to recorded at the maximum frame rate setting once a motion is detected and if there is no motion, it records at the minimum frame rate setting.
- **No Recording**
  The system won't do any recording.

(3) Motion Detection

Adjust the sensitivity of the motion detection. The higher the value, the finer the sensitivity is detected. When it detects a motion, a green triangle mark would appear at the upper left corner of the screen.

Record Setting of Analog Camera

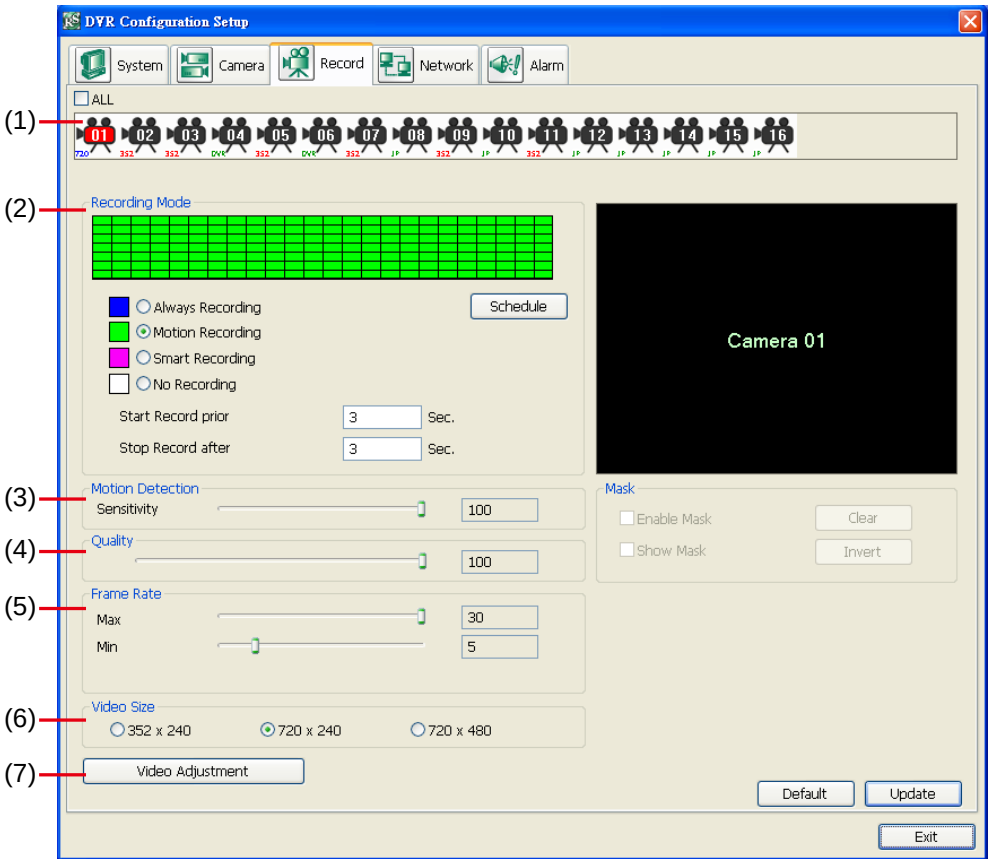

(1) Camera Icons

Select the camera number you want to set the recording setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, **Right click** on the camera icon. To select one camera only, **Left click** on the camera icon. The camera icon turns purple when it is selected.

(2) Recording Mode

The horizontal blocks from 00 to 23 represent the time in 24-hour clock and the vertical block 1 to 7 represent the day in the week block (Sunday to Saturday). To record in full 24 hours and 7 days a week, select the recording mode and click the ⊙ button. If you want to only record at a particular time or day, click **Schedule** button and select the **Recording Mode** , and then click on the time or day blocks. When the system starts recording a red triangle mark would appear at the upper left corner of the screen.

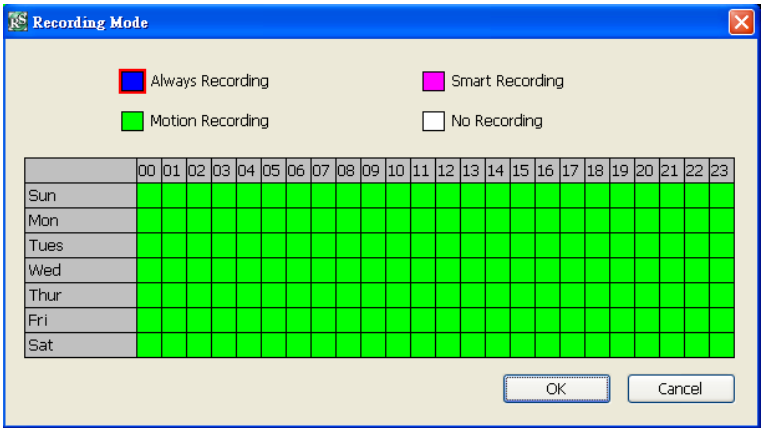

The recording modes are listed below:

- **Always Recording**

  Record the video from the selected camera and save it to the designated storage path

- **Motion Recording**
  Start recording the video from the selected camera only when the system detects movement. Once a motion is detected, the system automatically saves the previous frames and stop based on the **Start Record Prior** and **Stop Record After** settings.
- **Smart Recording**
  Automatically switch to recorded at the maximum frame rate setting once a motion is detected and if there is no motion, it records at the minimum frame rate setting.
- **No Recording**
  The system won't do any recording.

(3) Motion Detection

Adjust the sensitivity of the motion detection. The higher the value, the finer the sensitivity is detected. When it detects a motion, a green triangle mark would appear at the upper left corner of the screen.

(4) Quality

Adjust the video quality. The higher the value, the lower the compression level and uses more hard disk space.

(5) Frame Rate

Set the maximum and minimum number of frames to be recorded during motion and motionless state. The frame rate ranges from 01 to 30 for NTSC and 01 to 25 for PAL. The higher the frame rate, it uses more hard disk space.

Always recoding frame rate is depending on max frame rate value.

(6) Video Size

Select the size of the video and click the ⊙ button. The higher the size, the larger the file it create.

(7) Individual Adjustment

Each camera can adjust video size and frame rate individually. Click **Default** will back to the factory default value. The frame rate usage is shown in **Used** and **Unused** columns by CIF mode.

Only analog camera can adjust video size and frame rate by channel.

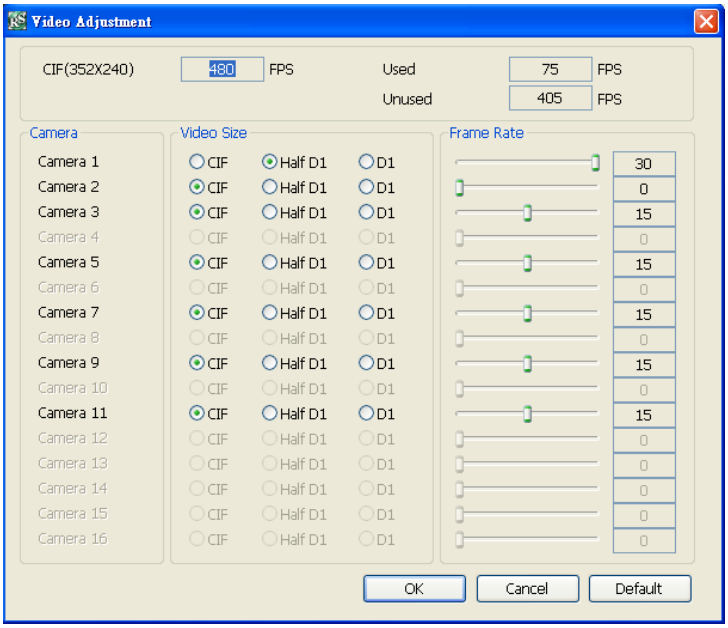

7.1.1.4 Network Setting

In the Network Setting dialog box, click **Update** to accept the new settings, click **Exit** to exit without saving, and click **Default** to revert back to original factory setting. For the network service ports that use by DVR server, please see Appendix A.

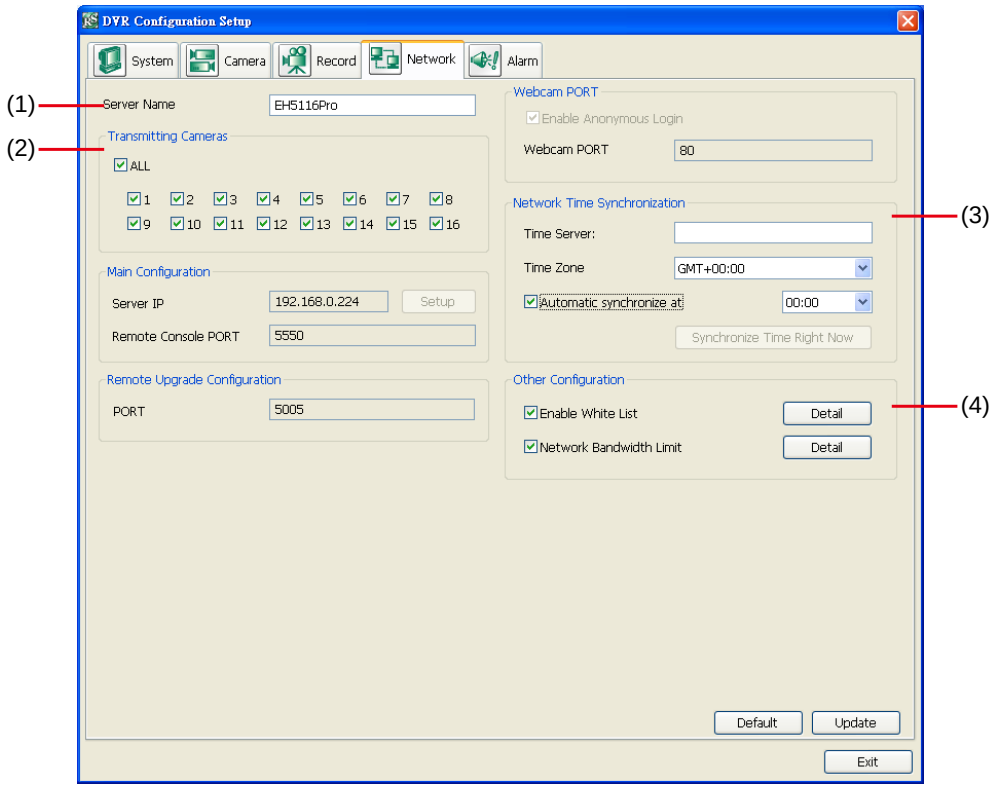

(1) Server Name

Assign a name for the DVR unit. Alphabet letters and numbers only.

(2) Transmitting Cameras

Select and click on the camera number in the Transmitting Camera section you want to make it accessible via internet using WebViewer, Remote Console, PDA Viewer and JAVAViewer (still image). To select all the cameras, enable the **ALL** check box.

(3) Network Time Synchronization

Adjust the DVR system time same as network time server. Fill in the **Time Server** IP address or domain name. Select the **Time Zone** that DVR is located. And then, mark the **Automatic Synchronize** time to set automatic synchronize time on a daily basis.

(4) Other Configuration

- **Enable White List**

  An access permit list for the remote accessing of DVR server. Enter the IP address and click **Add**. Or, enter a range of IP address and click **Add**. To delete the IP from the list, select the IP and click **Delete** button. To reset the input, click **Clear** button.

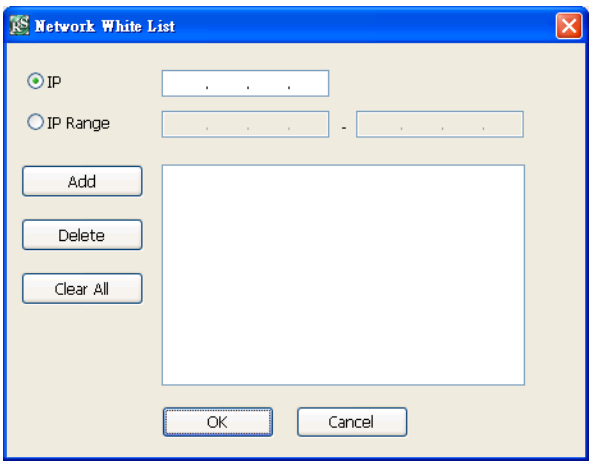

- **Network Bandwidth Limit**

  By Channel: Set the network bandwidth by each channel.

  All: Set the total network bandwidth consumption limit.

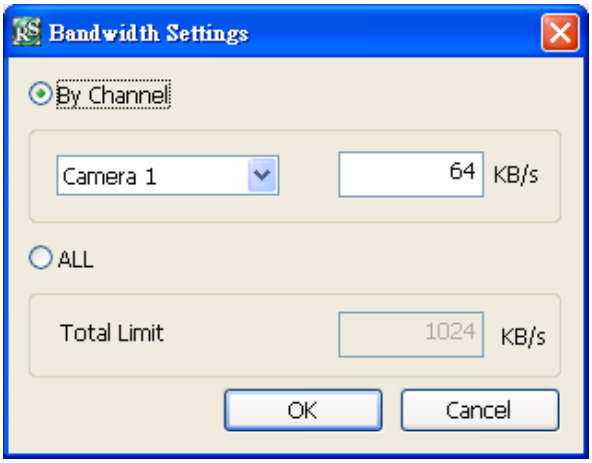

7.1.1.5 Alarm Setting

In the Alarm Setting dialog box, click **Add** to insert and set new alarm setting, click **Delete** to remove the selected alarm setting, click **Update** to save the setting, **Exit** to exit without saving, and **Default** to revert back to original factory setting.

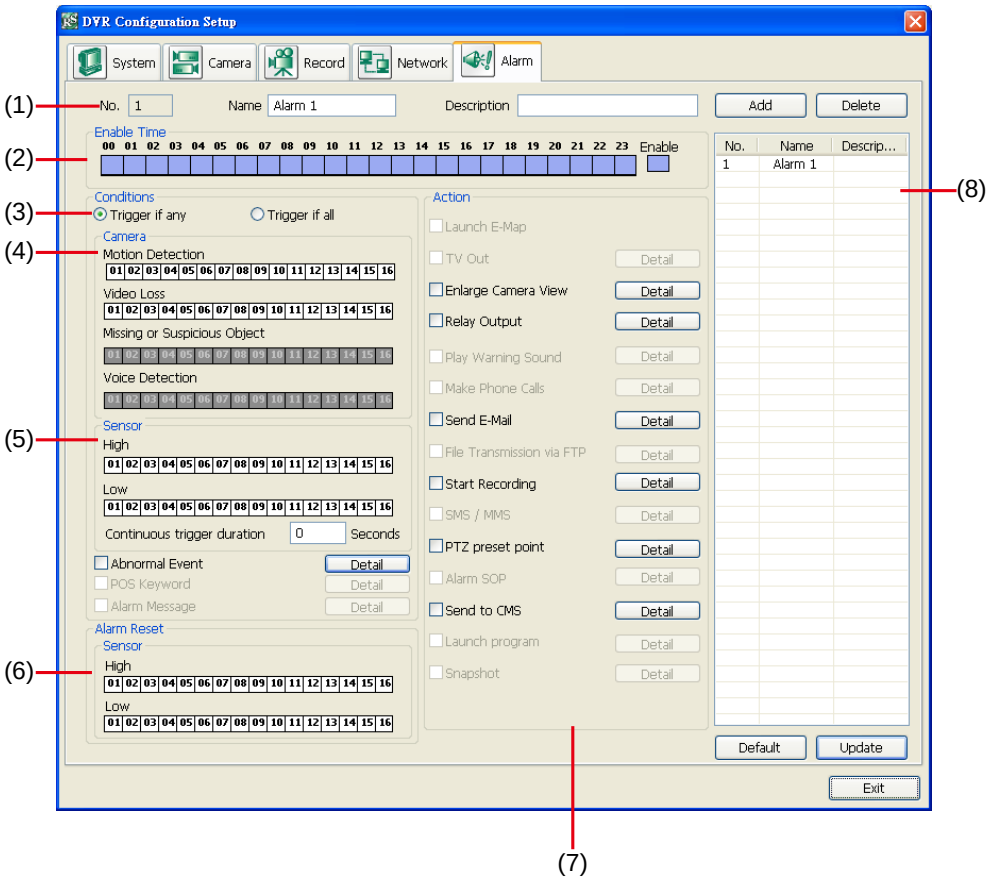

1. Click **Add** to insert and set a new alarm setting. Click the items in the **(8) Alarm Setting List** if you want to modify the alarm setting.
2. In **(1) No./Name/Description** enter alarm name and description. Alarm **No.** will be created by DVR system.
3. In **(2) Enable Time**, the number from 00 to 23 represent the time in 24-hour clock. Select the time and click the block you want to activate or deactivate the alarm function. When it is deactivated the color of the block turns white.
4. In **(3) Conditions**, you can set "**Trigger if any**" to activate if it falls to one of the conditions or "**Trigger if all**" to activate if it falls to all conditions.
5. In **(4) Camera** section, select and click on the camera number (01 to 16) in **Motion Detected** and **Video Loss** to set the condition for the system to alarm.
6. In **(5) Sensor**, select and click on the sensor number to set the condition for the system to alarm. If the sensor normal status is high, set the sensor condition to low.
   - Enable/disable the **Abnormal Event** check box, to set the condition of the event for system to alarm.

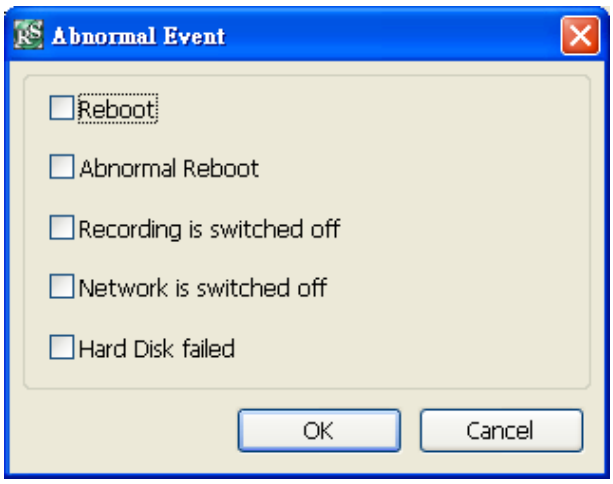

- **Reboot:** when the DVR system reboot without abnormal condition, the system will send out the alarm message.
- **Abnormal Reboot:** when the DVR system reboot in irregular condition, the system will send out the alarm message.
- **Recording is switched off:** when the recording has been stopped, the system will send out the alarm message.
- **Network is switched off:** when the network connection of DVR system is lost, the system will send out the alarm message.
- **Hard Disk failed:** when the hard disk doesn't work normally, the system will send out the alarm message.

- **Continue trigger duration:** Set a time period that when sensor has been trigger and stay in the same status for that period, then the alarm will be sent out.

7. In **(6) Alarm Reset**, click the camera number to set the reset condition of alarm. Once alarm is reset, all alarm action will stop at the moment. If the sensor normal status is high, set the alarm reset condition to low.
8. In **(7) Action**, you may now set the alarm action for the system to perform when the alarm condition is activated.

- **Enlarge Camera View**

  Switch to only display video in Preview mode from where the alarm is activated.

  c. Select the camera from drop down list to specify which camera video to be enlarged on screen when the alarm is triggered.

  d. **Retrieve time:** set the waiting duration before system switching back to original Preview mode. If the retrieve time is un-mark, the alarm video will keep enlarging until user switch back to Preview mode manually. The retrieve time range is 0~ 600 seconds.

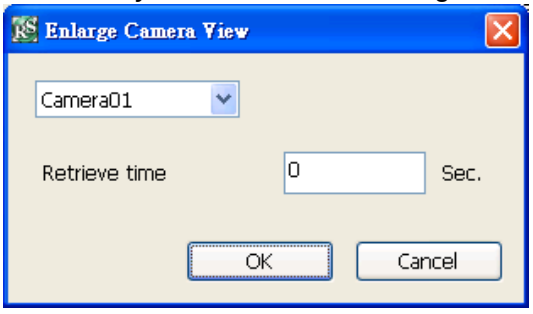

- **Relay Output**

  Set to enable/disable the relay operation when the alarm is activated and to extend additional time in second before it stops the relay operation.

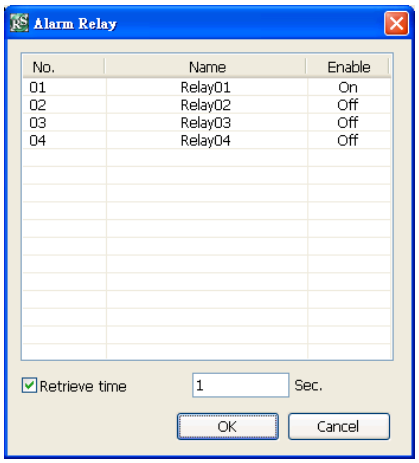

  5. Beside the Relay Output check box, click **Detail**.
  6. In the Alarm Relay dialog box, select from the available relay list and in the ON column, set to enable/disable the relay operation when the alarm is activated.
  7. In the Retrieve time check box, you may enable/disable to extend the relay operation time and set the duration in second.
  8. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

- **Send E-mail**

  Send an electronic text message. Beside the Send Email check box, click **Detail**.

  In the E-mail Setting dialog box, click **OK** to exit and save the setting and **Cancel** to exit without saving the setting.

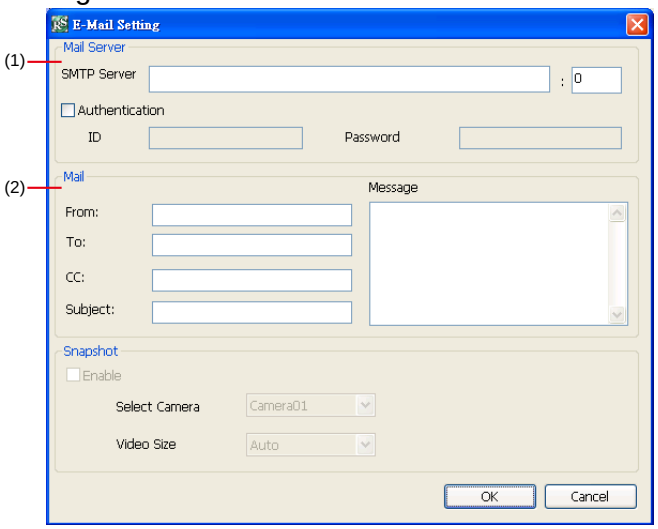

(1) Mail Server

Enter the **SMTP Server** and **port**. If your e-mail system requires user identification, enable **Authentication** check box and enter **ID** and **Password**.

(2) Mail

Fill the mailing information.

From: Enter the sender e-mail address.

To and CC: Enter the recipient email address and separate it with comma or a semicolon (;).

Subject: Enter the message title.

Message: Type the message.

- **Start Recording**

  Record the video from the selected camera.

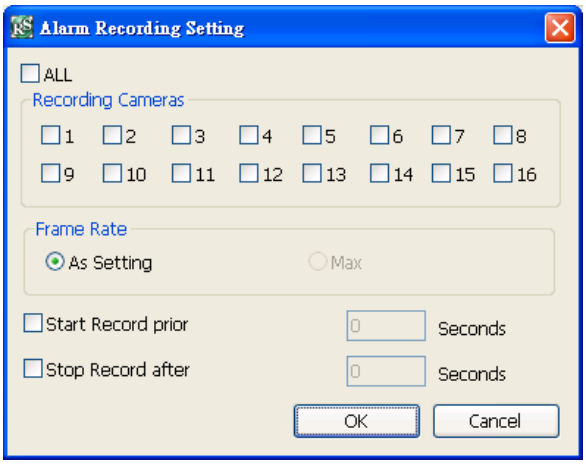

  1. Beside the Start Recording check box, click **Detail**.
  2. In the Alarm Recording Setting dialog box, select the camera to enable/disable video recording. Enable **All** to select all cameras.
  3. In the Frame Rate selection, select **As Setting** to record the number of frames based on the Recording Setting.
  4. In the **Start Record prior** text box, mark and set the number in second for the program to begin recording after the alarm has been trigger. The time range is 1~10 seconds.
  5. In the **Stop Record after** text box, mark and set the number in second for the program to continue recording after the alarm has ended. The time range is 1~999 seconds. If user doesn't mark and set the time, the alarm recording will continue recording until alarm is reset.
  6. Click **OK** to accept the new settings and **Cancel** to exit without saving.

- **PTZ preset point**

  Position the PTZ camera based on the preset point setting. Beside the PTZ preset point check box, click **Detail**. In the Trigger PTZ Preset Setting dialog box, select the PTZ camera number then select the **Enable** check box. Select the position of the PTZ camera when the alarm is activated and ended. For the PTZ camera end point, user can also select on preset position or **Auto Pan** between preset position groups.

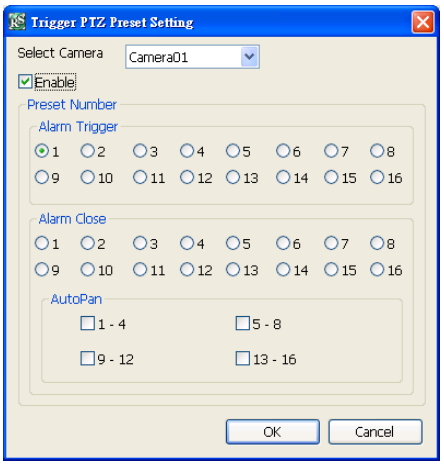

- **Send to CMS (Central Management System)**

  Enable/disable the selected camera to send video to CMS when the alarm is activated. Beside the Send to CMS check box, click **Detail**. In the CMS Setting, select the camera to enable/disable sending the video to CMS. Enable **All** to select all cameras. Then, click **OK** to accept the new settings and **Cancel** to exit without saving.

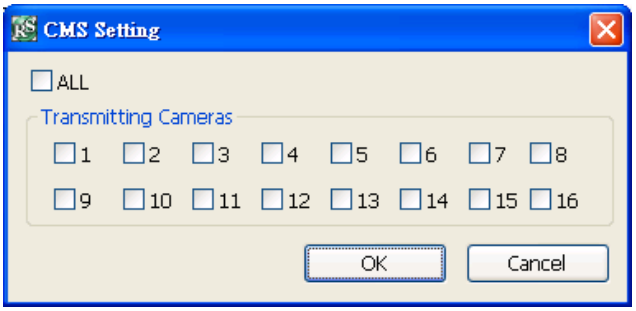

7.2 Familiarizing the Buttons in WebViewer PTZ

Name	Function
(1) Direction buttons	Adjust and position the focal point of the PTZ camera. Click the center to pan automatically.
(2) Zoom +/-	Zoom in and out the image.
(3) Select PTZ	Choose to enable/disable the PTZ camera. In the Select PTZ dialog box, Select column, click to enable/disable viewing and controlling the PTZ camera. Click **OK** to exit and save the setting and **Cancel** to exit without saving the setting.
(4) Focus +/-	Adjust the focus manually to produce clear image.
(5) AutoPan Groups	Operate the PTZ cameras automatically based on the selected camera group preset position number.
(6) Camera preset position number	Move the PTZ camera to the preset point. The reset point (1~9) is based on the user has setup by remote control at local site.

7.3 Familiarizing the Buttons in Remote Console

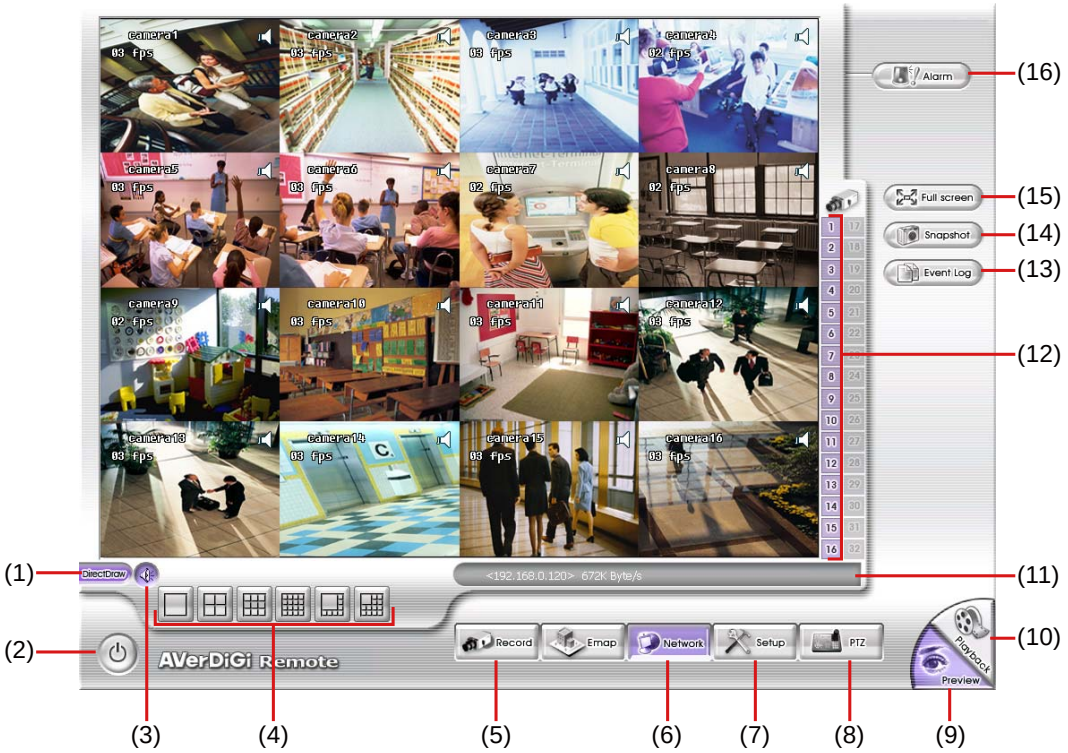

Name	Function
(1) DirectDraw	Enhance the video quality.
	Direct Draw function supports for certain VGA card. For more information, please contact your VGA card vendor.
(2) Exit	Close the Remote Console.
(3) Audio button	Enable/disable the sound.
(4) Split Screen Mode	Select from 6 different split screen type to playback the recorded video file of all the camera, or one camera over the other or alongside on a single screen.
(5) Record	Start/stop video recording.
(6) Network	Enable/disable remote system access. This feature allows you to access DVR server from a remote location via internet connection.
(7) Setup	Configure the Remote Console setting. (see also Chapter 7.3.1)
(8) PTZ	Access PTZ control panel. EH supports IP camera PTZ function.(see Chapter 7.3.2)
(9) Preview	Switch to Preview/Playback mode. This allows you to view live camera display.
(10) Playback	Switch to Playback mode. This allows you to view the recorded video file. (see also Chapter 7.4)
(11) Status Bar	Display the current date, time and hard disk free space.
(12) Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(13) Event Log	Display the Event logs, Operation logs, System logs, and Network logs.
(14) Snapshot	Capture and save the screen shot either in *.jpg or *.bmp format.
(15) Full screen	Use the entire area of the screen to only display the video. To return, Right click the mouse or press **ESC** on the keyboard.

Name	Function
(16) Alarm	Alert and display warning info. Superuser and user both can reset the alarm.

7.3.1 To Setup Remote Console Setting

Click **Setup** button to call out the **System Setting** windows. Click **OK** to exit and save the setting and **Cancel** to exit without saving the setting.

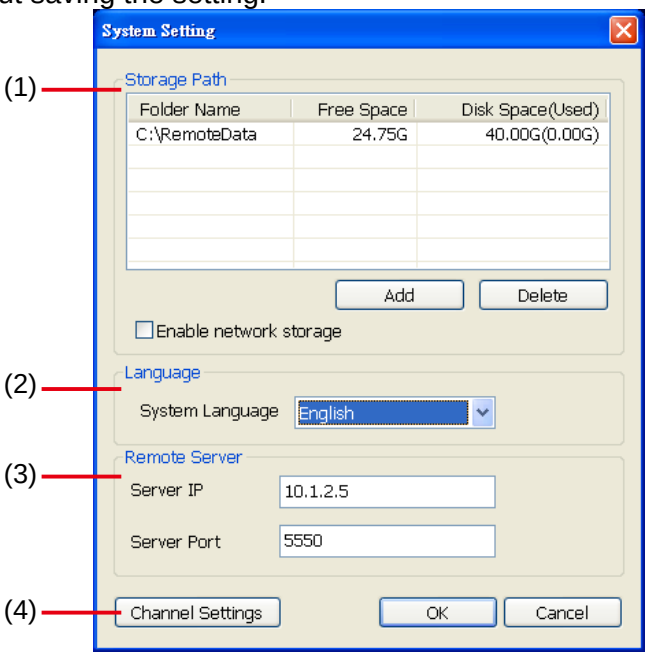

(1) Storage Path

Set the directory on where to save the data. When there is not enough free space to record one hour data, the system automatically replaces the oldest data. In case you have more than one storage path, the system automatically saves the data to the next storage path. By default the data is stored in C:\RemoteData, to insert another storage path, click **Add**. To remove the selected path, click **Delete**.

- **Enable** network storage
  Select the Enable network storage check box to send the recorded video in network-attached storage.

To add network storage, the Internet storage drive/folder must be mapped as Network Driver in DVR server. To know how to assign or connect to a network drive, please refer to your Windows help file and search “Map Network drive”.

(2) Language

Customize the system to display the tool tips and dialogs based on the selected language. By default the language is in English.

(3) Remote Server

Enter the DVR Server IP and Server Port number.

(4) Channel Settings

The numbers from 1 to 8 represent the camera ID. In Transmitting Channels section, enable the camera number to receive the camera signal from the server. In Visible Channels section, enable the camera number to view the camera signal on Remote Console screen. To

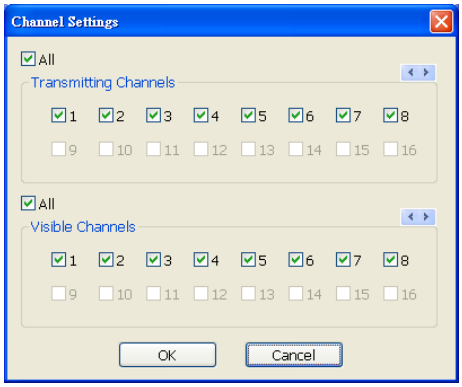

select all the cameras, enable the **ALL** check box.

7.3.2 Familiarizing the Buttons in PTZ Camera Controller

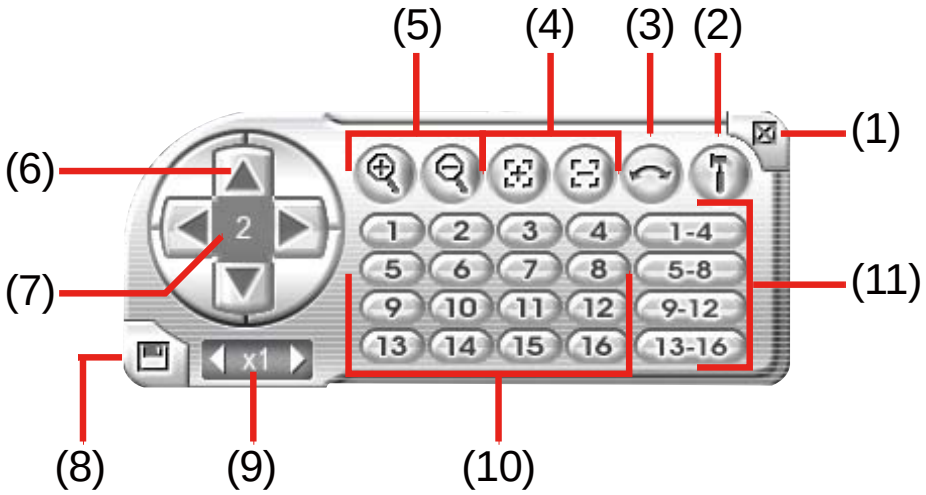

Name	Function
(1) Close	Exit PTZ camera controller.
(2) Setup	Configure PTZ cameras.
(3) AutoPan	Operate the PTZ cameras automatically based on the selected camera group preset position number.
(4) Focus +/-	Adjust the focus manually to produce clear image.
(5) Zoom +/-	Zoom in and out the image.
(6) Direction buttons	Adjust and position the focal point of the PTZ camera.
(7) Camera ID pane	Display the PTZ camera number that is being operated.
(8) Save Camera preset position	Save the PTZ camera preset position number. Select the camera and click the preset position number and save it.
(9) Camera lens speed controller	Adjust the moving speed of the PTZ camera lens.
(10) Camera preset position number	Move the PTZ camera to the preset point.
(11) Group AutoPan	Select to automatically operate PTZ camera in group.

7.4 Using the Remote Playback

To use this feature, first you need to select the source of the file. In the Select Playback Mode dialog box, choose **Local Playback** to open the file that is recorded in the Remote Console, and **Remote Playback** to open the file that is recorded in the DVR server. When you choose Remote Playback, select **RealTime Playback** if your internet bandwidth is fast and big enough, otherwise choose **Download and Playback**.

Click **OK** to proceed and **Cancel** to void this operation.

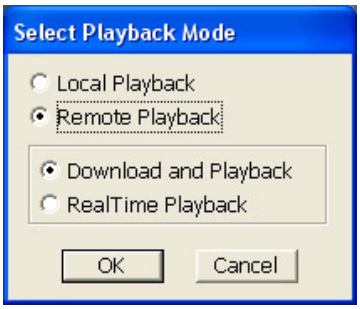

In the Video Playback Date/Time Selection, the number from 00 to 23 represent the time in 24-hour clock. The numbers from 01 to 8 represent the camera number.

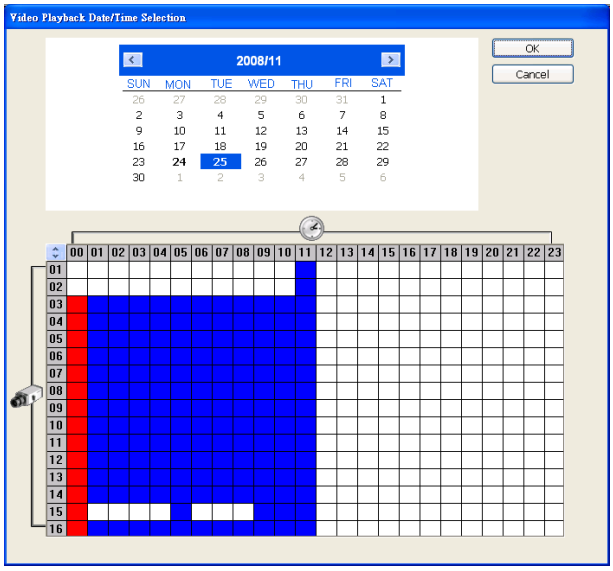

To Make a Selection:

1. Select the date in the calendar. Use ◄ and ► buttons to shift the calendar to the left or right.
2. In the table below, click on the blue block to select and open the recorded file. The blue block turns red when it is selected. The block that appears in white doesn't have data. You can only select one block when you choose Download and Playback.
3. Click **OK** to proceed and **Cancel** to void this operation.
4. If you select Download Playback and after making the selection, the system divides the selected hour into 16 video thumbnails. In the Time Selection screen, click on the video thumbnail you want to download (see also Chapter 5.4.3).

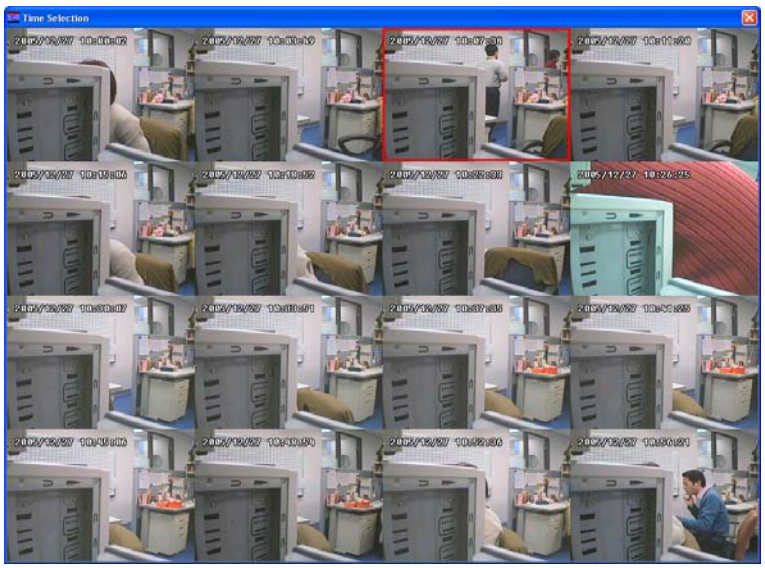

7.4.1 Familiarizing the Buttons in Local Playback

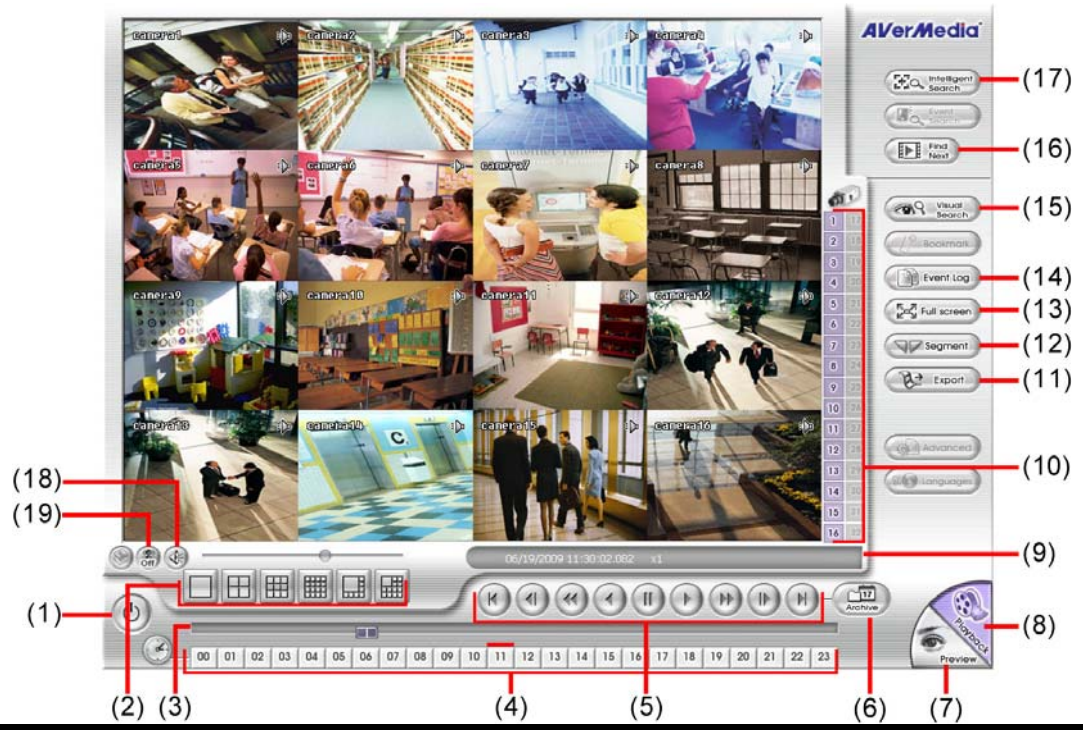

Name	Function
(1) Exit	To close the application
(2) Split Screen Mode	Select from 6 different split screen type to playback the recorded video file of all the camera, or one camera over the other or alongside on a single screen.

- If there are only 8 cameras, you won't be able to switch to 16, and 13 split screen mode.
- To zoom in an area on the screen, Right click and Drag a square on the area you want to enlarge. To back to normal view, right click the channel screen again.

(3) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(4) Hour Buttons	Select and click to playback the recorded video file on the specific time frame.

The Hour buttons represent the time in 24-hour clock. The blue bar on top of the hour button indicates that there is a recorded video file on that period of time. If there is no recorded data within the hour, there will be no color bar on top of the hour button. While the red bar indicates that you are currently viewing the recorded video file.

Name	Function
(5) Playback Control Buttons	**Begin:** Move at the beginning of the recorded video file. **Previous:** Go back to the previous frame. **Slower:** Play the recorded video file at the speed of 1/2x, 1/4x, or 1/8x. **Rewind:** Wind back the video file. **Pause:** Briefly stop playing the recorded video file. **Play:** Play the recorded video file. **Faster:** Play the recorded video file at the speed of 2x, 4x, 8x, 16x or 32x. **Next:** Go to the next frame. **End:** Go to the end of the video file.
(6) Date	Select the date on the calendar and the time from 00 to 23 to where to start playing the recorded video file.

The numbers from 00 to 23 represent the time in 24-hour clock. The numbers from 01 to 16 represent the camera ID. While the red colored column indicates on where to start playing the recorded video file. If there is no any video data, it will be no color bar on top of the date button.

(7) Preview	Switch to Preview mode.
(8) Playback	Switch to Playback mode. This allows you to view the recorded video file.
(9) Status bar	Display the record date, time, HDD capacity in preview mode and play speed in playback mode.
(10) Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(11) Export	Export includes Snapshot, Print, and Output Video Clip function. ■ **Snapshot:** Capture and save the screen shot either in *.jpg format. ■ **Print:** Print the screen shot. ■ **Output Video Clip:** Save the segmented file in *.dvr format (see also Chapter 7.4.1.1).
(12) Segment	Keep a portion of the recorded video you want (see also Chapter 7.4.1.1).
(13) Full screen	View in Playback-compact mode. To return, press the right button of the mouse or ESC on the keyboard.
(14) Event Log	Show the record of activities that take place in the system
(15) Visual Search	Search from a specific camera by Date, Hour, Minute, 10 Seconds and Second(also see Chapter 2.3.3)
(16) Find Next	Search for the next event. You can use this when you are using Event Search function.
(17) Intelligent Search	Search the changes in the motion detector frame (See also Chapter 3.6.4).
(18) Audio	Enable/disable volume
(19) De-interlace	To enhance the video quality. Set the de-interlace mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.

7.4.1.1 To Cut and Save the Wanted Portion of the Recorded Video

1. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to start the cut. Then, click Segment to set the begin mark.

2. Use the Playback Control buttons or drag the bar on the playback progress bar and pause on where you want to end the cut. Then, click Segment to set the end mark. To cancel segmentation or set the segment marks from the start, click Segment button again.

3. Click **Output** button to save the wanted clip.
4. In the Save As dialog box, locate on where you want to save the file, type the filename, and select the video format.

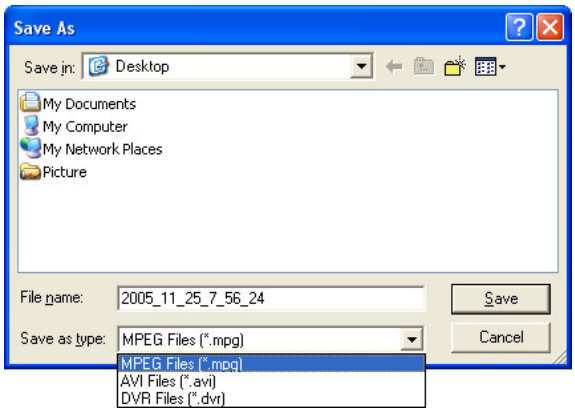

7.4.2 Familiarizing the Buttons in RealTime Playback

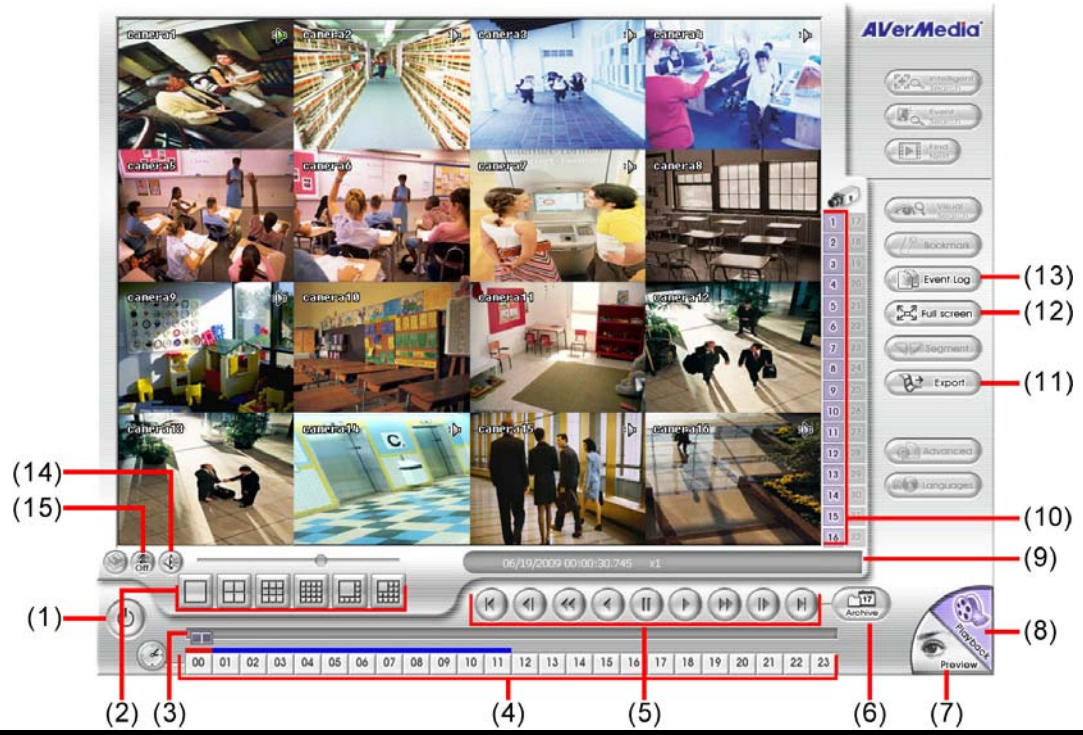

Name	Function
(1) Exit	To close the application
(2) Split Screen Mode	Select from 6 different split screen type to playback the recorded video file of the entire camera, or one camera.

- If there are only 8 cameras, you won't be able to switch to 16, and 13 split screen mode.
- To zoom in an area on the screen, **Right** click and **Drag** a square on the area you want to enlarge.

(3) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(4) Hour Buttons	Select and click to playback the recorded video file on the specific time frame.

The Hour buttons represent the time in 24-hour clock. The blue bar on top of the hour button indicates that there is a recorded video file on that period of time. While the red bar indicates that you are currently viewing the recorded video file.

Name	Function
(5) Playback Control Buttons	**Begin:** Move at the beginning of the recorded video file. **Previous:** Go back to the previous frame. **Slower:** Play the recorded video file at the speed of 1/2x, 1/4x, or 1/8x. **Rewind:** Wind back the recorded video file. **Pause:** Briefly stop playing the recorded video file. **Play:** Play the recorded video file. **Faster:** Play the recorded video file at the speed of 2x, 4x, or 8x, 16x or 32x. **Next:** Go to the next frame. **End:** Go to the end of the recorded video file.
(6) Date	Select the date on the calendar and the time from 00 to 23 to where to start playing the recorded video file.

ⓘ The numbers from 00 to 23 represent the time in 24-hour clock. The numbers from 01 to 16 represent the camera ID. The blue colored column indicates that there is a recorded video file on that period of time. While the red colored column indicates on where to start playing the recorded video file.

(7) Preview	Switch to Preview/Advanced mode.
(8) Playback	Switch to Playback mode. This allows you to view the recorded video file.
(9) Status bar	Display the recorded date, time and play speed.
(10) Camera ID	Show the number of cameras that are being viewed. When you are in single screen mode, click the camera ID number to switch and view other camera.
(11) Export	**Snapshot:** Capture and save the screen shot either in *.jpg or *.bmp format.
(12) Full screen	View in Playback-compact mode. To return, press the right button of the mouse or **ESC** on the keyboard. When you switch to full screen in multiple-screen mode, **Left** click to toggle to only display one of the video in the multiple-screen mode or all.
(13) Event Log	Show the record of activities that take place in the system
(14) Audio	Enable/disable volume
(15) De-interlace	To enhance the video quality. Set the de-interlace mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.

7.4.3 Familiarizing the Buttons in Download and Playback

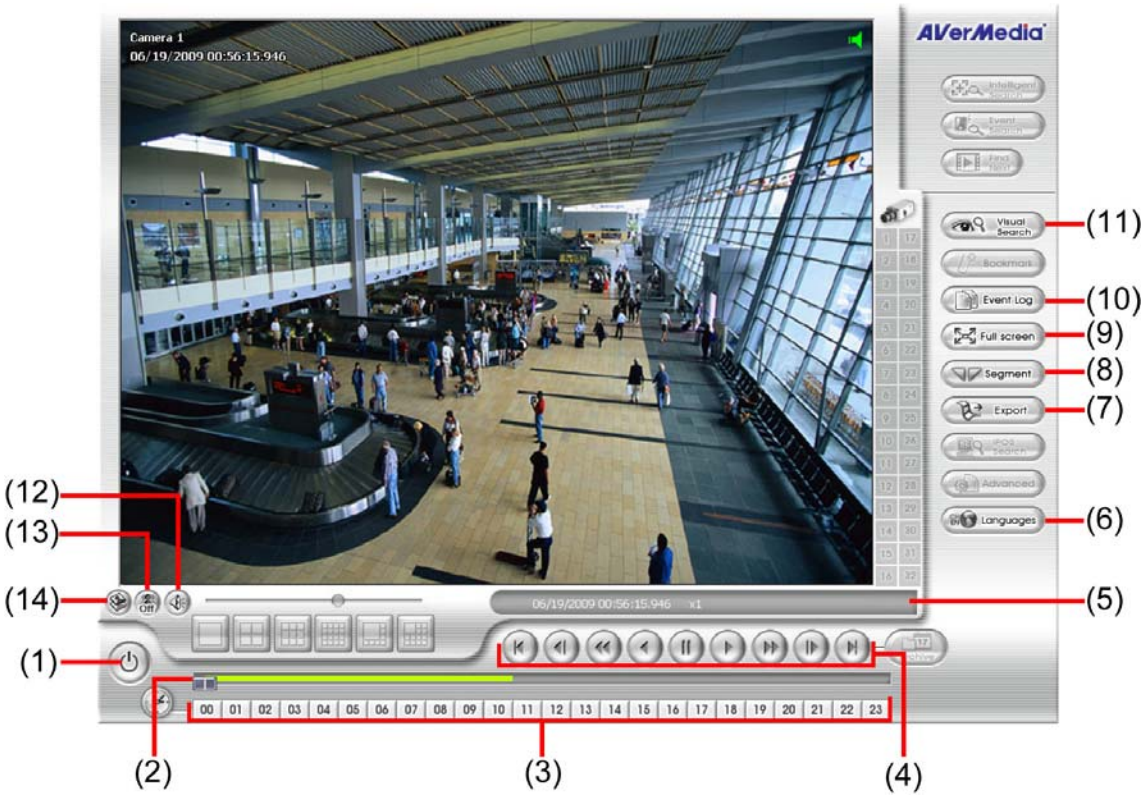

Name	Function
(1) Exit	To close the application.
(2) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track.
(3) Hour Buttons	Select and click to playback the recorded video file on the specific time frame.
	The Hour buttons represent the time in 24-hour clock. The blue bar on top of the hour button indicates that there is a recorded video file on that period of time. While the red bar indicates that you are currently viewing the recorded video file.
(4) Playback Control Buttons	**Begin:** Move at the beginning of the recorded video file. **Previous:** Go back to the previous frame. **Slower:** Play the recorded video file at the speed of 1/2x, 1/4x, or 1/8x. **Rewind:** Wind back the recorded video file. **Pause:** Briefly stop playing the recorded video file. **Play:** Play the recorded video file. **Faster:** Play the recorded video file at the speed of 2x, 4x, or 8x, 16x or 32x. **Next:** Go to the next frame. **End:** Go to the end of the recorded video file.
(5) Status bar	Display the recorded date, time and play speed.
(6) Language	Customize the system to display the tool tips and dialogs based on the selected language. By default the language is in English.
(7) Export	Export includes Snapshot, Print, and Output Video Clip function. ■ **Snapshot:** Capture and save the screen shot either in *.jpg or *.bmp format. ■ **Print:** Print the screen shot. ■ **Output Video Clip:** Save the segmented file in *.mpg, *.avi, or *.dvr format (see also Chapter 7.4.1.1).
(8) Segment	Keep a portion of the recorded video you want (see also Chapter 7.4.1.1).
(9) Full screen	View in Playback-compact mode. To return, press the right button of the mouse or **ESC** on the keyboard. When you switch to full screen in multiple-screen mode, **Left** click to toggle to only display one of the video in the multiple-screen mode or all.

Name	Function
(10) Event Log	Show the record of activities that take place in the system
(11) Visual Search	Search from a specific camera by Date, Hour, Minute, 10 Seconds and Second. (See also Chapter 3.6.2)
(12) Audio	Enable/disable volume
(13) De-interlace	To enhance the video quality. Set the de-interlace mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.
(14) Watermark	To verify the playback video has not been modified To verify the playback video doesn't been modified. Click to check the video. Watermark verification windows will show up as following:

Chapter 8 Using HandyViewer to Access DVR server

Users can use a mobile phone to access the DVR through Internet. Make sure your mobile phone support IE browser and is connected to the internet. To access the DVR server, open IE browser and enter **http://enter server IP or domain name here/mobile.** You can see the latest screen shot. Click **<<** **>>** to change the channel or camera and **Refresh** to reload new screen shot.

8.1 Using PDAViewer to Access DVR Server

Users can also use a PDA to access the DVR through Internet. Make sure your PDA support IE browser and is connected to the internet. To use this feature, you need to install the PDA Viewer software either thru ActiveSync connection or download it from the internet. Please check if your PDA meets the 2 requirements below.

OS: MS Windows CE 4.0, PocketPC 2002/2003, Mobile 5 PDA version
CPU: ARM architecture

8.1.1 To install PDAViewer thru ActiveSync

1. Connect your PDA to your PC. Place the CD into the CD-ROM drive then click Install PDAViewer. And follow the on screen instructions.

2. Click **Next** to continue.

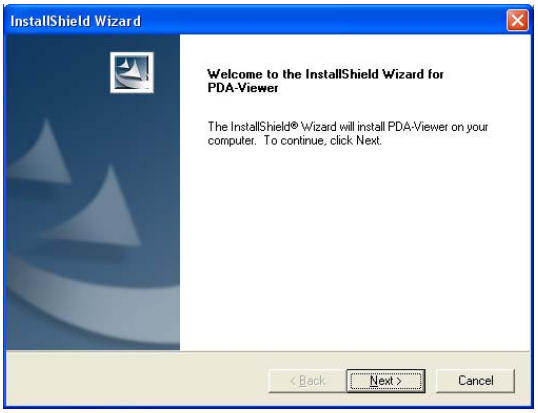
InstallShield Wizard
Welcome to the InstallShield Wizard for PDA-Viewer
The InstallShield® Wizard will install PDA-Viewer on your computer. To continue, click Next.
< Back
Next >
Cancel

3. Read the license agreement and click **Yes** to accept all the terms. The system will then automatically install the application.

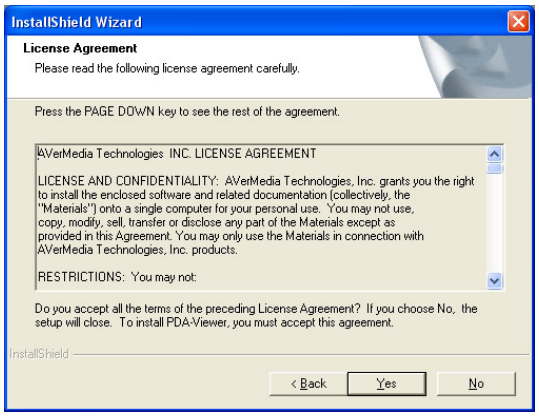
InstallShield Wizard
License Agreement
Please read the following license agreement carefully.
Press the PAGE DOWN key to see the rest of the agreement.
AVerMedia Technologies INC. LICENSE AGREEMENT
LICENSE AND CONFIDENTIALITY: AVerMedia Technologies, Inc. grants you the right to install the enclosed software and related documentation (collectively, the "Materials") onto a single computer for your personal use. You may not use, copy, modify, sell, transfer or disclose any part of the Materials except as provided in this Agreement. You may only use the Materials in connection with AVerMedia Technologies, Inc. products.
RESTRICTIONS: You may not:
Do you accept all the terms of the preceding License Agreement? If you choose No, the setup will close. To install PDA-Viewer, you must accept this agreement.
InstallShield
< Back
Yes
No

4. When you are prompted, click **Yes** to install the application using the default directory.

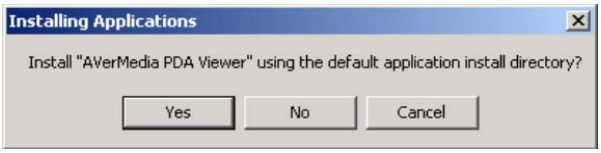

5. When done, click **OK**.

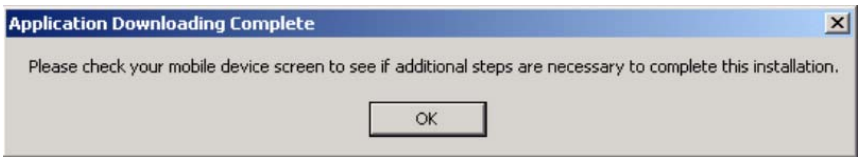
Application Downloading Complete
Please check your mobile device screen to see if additional steps are necessary to complete this installation.
OK

8.1.2 To install PDAViewer from the Internet

Make sure you are connected to the internet.

1. Open the web browser and enter the server IP. Then click the hyperlink **Download PDAViewer**.

2. When the Download dialog box appears, enable **Open file after download** and click **Yes**.

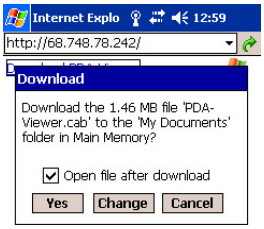

3. After the installation, the PDAViewer icon will appear in the Programs list.

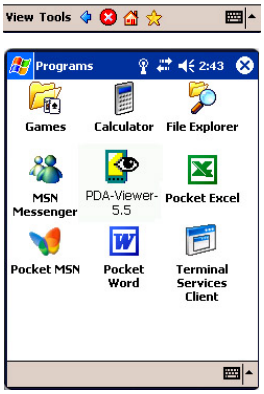

8.1.3 To Use the PDAViewer

1. Run the **PDAViewer** in the Programs.
2. Familiarizing the PDAViewer buttons.

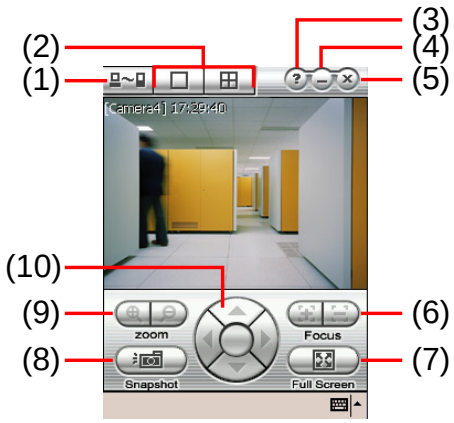

Name	Function
(1) Connect	Hook up to the DVR server. Make sure you are connected to internet. When the iView screen appears, click Add to add DVR server. 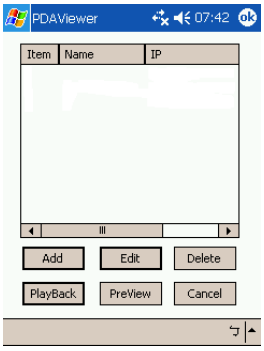 Enter the server IP, port, user ID, password and select the connection type. Then, click **OK**. 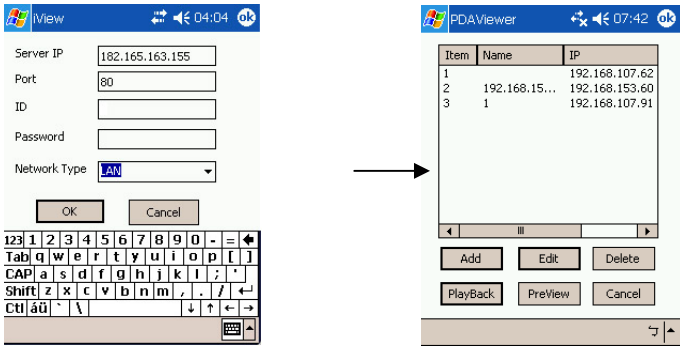 User can playback the recorded video from remote DVR server in PDAViewer.(see also Chapter 8.1.4)
(2) Split Screen Mode	Select between 2 screen display types. It also allows you to switch and view different camera number or channels.
(3) About	Display the PDAViewer software version.
(4) Minimize	Reduce the size to taskbar.
(5) Exit	Close the PDAViewer.
(6) Focus	Adjust the focus of PTZ camera to produce clear image.
(7) Full Screen	Use the entire screen to only display the video.
(8) Snapshot	Capture and save the screen shot in *.bmp format.
(9) Zoom	Zoom in and out the PTZ camera image.
(10) Direction buttons	Adjust and position the focal point of the PTZ camera.

3. To change the video quality, enable/disable audio, and select to display different camera, tap on the video screen longer the pop up menu will appear.

8.1.4 To Playback in PDAViewer

1. Run the **PDAViewer** in the Programs.
2. Hook up to the DVR server.
3. Click **Connect** icon and select the DVR server
4. Click **Playback** to enter playback option screen
5. Select the **camera**, **data**, and **time**
6. Click **Playback** to start playing the recorded video

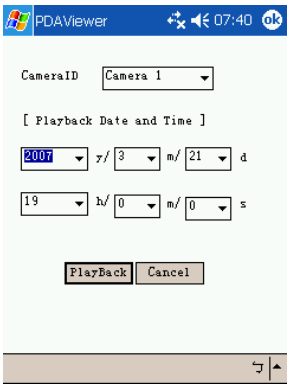

7. While playback, user can view and change status of I/O devices
8. On the playback screen, tap on video screen longer the pop up menu will appear
9. Select the **Remote IO**

10. The sensor and relay devices will list as below:

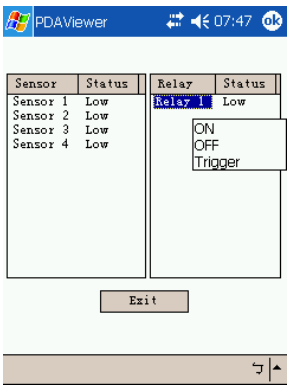

11. User can change the relay status. Select the relay and tap on video screen longer the pop up menu will appear, and then, select the status (ON, OFF, Tigger)

8.2 Using JavaViewer to Access DVR Server

Using the mobile phone within Symbian Smart Phone OS to access the DVR through Internet. Make sure your mobile phone supports Symbian Smart Phone OS and can be connected to the internet. To use this feature, you need to install the JAVA Viewer program that it can be downloading it from the DVR server through the internet.

8.2.1 To install JAVAViewer from the DVR Server

1. Open the web browser and enter the DVR server IP (http://DVR server IP: port/JAVA-Viewer.html). Then click **Connect**.
2. When the Download screen appears, select **JAVA-Viewer.jad** and download it to your mobile phone.
3. After the installation, the JAVAViewer will be in your mobile phone system. To find the JAVAViewer program where is located, please refer to your mobile phone user's manual.

8.2.2 To Use the JAVAViewer

1. Run the JAVAViewer program.

2. Enter the DVR IP address, port number, user ID, and password. Please refer to your DVR server setting for that information.

3. And then, select the Connect to connect to DVR server.

4. Click **Yes** to accept the data from DVR server.

5. When connection is success, you will see the camera video on the screen.

6. To switch to different camera view, select menu and select the channel.

7. The JAVAViewer support PTZ control function, you can refer to **Help** file for detail function control key. Select **menu** and go the way down to select the **Help** file.

Chapter 9 Web Tools

The bundled Web Tools includes Dispatch Server , Remote Backup, and Remote Setup program. To install Web Tools, place the CD into the CD-ROM drive then click **Install Web Tools**.

9.1 Dispatch Server

Dispatch is designed to reduce the network traffic of the DVR server. Instead of connecting directly to the DVR server, the client can connect to the computer that is connected to the DVR server using the Dispatch program.

9.1.1 To Run Dispatch program:

1. Make sure you are connected to the internet.
2. Click **Start**>**Programs**>**DSS**>**Tool**>**Dispatch**.
3. In the DVR Server section, enter the DVR server IP, port, user ID and password. You can also select to display the language you prefer.
4. **Auto connect when start:** Enable to automatically connect the dispatch server when start up
5. **3GPP Service**
6. Enable to allow user using 3GPP service to receive video stream from Dispatch server. The **Service Port** must same as RTSP port of 3GPP on DVR server.
7. In the **Dispatch Service** section, if you have installed more than one network card, select the Service IP number.
8. In the **Dynamic DNS Configuration** section, enter the DNS server Name and Password. The DNS server can be the remote storage server for sharing the DVR system loading.
9. Click **START** to connect.

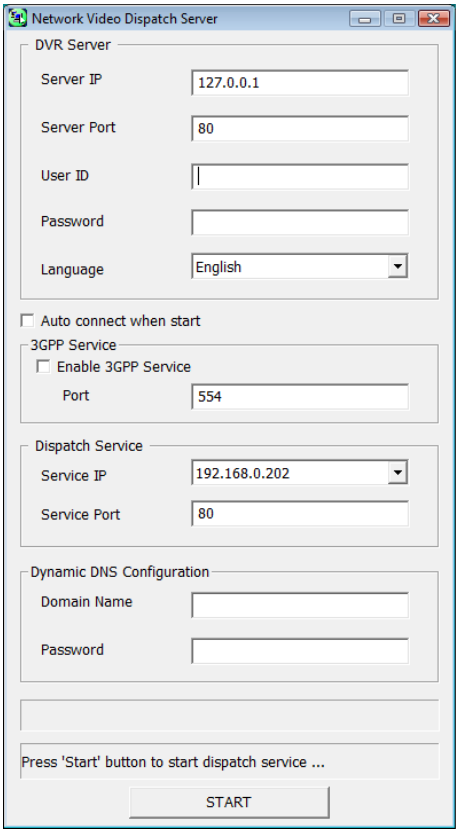

9.2 Remote Setup

Remote Setup is a tool for configuring DVR server from remote site. To install Remote Setup application, insert the Installation CD into CD-ROM drive and click **Web Tools**. After installation, click to start the Remote Setup application.

9.2.1 To Add DVR server

User need to add a DVR server and make connection in order to setup remote DVR server.

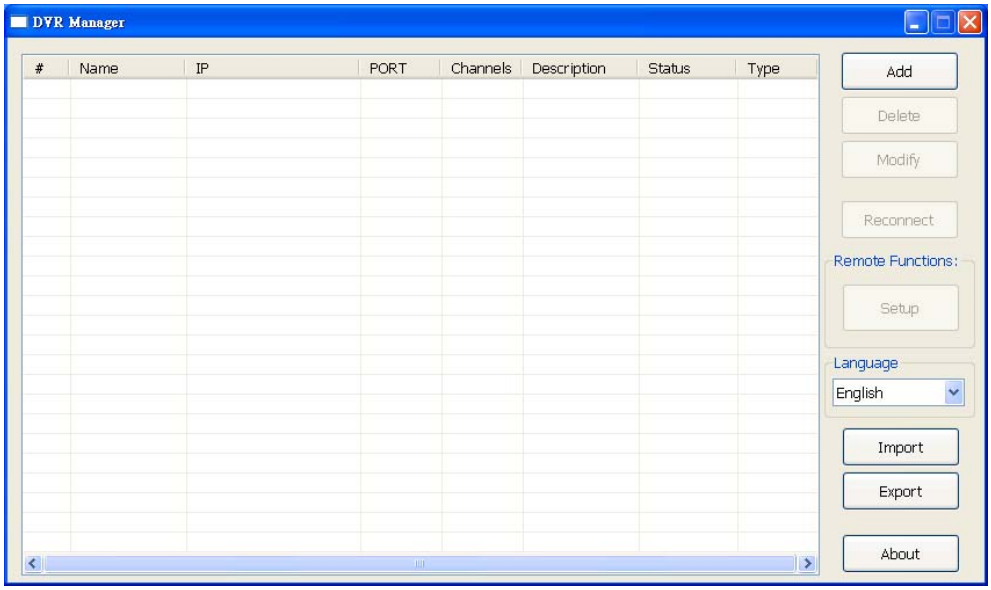

1. Click **Add**
2. In Edit DVR windows, fill in the following items:
   - **Name:** give a name for remote DVR server for easy managing
   - **IP:** fill in remote DVR server's IP address
   - **Port:** the port use to connect to remote DVR server. The port number is same the Webviewer port on the remote DVR server. The default is 80.
   - **User ID:** fill in the remote DVR server's login account
   - **Password:** fill in the remote DVR server's login password
   - **Description:** fill in a short description for the remote DVR server

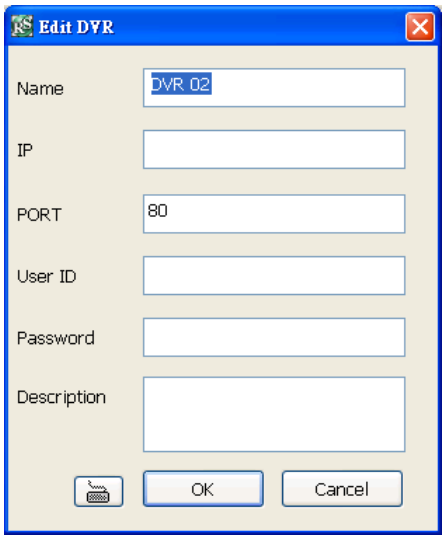

3. Click **OK** to complete adding remote DVR server.
4. The added DVR server will be listed and auto connects to DVR server.
5. Once the connecting is success, user can start to configure DVR server.
6. When connection is lost, click **Reconnect** to connect again.
7. To modify or delete the added DVR server, select the DVR server from listing and click **Modify** to change the setting and click **Delete** to remove the DVR server.
8. User also can import the setting by clicking **Import** button. To save the setting to local hard disk, click **Export** button.

9.2.2 To Setup Remote System Setting

The setting here applies to Remote DVR only.

9.2.2.1 System Setting

In the System Setting windows, click **Update** to accept the new settings, click **Exit** to exit without saving, and click **Default** to revert back to original factory setting.

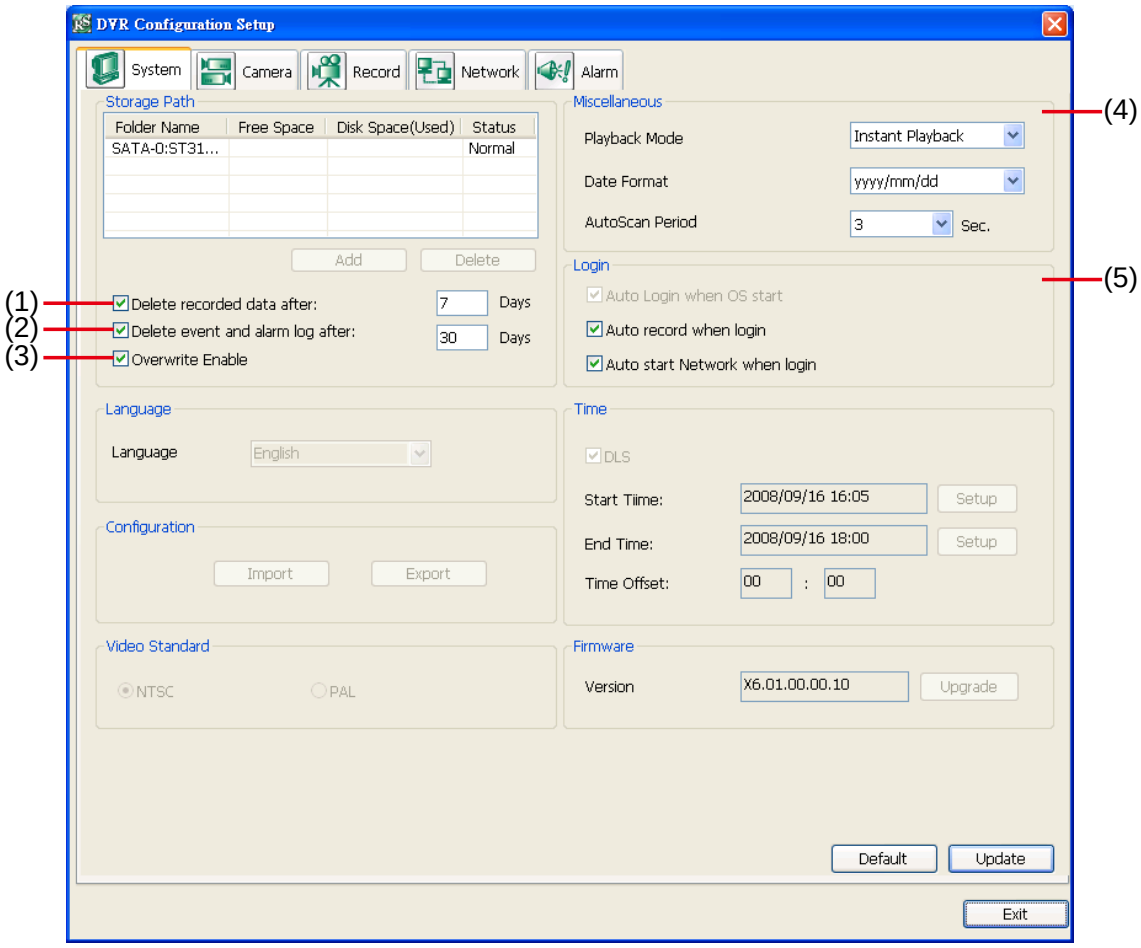

(1) Delete recorded data after

If you want the system to automatically erase the data after a certain days, enable the **Delete recorded data after** check box and enter the numbers of days in **Days** text box.

(2) Delete event and alarm log after

If you want the system to automatically erase the event and alarm log files after a certain days, enable the **Delete event and alarm log after** check box and enter the numbers of days in **Days** text box.

(3) Overwrite Enable

When there is not enough free space to record one hour data, the system automatically replaces the oldest data.

(4) Miscellaneous

Enable the conditions in **Miscellaneous** section you want the system to perform.

- **Playback Mode**

  Select the mode of playback the video.

  Select date and time: Select the date and time which user wants to playback.

  Play the last file: Automatically playback the video from the last hour

  Instant Playback: Automatically playback the video which has just recorded

- **Date Format**

  Select the date format which wants to display in **Select date and time** playback mode

- **Auto Scan Period**

  Set the time gap of the Auto Scan function from 3 to 10 seconds. This automatically switches to the next video in cycle depending on the set time gap.

(5) Login

Enable the conditions in Login section you want the system to automatically carry out.

- **Auto record when login**

  Automatically start video recording when the DVR is executed.

- **Auto start Network when login**

  Automatically connect to network when the DVR is executed.

9.2.2.2 Camera Setting

Select the camera from remote DVR servers to modify settings. In the Camera Setting windows, click **Update** to save and apply the new settings, click **Exit** to exit without saving.

IP Camera Setting

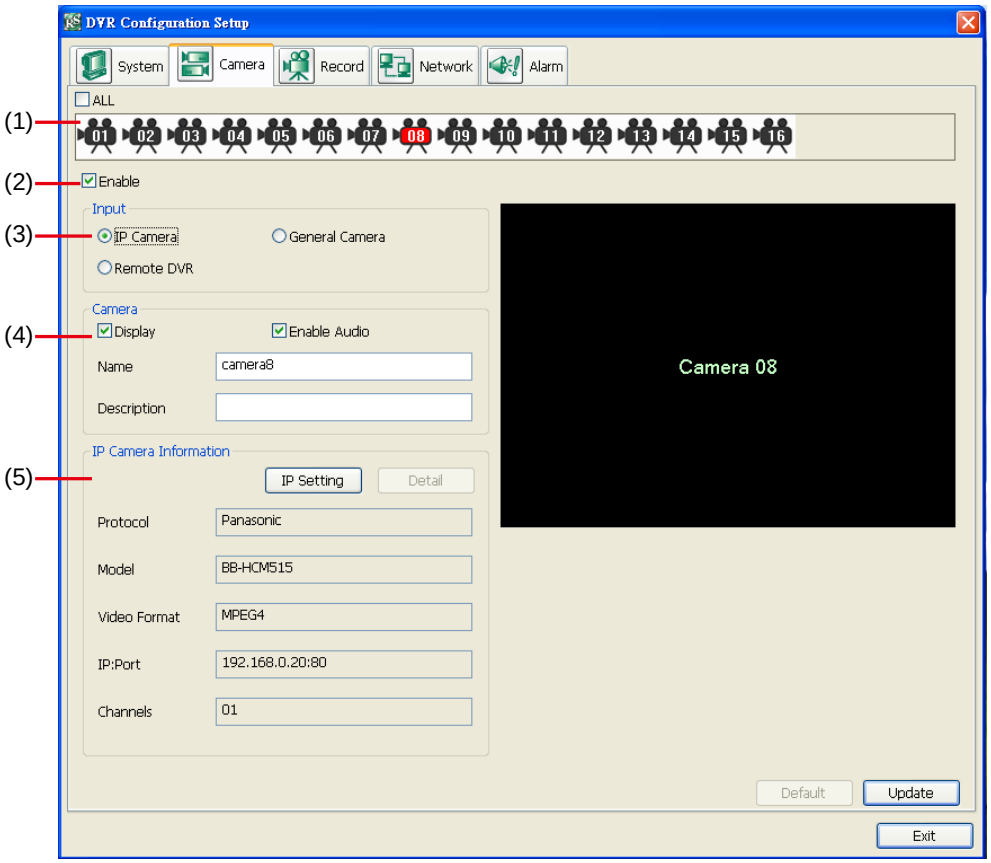

(1) Camera Icons

Select the camera number you want to adjust the video setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, Right click on the camera icon. To select one camera only, Left click on the camera icon. The camera icon turns red when it is selected.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the type of camera as IP camera. For General camera setting, see Analog Camera Setting. To modify camera of remote DVR, see Remote DVR Camera Setting.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment

(5) IP Camera Information

To setup IP camera and display current IP camera information.

- **IP Setting:** Click **IP setting** to add the IP camera.

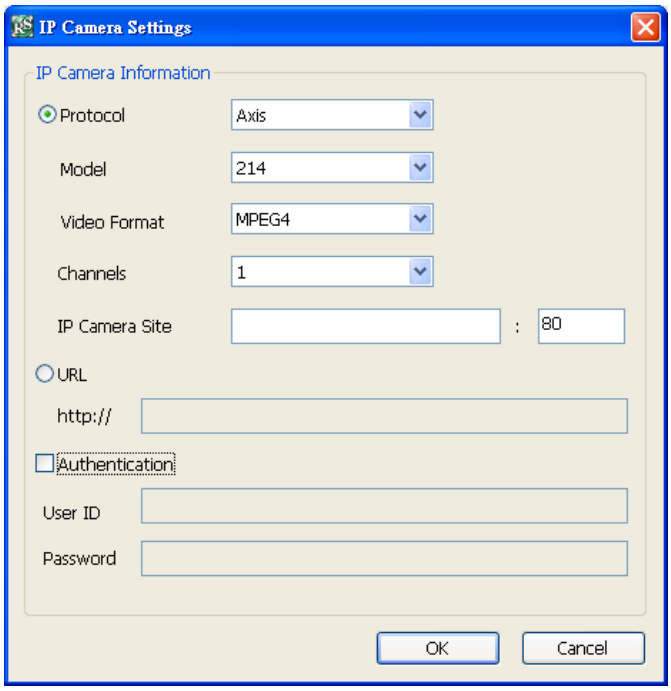

1. Click the radio button of **Protocol** to start setup IP camera.
2. Select the **Protocol**, **Model**, **Video Format**, and **Channel** of the IP camera.
3. Enter IP address and connecting port in **IP Camera Site** column.
4. Also, user can enter URL of IP camera instead of IP address.
5. If the IP camera has authority request, please enable **Authentication** and enter **ID** and **Password**.
6. Click **OK** to connect with the IP camera.

Analog Camera Setting

Select the camera from remote DVR servers to modify settings. In the Camera Setting windows, click **Update** to save and apply the new settings, click **Exit** to exit without saving.

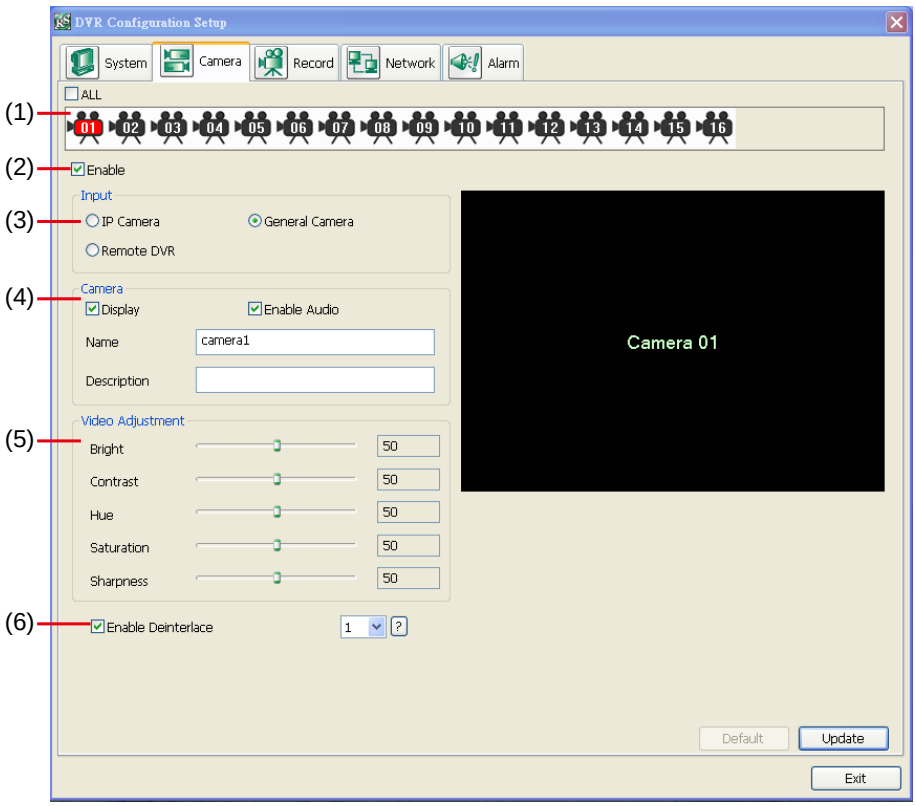

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **General Camera**. For IP camera setting, see IP Camera Setting. To modify camera of remote DVR, see Remote DVR Camera Setting.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment

(5) Video Adjustment

Adjust the Brightness, Contrast, Hue and Saturation of the camera.

(6) Enable Deinterlace

Enhance the video quality. Set the **Enable Deinterlace** mode to #1, if you are capturing motionless picture and #2, if it captures lots of movement.

Remote DVR Camera Setting

Select the camera to modify settings. In the Camera Setting windows, click **Update** to save and apply the new settings, click **Exit** to exit without saving.

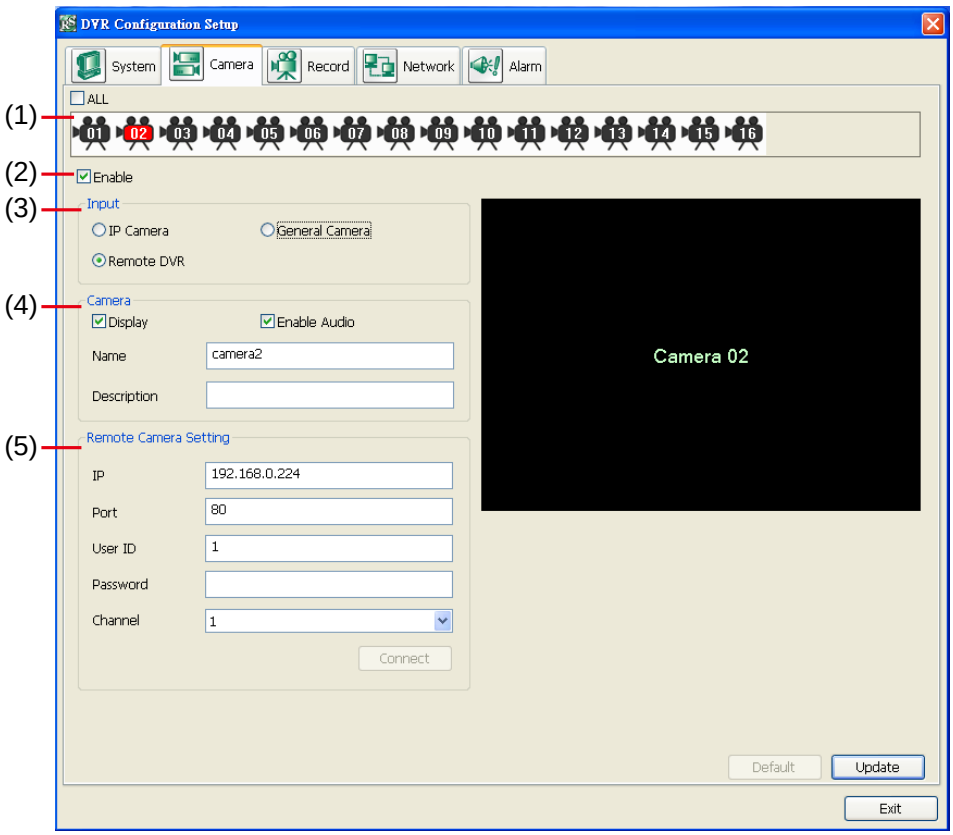

(1) Camera Icons

Select the camera number you want to view. To enable/disable all cameras, click **ALL** check box.

(2) Enable

Set to enable/disable the selected camera. When there is no video source on the camera, we suggest disabling it so that the system won't detect it as video loss error.

(3) Input

Select the camera type as **Remote DVR**. For IP camera setting, see IP Camera Setting. To modify analog camera setting, see Analog Camera Setting.

(4) Camera

- **Display**
  Enable/disable to show the video. Even if the video of the selected camera is hidden you can still record the video and preview it in playback mode.
- **Enable Audio**
  Enable/disable audio of the camera.
- **Name**
  Change the camera name
- **Description**
  Add a short comment
- **IP**
  Enter the IP address of the camera
- **Port**
  The port for connection

- **User ID**
  Enter the user id that for connecting authority
- **Password**
  Enter the password that is for connecting authority
- **Channel**
  Select the channel of connected camera

9.2.2.3 Record Setting

In the Recording setup windows, click **OK** to accept the new settings, click **Exit** to exit without saving, and click **Default** to revert back to original factory setting.

Record Setting of IP Camera

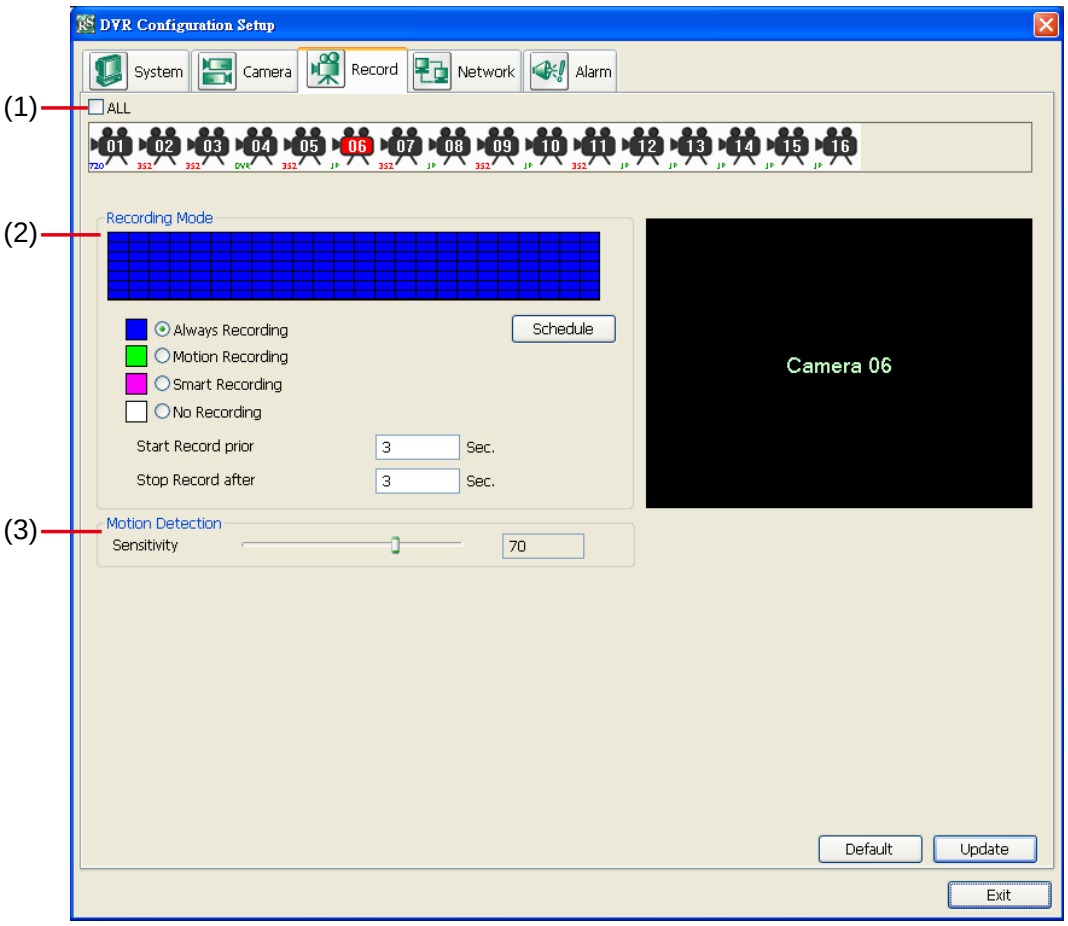

(1) Camera Icons

Select the camera number you want to set the recording setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, **Right click** on the camera icon. To select one camera only, **Left click** on the camera icon. The camera icon turns purple when it is selected.

(2) Recording Mode

The horizontal blocks from 00 to 23 represent the time in 24-hour clock and the vertical block 1 to 7 represent the day in the week block (Sunday to Saturday). To record in full 24 hours and 7 days a week, select the recording mode and click the ⊙ button. If you want to only record at a particular time or day, click **Schedule** button and select the **Recording Mode** , and then click on the time or day blocks. When the system starts recording a red triangle mark would appear at the upper left corner of the screen.

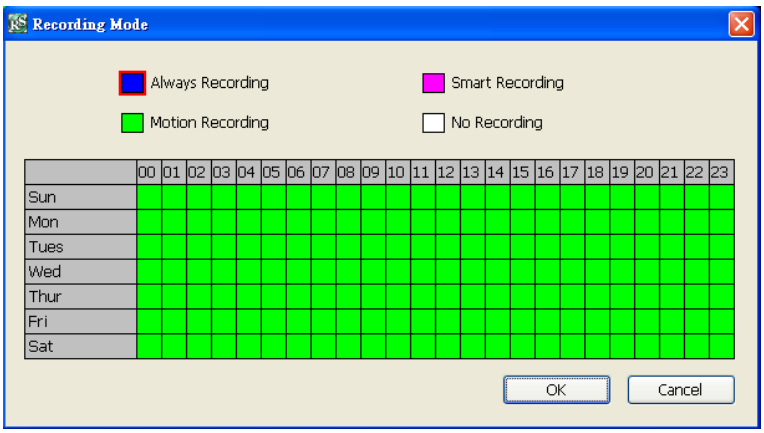

The recording modes are listed below:

- **Always Recording**
  Record the video from the selected camera and save it to the designated storage path
- **Motion Recording**
  Start recording the video from the selected camera only when the system detects movement. Once a motion is detected, the system automatically saves the previous frames and stop based on the **Start Record Prior** and **Stop Record After** settings.
- **Smart Recording**
  Automatically switch to recorded at the maximum frame rate setting once a motion is detected and if there is no motion, it records at the minimum frame rate setting.
- **No Recording**
  The system won't do any recording.

(3) Motion Detection

Adjust the sensitivity of the motion detection. The higher the value, the finer the sensitivity is detected. When it detects a motion, a green triangle mark would appear at the upper left corner of the screen.

Record Setting of Analog Camera

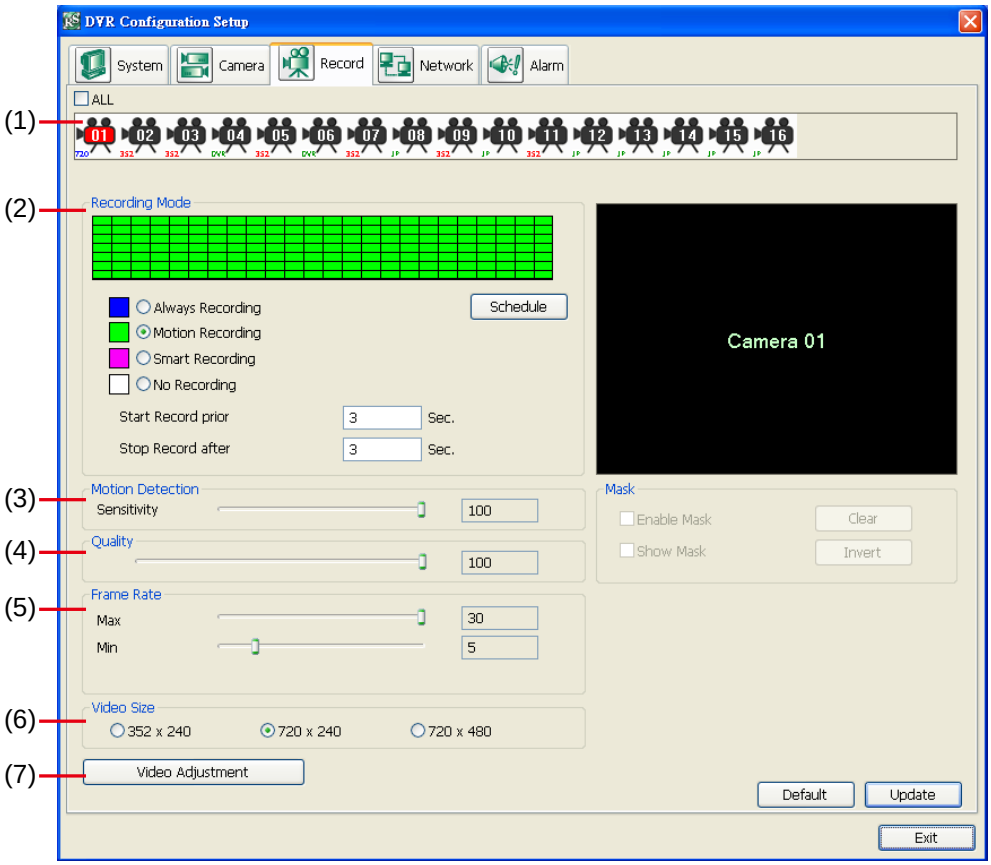

(1) Camera Icons

Select the camera number you want to set the recording setting. To select all the cameras, enable the **ALL** check box. To select more than one camera, **Right click** on the camera icon. To select one camera only, **Left click** on the camera icon. The camera icon turns purple when it is selected.

(2) Recording Mode

The horizontal blocks from 00 to 23 represent the time in 24-hour clock and the vertical block 1 to 7 represent the day in the week block (Sunday to Saturday). To record in full 24 hours and 7 days a week, select the recording mode and click the ⊙ button. If you want to only record at a particular time or day, click **Schedule** button and select the **Recording Mode** , and then click on the time or day blocks. When the system starts recording a red triangle mark would appear at the upper left corner of the screen.

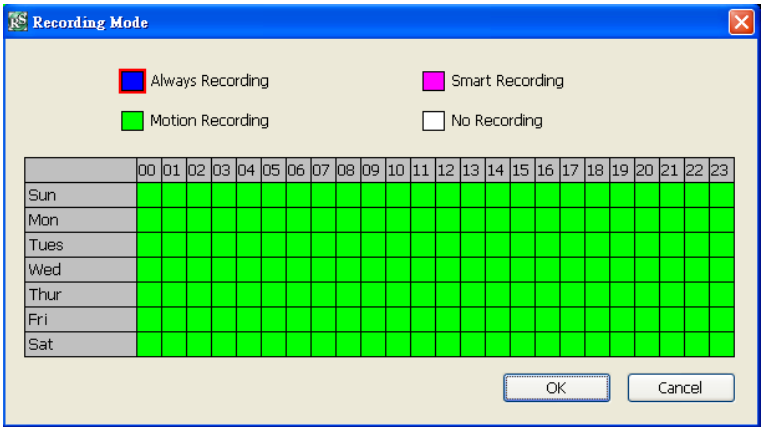

The recording modes are listed below:

- **Always Recording**

  Record the video from the selected camera and save it to the designated storage path

- **Motion Recording**
  Start recording the video from the selected camera only when the system detects movement. Once a motion is detected, the system automatically saves the previous frames and stop based on the **Start Record Prior** and **Stop Record After** settings.
- **Smart Recording**
  Automatically switch to recorded at the maximum frame rate setting once a motion is detected and if there is no motion, it records at the minimum frame rate setting.
- **No Recording**
  The system won't do any recording.

(3) Motion Detection

Adjust the sensitivity of the motion detection. The higher the value, the finer the sensitivity is detected. When it detects a motion, a green triangle mark would appear at the upper left corner of the screen.

(4) Quality

Adjust the video quality. The higher the value, the lower the compression level and uses more hard disk space.

(5) Frame Rate

Set the maximum and minimum number of frames to be recorded during motion and motionless state. The frame rate ranges from 01 to 30 for NTSC and 01 to 25 for PAL. The higher the frame rate, it uses more hard disk space.

Always recoding frame rate is depending on max frame rate value.

(6) Video Size

Select the size of the video and click the ⊙ button. The higher the size, the larger the file it create.

(7) Individual Adjustment

Each camera can adjust video size and frame rate individually. Click **Default** will back to the factory default value. The frame rate usage is shown in **Used** and **Unused** columns by CIF mode.

Only analog camera can adjust video size and frame rate by channel.

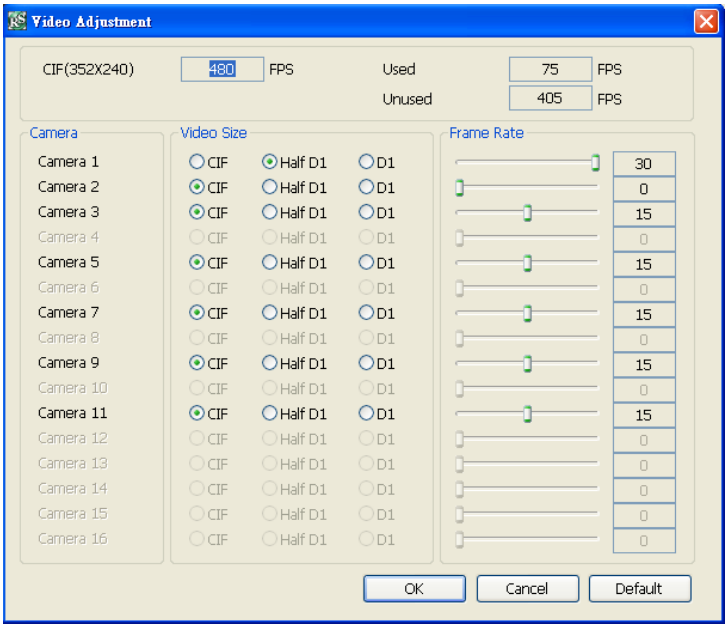

9.2.2.4 Network Setting

In the Network Setting dialog box, click **Update** to accept the new settings, click **Exit** to exit without saving, and click **Default** to revert back to original factory setting. For the network service ports that use by DVR server, please see Appendix A.

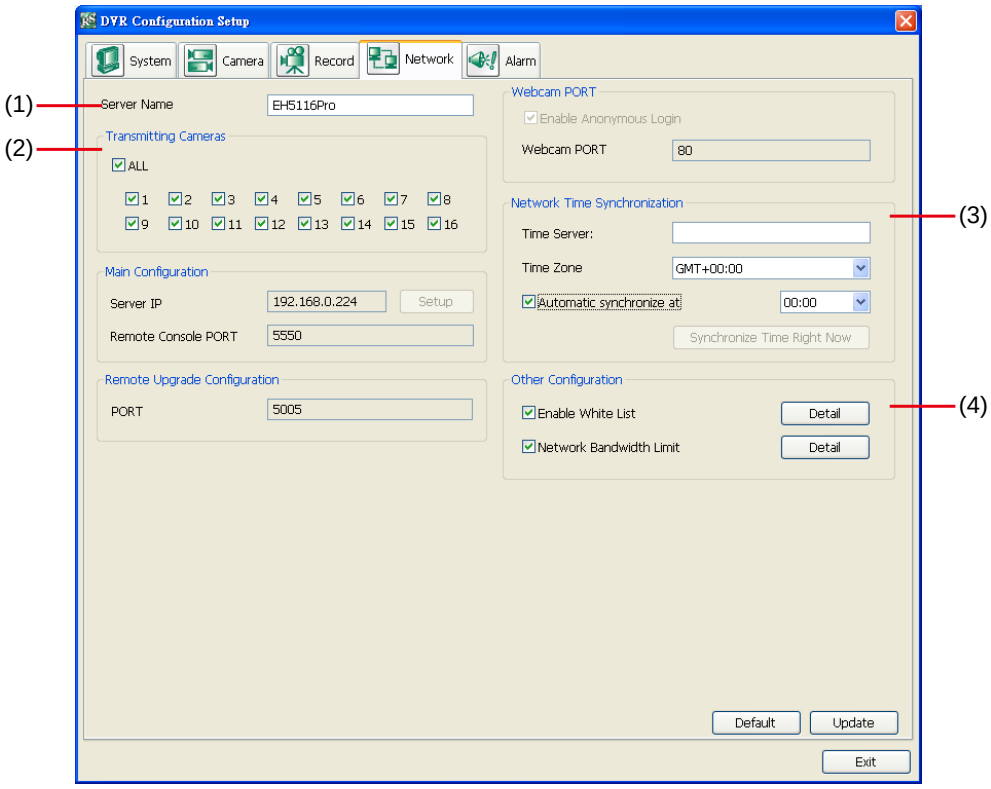

(1) Server Name

Assign a name for the DVR unit. Alphabet letters and numbers only.

(2) Transmitting Cameras

Select and click on the camera number in the Transmitting Camera section you want to make it accessible via internet using WebViewer, Remote Console, PDA Viewer and JAVAViewer (still image). To select all the cameras, enable the **ALL** check box.

(3) Network Time Synchronization

Adjust the DVR system time same as network time server. Fill in the **Time Server** IP address or domain name. Select the **Time Zone** that DVR is located. And then, mark the **Automatic Synchronize** time to set automatic synchronize time on a daily basis.

(4) Other Configuration

- **Enable White List**

  An access permit list for the remote accessing of DVR server. Enter the IP address and click **Add**. Or, enter a range of IP address and click **Add**. To delete the IP from the list, select the IP and click **Delete** button. To reset the input, click **Clear** button.

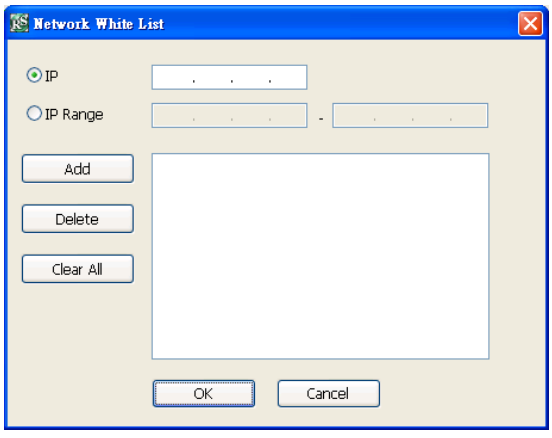

- **Network Bandwidth Limit**

  By Channel: Set the network bandwidth by each channel.

  All: Set the total network bandwidth

consumption limit.

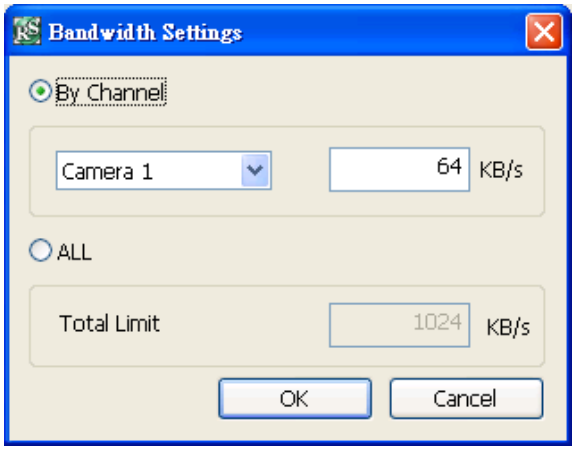

9.2.2.5 Alarm Setting

In the Alarm Setting dialog box, click **Add** to insert and set new alarm setting, click **Delete** to remove the selected alarm setting, click **Update** to save the setting, **Exit** to exit without saving, and **Default** to revert back to original factory setting.

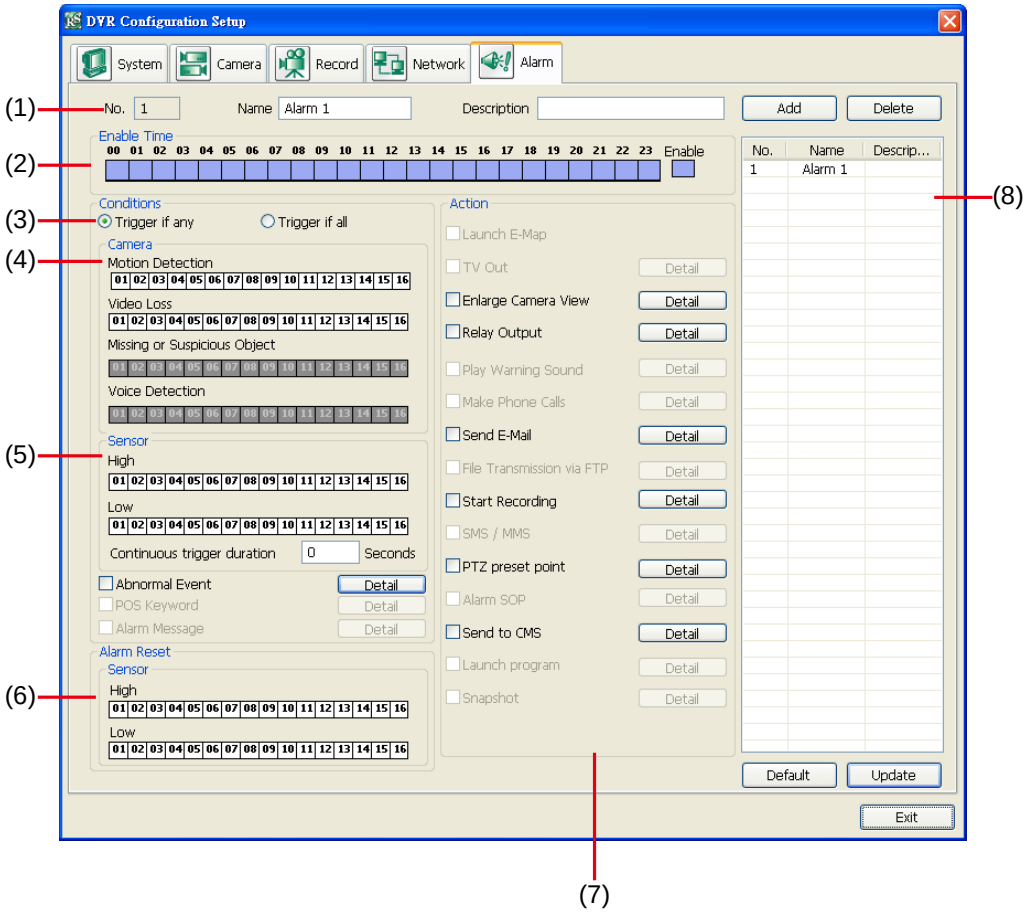

1. Click **Add** to insert and set a new alarm setting. Click the items in the **(8) Alarm Setting List** if you want to modify the alarm setting.
2. In **(1) No./Name/Description** enter alarm name and description. Alarm **No.** will be created by DVR system.
3. In **(2) Enable Time**, the number from 00 to 23 represent the time in 24-hour clock. Select the time and click the block you want to activate or deactivate the alarm function. When it is deactivated the color of the block turns white.
4. In **(3) Conditions**, you can set "**Trigger if any**" to activate if it falls to one of the conditions or "**Trigger if all**" to activate if it falls to all conditions.
5. In **(4) Camera** section, select and click on the camera number (01 to 16) in **Motion Detected** and **Video Loss** to set the condition for the system to alarm.
6. In **(5) Sensor**, select and click on the sensor number to set the condition for the system to alarm. If the sensor normal status is high, set the sensor condition to low.
   - Enable/disable the **Abnormal Event** check box, to set the condition of the event for system to alarm.

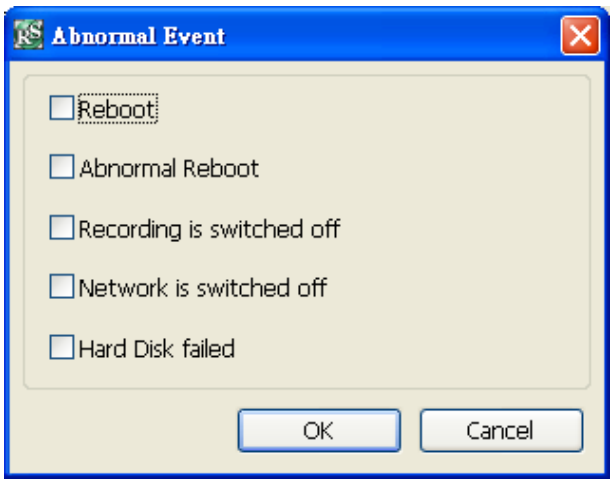

- **Reboot:** when the DVR system reboot without abnormal condition, the system will send out the alarm message.
- **Abnormal Reboot:** when the DVR system reboot in irregular condition, the system will send out the alarm message.
- **Recording is switched off:** when the recording has been stopped, the system will send out the alarm message.
- **Network is switched off:** when the network connection of DVR system is lost, the system will send out the alarm message.
- **Hard Disk failed:** when the hard disk doesn't work normally, the system will send out the alarm message.

- **Continue trigger duration:** Set a time period that when sensor has been trigger and stay in the same status for that period, then the alarm will be sent out.

7. In **(6) Alarm Reset**, click the camera number to set the reset condition of alarm. Once alarm is reset, all alarm action will stop at the moment. If the sensor normal status is high, set the alarm reset condition to low.
8. In **(7) Action**, you may now set the alarm action for the system to perform when the alarm condition is activated.

- **Enlarge Camera View**

  Switch to only display video in Preview mode from where the alarm is activated.

  a. Select the camera from drop down list to specify which camera video to be enlarged on screen when the alarm is triggered.

  b. **Retrieve time:** set the waiting duration before system switching back to original Preview mode. If the retrieve time is un-mark, the alarm video will keep enlarging until user switch back to Preview mode manually. The retrieve time range is 0~ 600 seconds.

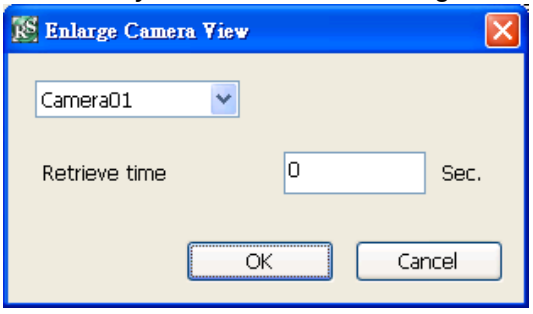

- **Relay Output**

  Set to enable/disable the relay operation when the alarm is activated and to extend additional time in second before it stops the relay operation.

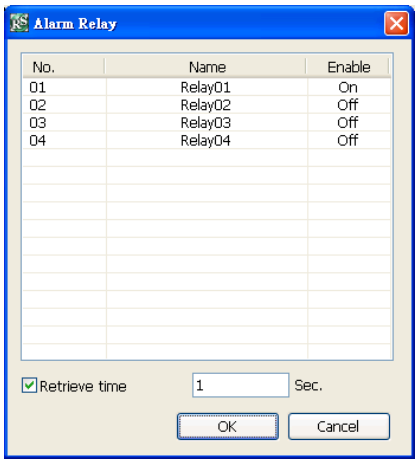

  1. Beside the Relay Output check box, click **Detail**.
  2. In the Alarm Relay dialog box, select from the available relay list and in the ON column, set to enable/disable the relay operation when the alarm is activated.
  3. In the Retrieve time check box, you may enable/disable to extend the relay operation time and set the duration in second.
  4. Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

- **Send E-mail**

  Send an electronic text message. Beside the Send Email check box, click **Detail**.

  In the E-mail Setting dialog box, click **OK** to exit and save the setting and **Cancel** to exit without saving the setting.

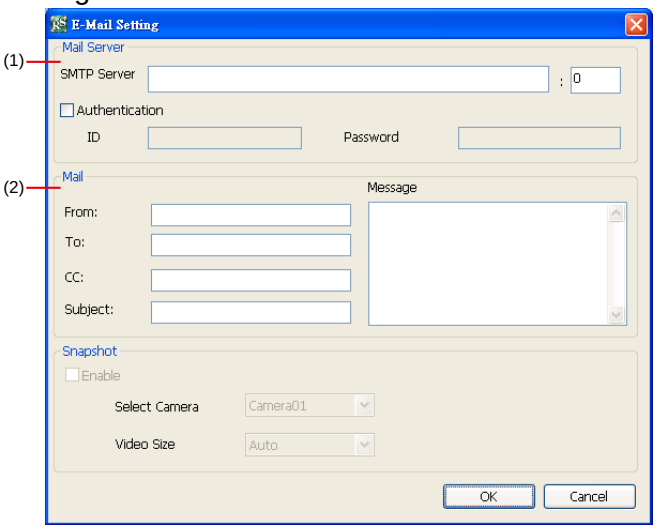

(1) Mail Server

Enter the **SMTP Server** and **port**. If your e-mail system requires user identification, enable **Authentication** check box and enter **ID** and **Password**.

(2) Mail

Fill the mailing information.

From: Enter the sender e-mail address.

To and CC: Enter the recipient email address and separate it with comma or a semicolon (;).

Subject: Enter the message title.

Message: Type the message.

- **Start Recording**

  Record the video from the selected camera.

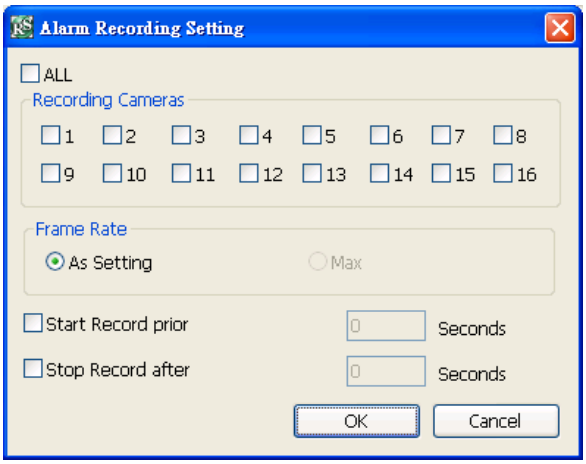

  1. Beside the Start Recording check box, click **Detail**.
  2. In the Alarm Recording Setting dialog box, select the camera to enable/disable video recording. Enable **All** to select all cameras.
  3. In the Frame Rate selection, select **As Setting** to record the number of frames based on the Recording Setting.
  4. In the **Start Record prior** text box, mark and set the number in second for the program to begin recording after the alarm has been trigger. The time range is 1~10 seconds.
  5. In the **Stop Record after** text box, mark and set the number in second for the program to continue recording after the alarm has ended. The time range is 1~999 seconds. If user doesn't mark and set the time, the alarm recording will continue recording until alarm is reset.
  6. Click **OK** to accept the new settings and **Cancel** to exit without saving.

- **PTZ preset point**

  Position the PTZ camera based on the preset point setting. Beside the PTZ preset point check box, click **Detail**. In the Trigger PTZ Preset Setting dialog box, select the PTZ camera number then select the **Enable** check box. Select the position of the PTZ camera when the alarm is activated and ended. For the PTZ camera end point, user can also select on preset position or **Auto Pan** between preset position groups.

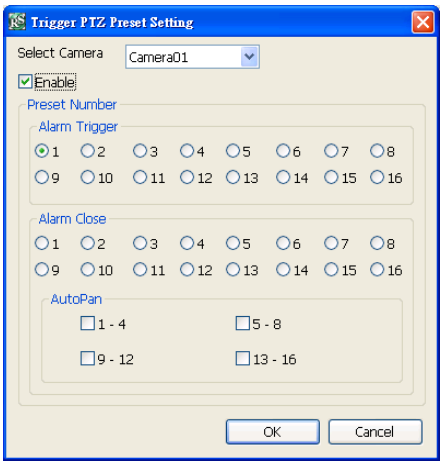

- **Send to CMS (Central Management System)**

  Enable/disable the selected camera to send video to CMS when the alarm is activated. Beside the Send to CMS check box, click **Detail**. In the CMS Setting, select the camera to enable/disable sending the video to CMS. Enable **All** to select all cameras. Then, click **OK** to accept the new settings and **Cancel** to exit without saving.

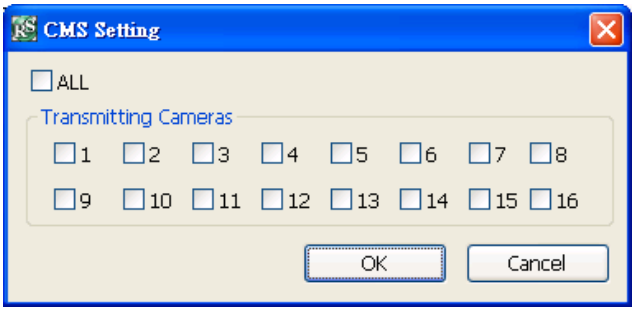

9.3 Remote Backup

Remote Backup is purely for backing up the *.dvr file from the DVR sever. You can select between Auto Backup and Manual Backup. Auto Backup continuously archives one hour of the recorded data at a time, starting from the specified date. As for Manual Backup, it only archives the recorded data of selected date.

To back up the data, you must have at least 2G hard disk space.

9.3.1 To back up the recoded data from the DVR server:

1. Make sure you are connected to the internet.
2. Click **Start** >> **Program** >> **DSS** >> **Tool** >> **Remote Backup**
3. To add the DVR server, click **Add**

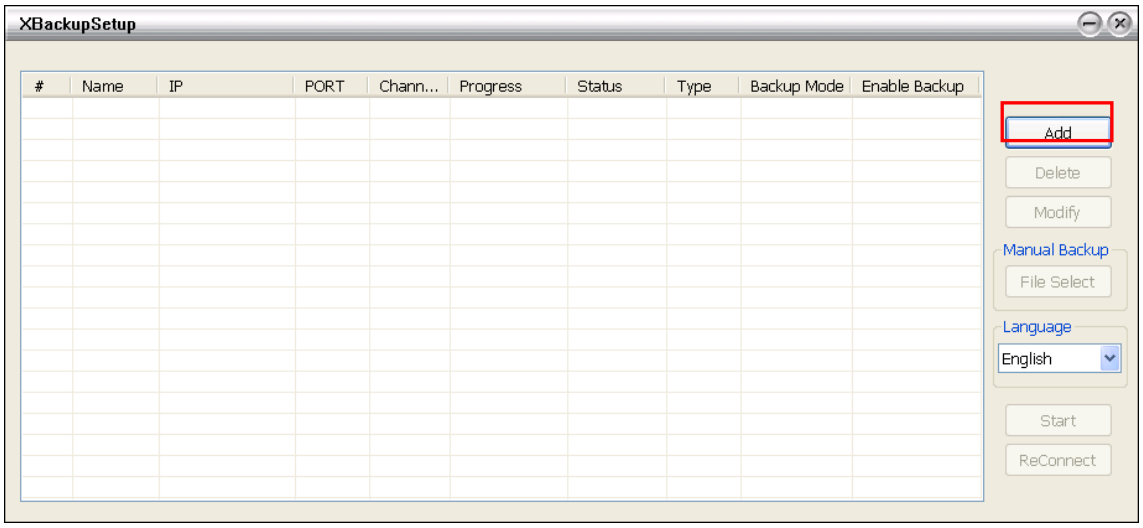

4. In the Add New DVR windows, enter the Name, IP, user ID, and password.

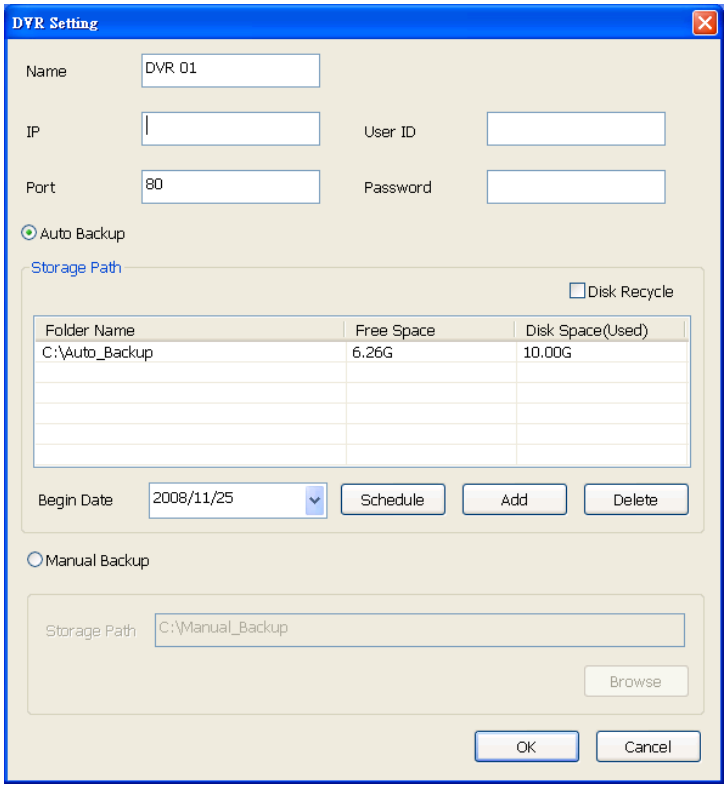

5. Select the Backup mode:

   Auto Backup mode: the backup will automatically execute when the setup is completed

   - In Begin Date drop down calendar, select the date from where to start
   - Click **Add** to set the storage path.
   - Click **Delete** to remove the selected storage path.
   - Click **Schedule** to select/unselect the time you want to backup. The red block turns white when it is unselected.
   - Enable/disable **Disk Recycle** check box, to automatically overwrite the oldest file when there is not enough free space to backup the file.

   Manual Backup mode: the backup progress will start when user press the backup button

   - Click **File Select** to choose the date, time and camera you want to back up.
   - Click **Browse** to set the storage path.

6. Click **OK** to complete the adding DVR server. The added DVR server will display in Remote Backup main windows.

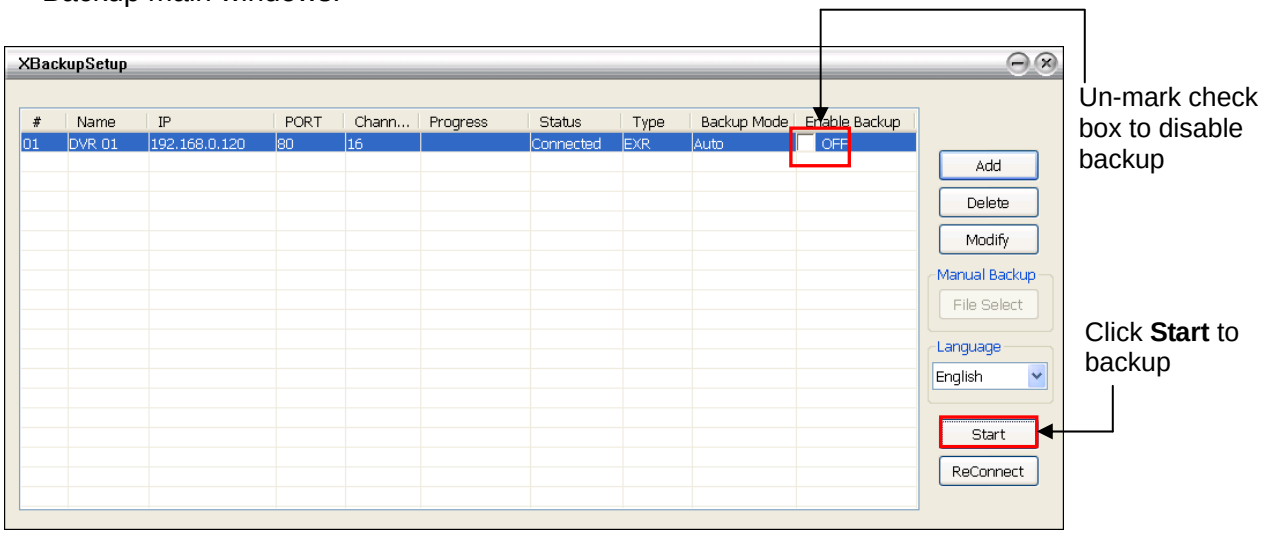

7. Click **Start** to begin backup and click Stop to stop backup progress.

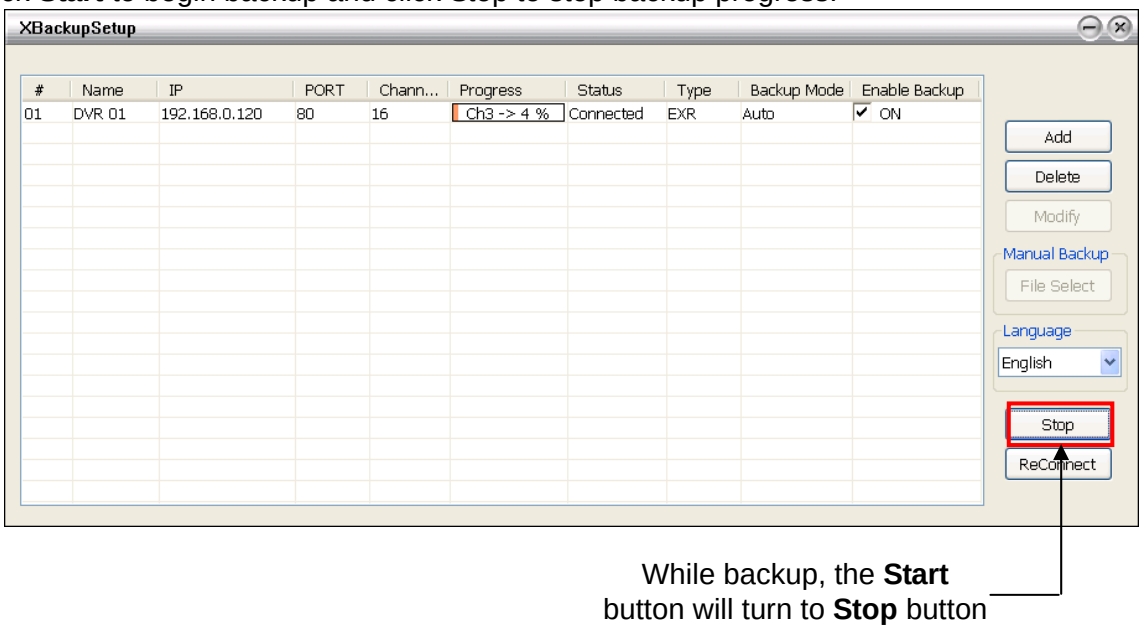

8. For manually backup, click **file select** button and select the DVR to backup.

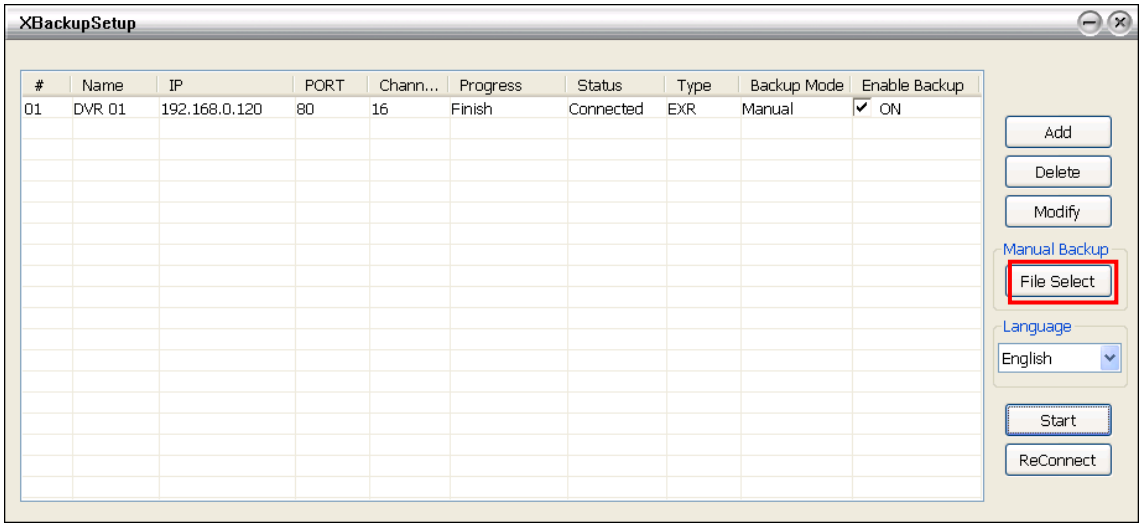

Appendix A Registering Domain Name

DDNS (Dynamic Domain Name Service) is a data query service mainly used on the Internet for translating domain names into Internet addresses. It allows remote clients to intelligently search dynamic servers without any previous enquiring for servers' Internet addresses.

In order to take advantage of this intelligent service, first register your domain name on the following Web site **http://ddns.avers.com.tw**

1. **User Login**

   Browse the website **ddns.avers.com.tw** with Microsoft IE or Netscape Navigator to access the following dialog.

2. First input the MAC address of DVR unit as the CD-Key No. and select the product name. Then click **OK** to login or **Reset** to clear the previous input.

- To know the MAC address of DVR unit, please check the sticker on the back panel of DVR unit.
- Also, user can find the MAC address of DVR unit from the Main Configuration of Network Setting. Please select **SETUP** → **NETWORK** → **Main Configuration**.

3. **User Information**

   Please provide the following user information, **Host Name** (user can choose any name he/she likes except the one violence with other users), **Password**, **E-mail**, **Company**, and **Country**. And then, click **OK** to complete the domain name registration.

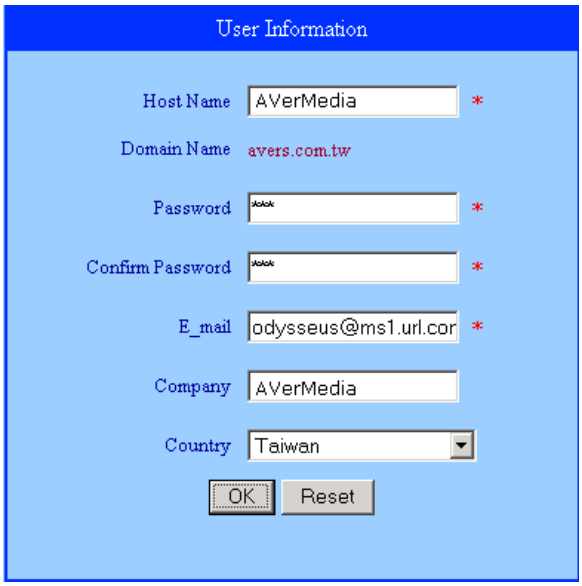

Appendix B Network Service Port

The following table shows the ports that DVR server uses for certain network service.

	Port#	Variable
Remote Console	5550	Y
WebViewer	80	Y
CM3000	80	Y
Firmware Update	5005	Y
DVR DDNS (Upload / Download)	53/1053	N

Appendix C Using Functional Keys

The DVR system provides shortcut keys. The table shows the function keys and descriptions.

Function Keys	Description
Q	Exit System
F1	Display system information
F2	Start recording
F3	Enable network function
F4	Access system settings
F5	Switch to playback mode
F6	Switch to Emap mode
F7	Access PTZ camera control panel
F8	Snapshot
F9	Switch to Full Screen
F11	Switch to AutoScan

WARRANTY NOTICE

LIMITED WARRANTY

AVerMedia INFORMATION, Inc. warrants this product to be free of defects resulting from faulty manufacture or components under the following terms:

WARRANTY LENGTH

Labor is warranted for (1) one year from the date of purchase

Parts are warranted for (1) one year from the date of purchase

Replacement products will be warranted for the remainder of the one year warranty period or (30) thirty days, whichever is longer

WHO IS PROTECTED

This warranty is enforceable only by the first consumer purchaser

WHAT IS AND IS NOT COVERED

Except as specified below, this warranty covers all defects resulting from faulty manufacturing of this product. The following are not covered by the warranty.

1. Any product on which the serial number has been defaced, modified, or removed
2. Damage, deterioration, or malfunction resulting from:

   Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification, or failure to follow instructions included with the product.

   Misapplication of service by someone other than the manufacturer's representative

   Any shipment damages (Claims must be made with carrier)

   Any other cause which does not relate to a product defect
3. Cartons, cases, batteries, cabinets, tapes, or accessories used with product
4. AVerMedia does not warrant that this product will meet your requirements; it is your responsibility to determine the suitability of this product for your purpose

WHAT WE WILL AND WILL NOT PAY FOR

We will pay labor and material expenses for covered items. However, we will not pay for the following:

1. Removal or installation charges
2. Shipping charges
3. Any incidental charges

EXCLUSION OF DAMAGES

THE MANUFACTURER'S SOLE OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT AT OUR OPTION. THE MANUFACTURER SHALL NOT, IN ANY EVENT, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE (INCLUDING, BUT NOT LIMITED TO, DAMAGES RESULTING FROM INTERRUPTION OF SERVICE AND LOSS OF BUSINESS) OR LIABILITY IN TORT RELATING TO THIS PRODUCT OR RESULTING FROM ITS USE OR POSSESSION.

LIMITATIONS OF IMPLIED WARRANTIES

There are no other oral or written warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. Any implied warranties are limited in duration to one year from the date of purchase

STATE LAW AND YOUR WARRANTY

This warranty gives you specific legal rights, and you may also have other rights granted under state law. These rights vary from state to state

CONTACT INFORMATION

Taiwan & International
5F No. 135, Jian Yi Rd., Chung Ho City, Taipei, Taiwan
TEL: 886-2-2226-3630
FAX: 886-2-2226-7241
Web Site: http://www.avermedia.com
http://www.averdigi.com